

TROUBLESHOOTING

Chime does not sound:

- **Check Chime:** Disconnect wire from terminal marked "TRANS". Have someone operate push button at front door while you momentarily touch the "TRANS" wire to terminal marked "FRONT". You will see a small spark if push button, wiring, and transformer are operating properly. Repeat the steps for "REAR" terminal and rear push button. If wiring between transformer and push button(s) check out properly, replace chime.
- **Check Transformer:** Test transformer voltage output with a volt meter. If a volt meter is not available, momentarily touch the two low-voltage terminals with a screwdriver. You will see a small spark if transformer is operating properly. If no spark is evident, replace transformer.
- **Check Push Button(s):** Remove suspected push button from door frame, disconnect wire from terminals and touch bare wires together. If chime operates, push button is defective. Replace push button.