

**Safety Information**









**IMPORTANT SAFETY INSTRUCTIONS**

When using electrical products, basic precautions should always be followed including the following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) This product is for indoor use only. The electrical rating 0.57 A 120 V 60 Hz.
- c) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- d) This seasonal use product is not intended for permanent installation or use.
- e) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- f) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- g) Do not let lamps rest on the supply cord or on any wire.
- h) Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
- i) This is an electric product – not a toy! To avoid risk of fire, burns personal injury and electric shock it should not be played with or placed where small children can reach it.
- j) Do not use this product for other than its intended use.
- k) Do not hang ornaments or other objects from cord, wire, or light string.
- l) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- m) Do not cover the product with cloth, paper or any material not part of the product when in use.
- n) Do not move the tree by pulling the tree tips or tree branches.
- o) Read and follow all instructions that are on the product or provided with the product.
- p) **SAVE THESE INSTRUCTIONS.**

 
**Pre-Assembly**

**Package Contents**

<p>A. Tree top Qty: 1</p> 	<p>B. Tree center Qty: 1</p> 	<p>C. Tree bottom Qty: 1</p> 
<p>D. Stand with an eye bolt Qty: 1</p> 	<p>E. Power cord Qty: 1</p> 	<p>F. Remote control Qty: 1</p> 
<p>G. Latch Qty: 2</p> 	<p>H. Replacement bulb Qty: 8</p> 	

**7.5ft Cassidy Fraser Fir LED Tree**


SKU# 1006215541

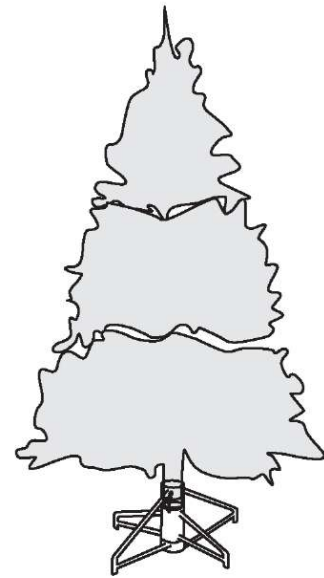

**Assembly**

**Assembling the tree stand**

 - Step 1. Choose a location near a wall outlet.
- Step 2. Open the stand to a 90 degree angle until the hole lines up with the hole on the tube.
- Step 3. Screw an eye bolt into the hole.

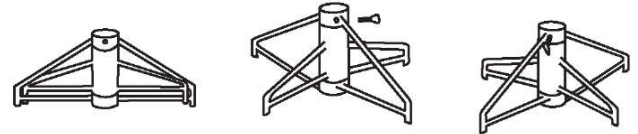


**CAUTION! – ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ASSEMBLING OR DISASSEMBLING.**

**Assembling the tree**

Please remove protective covers from the base of the pole for each tree section before assembling.

 - Step 1. Carefully insert bottom section (C) of tree into tree base and tighten the screw. (See Fig. 1)
- Step 2. Insert the middle section (B) of the tree into the bottom section (C). (See Fig. 2)
- Step 3. Insert the top section (A) into the middle section (B). (See Fig. 3)
- Step 4. Allow branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges. (See Fig. 4)
- Step 5. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem. Repeat pattern for each branch. (See Fig. 5)
- Step 6. Plug the well-connected power cord from the tree section (C) into a proper outlet.

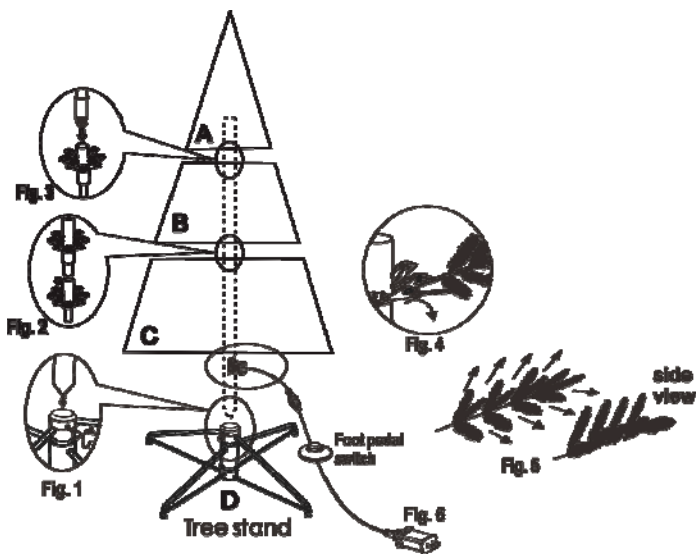

Step 7. Please note this tree comes with a foot pedal switch and a remote control for easy illumination and changing functions. This tree is Color Changing, the 8 lighting options available are:

1. Steady Warm White
2. Flashing Warm White
3. Fade In and Fade Out Warm White
4. Steady Multicolor
5. Flashing Multicolor
6. Fade In and Fade Out Multicolor
7. Sequential Multicolor & Warm White
8. Color Changing

These functions can be changed by pressing the foot pedal switch or using the remote control. Please see the instructions of remote control below.

## Operation

### Turning on the tree

- Step 1. Plug the well-connected power cord from the tree section (C) into a proper outlet.
- Step 2. Press the remote control or foot pedal switch to choose functions.

## Instructions of Remote Control

Please note this tree has a remote control.

Please pull out the insulation tape from the remote control, before starting to use it.



1. Press Fn button, the function below cycle. Press the number key, select from the following corresponding lighting functions:

- Function 1: Steady Warm White
- Function 2: Flashing Warm White
- Function 3: Fade In and Fade Out Warm White
- Function 4: Steady Multicolor
- Function 5: Flashing Multicolor
- Function 6: Fade In and Fade Out Multicolor
- Function 7: Sequential Multicolor & Warm White
- Function 8: Color Changing

There is memory mode on function adjustment.



If the remote control does not work, check whether the battery of the remote control is out of power.

To replace the remote control battery:

1. Replace with a new button cell "CR2025" (3 volt) into the compartment.

 
**CAUTION:** DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.



## Maintenance


### BULB REPLACEMENT:

1. Grasp plug and remove from its power source.
2. Unlock the lock on the bulb socket.
3. Pull bulb AND plastic base straight out of socket. Do not twist bulbs while you are removing them.
4. Replace burned-out bulb with 3 V, 20 mA LED bulb ONLY. (Additional bulbs are included for your convenience.)
5. Relock the lock on the bulb socket.

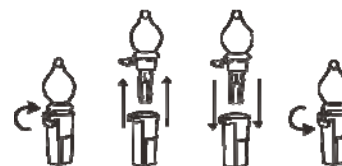

If the new bulb base does not fit in bulb holder, follow these steps:

 - Remove the cover.
- Remove the base of the burned-out bulb by straightening the bulb leads, and gently pull bulb out.
- Thread leads of new bulb through holes in old base with one lead in each hole (always match the long lead of new lamp to the hook of lamp base).
- After bulb is fully inserted into base, bend each lead up so that the leads will touch the contacts inside the bulb holder.
- Insert the cover.

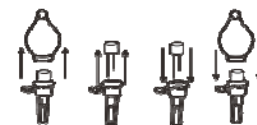

## CAUTION

1. To reduce the risk of overheating, replace burned-out lamps promptly. Use 3.0 Volt, 20 mA LED lamps only.
2. Risk of fire. This product does not contain lamp shunts, which allow the product to operate if one lamp burns out. Replace lamps only with the spare lamps provided with this product.
3. This product can only be used with the original adapter, not other brands of adapter.

**CAUTION!** – ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ATTEMPTING EITHER FUSE OR BULB REPLACEMENT.

## Use and Care Instructions

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- b) When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- c) When not in use, store neatly in a cool, dry location protected from sunlight.

## Care and Cleaning

- Step 1. Remove all ornaments and decorations.
- Step 2. Unplug the cord from the wall outlet and then disconnect each section of the tree.
- Step 3. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Step 4. Repeat this step for the center and bottom tree sections.
- Step 5. Carefully place all tree sections into a shipping box and tape it shut.
- Step 6. Store your tree in a cool, dry place away from sunlight.

 
## Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are connected into each other well by pressing each section down and rotating. Make sure power cord plug is securely inserted into a working electrical outlet.
	If you are still experiencing problems with the tree please call 1-877-527-0313 for instructions.

### Loose branches

If a branch of the tree falls off, follow the steps below to reinstall it with a spare latch (G).

- 1) Place the branch into the slot of the bracket.
- 2) Insert a spare latch (G) through the hole and use diagonal pliers (not included) to **crimp** the latch (G). (See Fig. A)

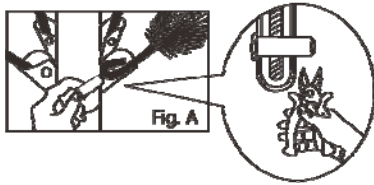

**The device complies with Part 15 of the FCC Rules.**

**Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

**Warning: Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.**

**However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Importer: Home Depot  
Address: 2455 PACES FERRY ROAD ATLANTA, GA 30339  
Tel: 1-877-527-0313**

**Adapter Model No. TS-24WLF12V**