



Toaster User Manual

Model: GTS4A



Customer Service: 1-844-801-8880

▲ IMPORTANT: DO NOT use this toaster until you have read this entire manual.
Please keep it for future reference.

TABLE OF CONTENTS

- 1.IMPORTANT.....2
- 2.PRODUCT DESCRIPTION.....3
- 3.BEFORE USING FOR THE FIRST TIME.....4
- 4.AUTOMATIC CENTERING GUIDES.....4
- 5.TOASTING INSTRUCTIONS.....5

Picture in manual are for reference only. Please refer to actual product.

IMPORTANT SAFE GUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. Read all instructions.
2. A person who has not read and understood all operating, toasting, and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.
3. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water!
4. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
5. To reduce the risk of fire, do not leave this appliance unattended during use. Close supervision is necessary when any appliance is used by or near children.
6. If this appliance begins to malfunction during use, immediately press the CANCEL button(s) and unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
7. The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
8. The cord to this appliance in an unstable position.
9. Use the Toaster on a hard, flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the Toaster could cause it to malfunction.

Do not let cord hang over edge of table or counter, or touch hot surface.


WARNING: ELECTRICAL SHOCK HAZARD. Never attempt to dislodge food inside the Toaster while the Taster is plugged in. Doing so could cause an electrical shock hazard or a risk of fire.

CAUTION: This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot material and allow metal parts to cool before cleaning. Do not place anything on top of the Toaster while it is operating or while it is hot.

SAVE THESE INSTRUCTIONS! FOR HOUSEHOLD USE ONLY.

PARTS AND ACCESSORIES

- A** Toaster Slots
- B** Loading Lever
- C** Cancel Button
- D** Bagel Button
- E** Defrost Button
- F** Browning Control
- G** Removable Crumb Tray

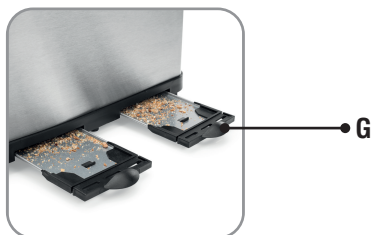

BEFORE FIRST USE

- 1.Remove all packaging materials including those that may be inside the toasting slots or toasting lever slots.
- 2.Wipe the exterior with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.
- 3.Do not put the Toaster, cord or plug in water.
- 4.Be sure crumb tray is pushed all the way into the back of the Toaster and the toasting levers are in the UP position.
- 5.Unwrap power cord from cord storage area on underside of Toaster and plug into a 120V AC outlet.
- 6.Turn the browning control knob to (1), the lightest setting.
- 7.Lower the toasting levers until they lock in place. Operate without bread once or twice to burn off any manufacturing residue. You may notice an alight amount of smoke; this is normal and will stop as the heating elements continue to heat.

AUTOMATIC CENTERING GUIDES

- 1.Lowering the toasting lever closes the centering guides, and holds the bread or toaster food centrally in the toasting slots.

Note: The toasting lever(s) will not lock down unless the Toaster is plugged into a 120V AC electrical outlet.

TOASTING INSTRUCTIONS

1. Make sure crumb trays are pushed all the way into the back of the Toaster and the toasting levers are in the UP position.
2. Make sure no bread or other objects are inside the toasting slots. Place Toaster on a flat, level, heat resistant surface.
3. Plug the power cord into a 120AC electrical outlet.
4. Position the browning selector knob to desired setting(s). To test toasting times for browning, it is best to use both toasting slots' position the browning selector knob between (3) and (4) medium; then adjust each subsequent toasting to your preference.
5. Remove all protective wrappings from food before placing into the toasting slot(s).
6. Insert bread or toaster food into the toasting slot(s). Lower the toasting lever until locked into place. The automatic centering guides hold food upright for uniform side-to-side toasting. When the bread is lowered into position, toasting will begin.

NOTE: The toasting lever will not lock into position unless the Toaster is plugged into a 120V AC electrical outlet.

NOTE: When toasting a single slice, the bread may be placed in any toasting slot.

NOTE: To prevent a fire hazard, never place bread over the opening of the Toaster, always place bread into the slots.

NOTE: DO NOT change the browning selector knob selection during the toasting cycle. First press the CANCEL button; then turn the browning selector knob to adjust the browning lever. Lower the toasting lever and toast until the desired toast color is achieved.

7. When the toast reaches the selected browning lever, it will pop up automatically.
8. Remove bread from toasting slot(s). Use care when removing bread as the bread and the top of the Toaster will still be hot.
9. To interrupt toasting, press the corresponding CANCEL button.
10. Unplug cord from wall outlet when not in use.

IMPORTANT: Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.

CAUTION:

DO NOT toast pastries with runny fillings or frosting.

DO NOT toast torn slices of bread.

DO NOT place buttered bread or wrapped food into the Toaster.

DO NOT toast small-size bread, mini-baguettes, breadsticks, etc.

WARRANTY

The distributor of **GeekChef**® Toaster in USA warrants that all the products purchased and used in USA shall be free from defects in material and workmanship for a one year period from the date of purchase.

If a Problem Should Occur during This Period:

1. If the problem persists, please contact the dealer from whom you bought the Toaster. If necessary, instructions pertaining to the replacement or repair of the unit will be given.
2. Please present the original invoice for any repair or replacement covered by the warranty.
3. All the costs of removal, installation and transportation of a defective Toaster or parts will be charged to the customers.

What is Not Covered:

This warranty does not apply to the damages caused by misuse, poor installation, mistreatment, negligence, improper shipping, acts of God, or any other circumstances beyond the control of the distributor. The damages caused by any repair carried out without the supervision of authorized **GeekChef**® service is also not covered.

WARRANTY CARD

(Return copy)

To validate your one-year warranty on your **GeekChef**® Toaster, please fill out and return this card to the distributor in you area.

Model No.: _____ Serial No.: _____

Name: _____ Tel.: _____

Address: _____

City: _____ Province-State: _____ Country: _____

Postal-Zip Code: _____ Date of Purchase: _____

Name of dealer where you bought the product: _____

Comments: _____



HOME EASY LTD.
1275 Bloomfield Ave., Fairfield, NJ 07004
Customer Service: 1-844-801-8880
E-mail: info@home-easy.net
www.geekappliances.com