



# Dualit®

## GUARANTEE AND INSTRUCTIONS FOR YOUR DUALIT TOASTER

### 5 CLEANING INSTRUCTIONS

#### ALL MODELS

1. Always unplug toaster before cleaning.
2. Crumbs should be carefully brushed off the elements (using only a soft brush), and the toaster shaken out. NEVER insert a fork or other sharp instrument to remove torn pieces of bread as the heating elements may be damaged.
3. Remove crumb tray to clean.
4. Use a damp sponge or cloth to wipe off the outside surfaces of the toaster.

### 6 FULL ONE YEAR WARRANTY

#### A short power supply cord is provided to reduce hazards resulting from becoming entangled in or tripping

Longer cord sets or extension cords may be used if care is exercised in their use.

If a longer cord set or extension is used,

1. The marked electrical rating of the cord set or extension should be at least as great as the electrical rating of the appliance, and should be a grounded type three 3-wire cord.
2. The longer the cord should be arranged so that it will not drape over the counter top where it can be pulled on by children or tripped over accidentally.

This toaster is fitted with heavy duty elements made from the finest quality clear mica, and 80/20 nickel chrome. The life of the element can not be guaranteed as this depends entirely upon the treatment received from the user.

Dualit warrants that this appliance shall be free from defects in material and workmanship for the period of one year from the date purchase. This warranty does not cover consequential damages of any kind or war resulting from accident or misuse.

If your appliance fails to operate correctly while in use and under normal household condition within the warranty period, simply contact the store where you purchased it or call the Dualit after sales service **Helpline 973 623 9730** or email **dualitusa@smithagy.net**.

If the appliance is found to be defective in material or workmanship, Dualit will, at our discretion repair or replace it free of charge.

This warranty is applicable only to appliance used in the United States. This supersedes all other express product warranty or guarantee statements.



1 Safeguards


2 Special Tips

3 Operating Instructions

4 Warm up Guide

5 Cleaning

6 Warranty

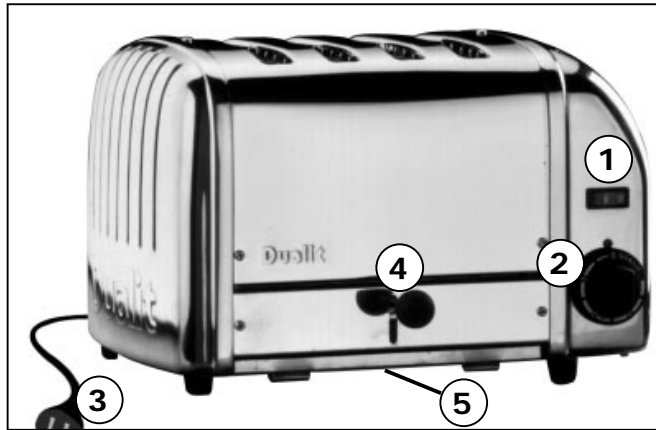

Congratulations on your purchase of the Dualit professional toaster. Before using your Dualit toaster for the first time please read these instructions carefully so that you obtain the best possible results.

- ①. Slot Selector Switch.
- ②. Timer.
- ③. Safety Plug.
- ④. Ejector Knob.
- ⑤. Slide out Crumb Tray.

## 1

### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse any part of this product in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the authorised service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
8. Do not use outdoors.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use appliance for other than intended use.
11. Oversize food, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
12. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls and the like when in operation.
13. Do not attempt to dislodge food when toaster is plugged in.
14. Unplug the toaster when not in use.

#### SAVE THESE INSTRUCTIONS

**This toaster should be used for household purposes only.**

## 2

### SPECIAL TIPS FOR SUCCESSFUL TOASTING

1. The ideal slice of bread is 4 1/2" x 4 1/2" x 1/2". Do not force bread which is too thick or too long into slots, if this is done difficulty may be experienced ejecting the bread once toasted.
2. Do not insert broken slices of bread into the slots.
3. Fully load **ALL** heated Slots.
4. The toaster can be turned off at any time during the toasting cycle by turning the timer ② to the 'O' position.
5. The shade required can be changed during the toasting cycle by turning the timer to another setting.
6. Keep elements free from bread crumbs and broken pieces of bread, as these will carbonize and burn out the elements.

## 3

### OPERATING INSTRUCTIONS FOR 2, 3 & 4 SLOT MODELS

*YOUR TOASTER IS FITTED WITH ONE ADJUSTABLE FOOT WHICH MAY BE HAND RAISED TO COMPENSATE FOR UNEVEN SURFACES*

1. Lift the round Ejector Knob ④ and insert bread, muffins or bagel slices into the appropriate slots.

#### 2. Number of slices to be selected

##### 2 SLOT MODEL

**One slice:** The Slot Selector Switch marked 'I' when depressed will choose **left** slot for toasting.



**Two slices:** The Slot Selector Switch marked 'II' when depressed will choose **both** slots for toasting.

##### 3 SLOT MODEL

**Two slices:** The Slot Selector Switch marked 'II' when depressed will choose the **left** slots for toasting.



**Three slices:** The Slot Selector Switch marked 'III' when depressed will choose **all** slots for toasting.

##### 4 SLOT MODEL

**Two slices:** The Slot Selector Switch marked 'II' when depressed will choose the **left** slots for toasting.



**Four slices:** The Slot Selector Switch marked 'IIII' when depressed will choose **all** slots for toasting.

**For best results, toast should be inserted into ALL slots chosen by the slot selector. If any heated slots are left empty the other heated slots will toast unevenly.**

3. To activate toaster turn the Timer ② clockwise to desired toasting shade:

Approximate position:

- 1.5 - Light Toast
- 2.5 - Medium Toast
- 3.0 - Dark Toast

THIS WILL IMMEDIATELY START THE TOASTER.

Automatic timing will start and the red neon light will illuminate.

When the timer reaches zero (this can be achieved manually), the neon light and heating element will switch off.

The timer will stop ticking when the toast is done. The toast will not pop up, but will keep warm inside for approximately 10 minutes until ready for serving.

4. To eject toast press the Ejector Knob ④ to the down position and the toast will pop up ready for serving.

5. The toaster is OFF when the Timer ② is in the 'O' position (regardless of the Slot Selector position).

6. **Unplug the toaster when not in use.**

## 4

### WARM UP GUIDE

The Dualit toaster was designed for commercial use in restaurants and hotels in England where the toaster may be in continual use for 8 hours. Therefore the heating elements are of a heavy construction. Because of this you may experience what you consider to be a longer warm up period. **THIS IS NORMAL.** Once warm however (this is achieved after one toasting cycle), you will

experience quick heating and even toasting. When beginning toasting or after a lapse of 15 minutes, the outsides of the bread in the end slots may be under toasted. This can be avoided by preheating the selected slots before inserting bread by setting the timer for two or three minutes. When the toaster is warmed up, consistent results will be achieved.