

LAWN & GARDEN

MODEL N° 65034

OWNER'S MANUAL



Keep this Identification Number in case you must contact our Customer Service Department.

SAFETY INFORMATION

 
SAFETY ALERT SYMBOLS AND SIGNAL WORDS



The level of risk is indicated by the following signal words:

SIGNAL WORDS	
Warning	Hazards or unsafe practices which COULD result in severe personal injury or death if the warning is ignored.

If the warning sticker becomes unreadable, you can re-order it from Customer Service



↑ WARNING

When using the Wheelbarrow, always heed these warnings:

- Do not allow others to ride in Wheelbarrow. The rider can fall out, or the Wheelbarrow can tip over causing serious injury.
- Do not exceed the maximum weight of 550 lbs.
- Reduce load if working on hills or slippery
 surfaces
- Never exceed 10 mph.
- Always begin filling the rear of the tub. If a heavy item is tossed into the tub in front of the axle, the wheelbarrow will quickly tip forward causing the handles to jerk upward and possibly hit the person filling the tub or anyone in the handles' path.
- Since the load is mainly transferred through the wheel and not the user, our wheelbarrow is easy to overload.

INSTRUCTION #1096324 E 9/28/2011



BEFORE BEGINNING ASSEMBLY





Keep the hardware bags and their contents separate. If any parts are missing, call our **Customer Service Department**



Test fit all Bolts by inserting them into their respective holes. If necessary, carefully scrape away any excess powder coating buildup from inside the holes. Do not scrape away all of the powder coating. Bare metal may rust. You may need to pound some Bolts into place with a hammer or mallet.



Verify that all bolts fit by inserting them into their respective holes. If necessary, carefully scrape away any excess powder coating from inside the holes. Do not scrape away all the powder coating. Bare metal can rust. You may need to tap some bolts en place with a hammer or rubber mallet.



*Two adults required to

(+ one adult to read the instructions)

Only adults should assemble this unit. Do not allow children to enter the assembly area until after assembly is complete.



TOOLS REQUIRED FOR THIS ASSEMBLY

Safety Glasses Phillips Screwdriver 1/2" Wrench (1)(1)(2)


ASSEMBLY GUIDES

Refer to the following areas throughout the instructions to assist in the assembly process:

This area is located at the top, left-hand corner of the page and indicates which tools and hardware are needed to complete the assembly steps on a page.



This area is located at the top, right-hand corner of the page and shows an image of the product with shaded parts indicating which section is being assembled.

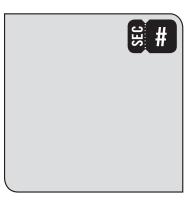

This area is usually located in the bottom, left-hand corner of a step and indicates that special attention is needed to perform a particular part of a step.



These areas are usually located in the bottom, right-hand corner of a step and indicate that damage to the product or serious injury may occur if the caution or warning is not heeded.





Throughout the Parts & Hardware List, Part & Hardware Identifiers, and instructions are three-letter IDs. These IDs are below the images of the parts and hardware to help you locate and identify the parts and hardware during assembly. These IDs are not necessarily on the parts themselves.




ADZ (x10) 1/4" x 5/8" Pan-Head Screw

PARTS LIST										
	ID ARB ARC ARD ARE	Item Description Tub Right Handle Bar Left Handle Bar Roll Bar	Qty 1 1 1 2	¥ □ □ □	ARF ARG AMU		Qty 2 1 2	∀ □		
			HA	IRDV	VARE I	LIST				
	ID DBH ARH AAO ARJ AVF AVG ABD AAN	Item Description Axle Frame Hardware 3/4" x 1 1/8" Cotter Key 5/16" Nylock Nut 5/16" U-Bolt 1" Axle End Plug Handles-to-Tub Assembly Hardware 5/16" x 3" Round Phillips Head Bolt 5/16" Custom Plastic Spacer 5/16" Flat Washer 5/16" Cap Nut			WARE DESCRIPTION OF THE PROPERTY OF THE PROPER	Item Description Tub-to-Frame Assembly Hardware 5/16" x 2" Round Phillips Head Bolt 5/16" Nylock Nut	Qty 6 6 6	√ □□□□ □□□□ □□□□□ □□□□□□□□□□□□□□□□□□□		

PARTS IDENTIFIER

Parts shown at 10% of Actual Size

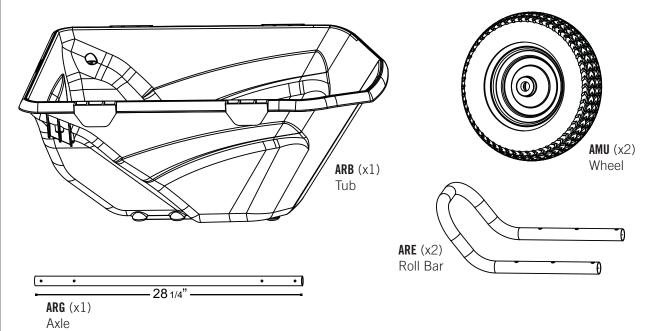

ARF (x2) Connection Sleeve



HARDWARE IDENTIFIER

AXLE FRAME ASSEMBLY HARDWARE [DBH]

(Actual Size)



ARH (x4) 3/4" x 1 1/8" Cotter Key



AAO (x4) 5/16" Nylock Nut



 
AKJ (X2) 5/16" U-Bolt



ARI (x2) 1" Axle End Plug

HANDLES-TO-TUB ASSEMBLY HARDWARE [DBI]

Actual Size)



AVF (x2)

5/16" x 3" Round Phillips Head Bolt



AVG (x2) 5/16" Custom Plastic Spacer



 
ABD (x2) 5/16" Flat Washer



AAN (x2) 5/16" Cap Nut

TUB-TO-FRAME ASSEMBLY HARDWARE BAG [DBJ]

(Actual Size)



AVH (x6)

5/16" x 2" Round Phillips Head Bolt



ABD (x6) 5/16" Flat Washer



AAO (X6) 5/16" Nylock Nut


∃ 1 AXLE FRAME ASSEMBLY

HARDWARE REQUIRED

HARDWARE BAG REQUIRED: DBH, DBI, DBJ

AXLE FRAME ASSEMBLY HARDWARE

(Actual Size)

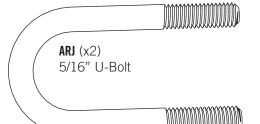




AAO (x4) 5/16" Nylock Nut



ARH (x4) 3/4" x 1 1/8" Cotter Key



 
ARI (x2) 1" Axle End Plug



••••••

AVF (x2)

 5/16" x 3" Round Phillips Head Bolt




AVH(x2)


5/16" x 2" Round Phillips Head Bolt

PARTS REQUIRED

 Parts shown at 10% of Actual Size





AKG (XI

 

ARF (x2)

 Connection Sleeve



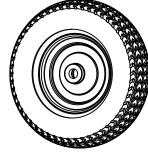

AMU (x2) Wheel


TOOLS REQUIRED





1/2" Wrench

Safety Glasses

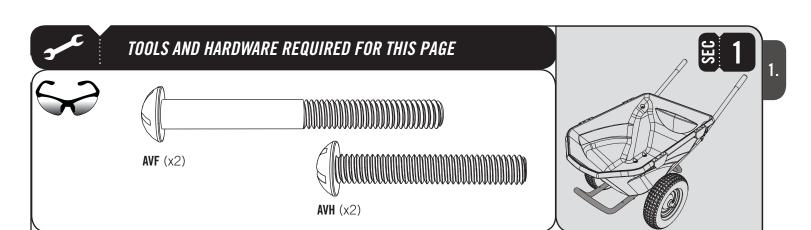


SEC 1.1

Slide a Roll Bar (ARE) over the two (2) Connection Sleeves (ARF) as shown. Ensure the holes line up.

SEC 1.2

Insert **Bolts (AVF)** through these holes in the Roll Bar to hold the Connection Sleeves in proper position.

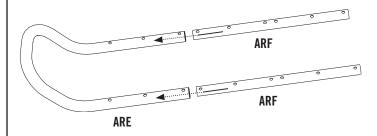


AVF


SEC 1.3


Slide the second **Roll Bar (ARE)** over the two (2) **Connection Sleeves (ARF)** as shown. Ensure the holes line up.

SEC 1.4

Insert **Bolts (AVH)** through these holes in the Roll Bar to hold the Connection Sleeves in proper position.

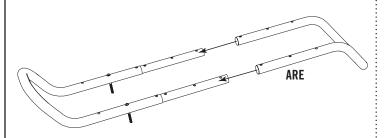

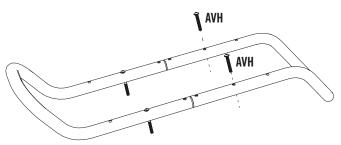

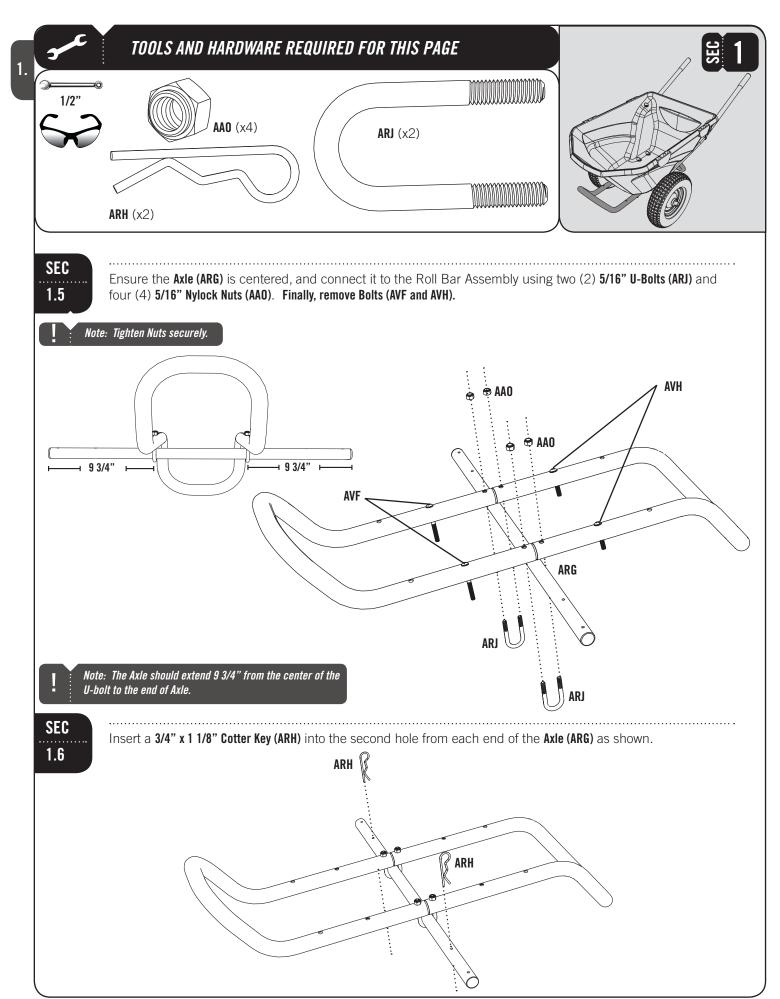




TOOLS AND HARDWARE REQUIRED FOR THIS PAGE







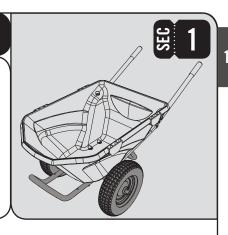

SEC 1.7


Slide one (1) Wheel (AMU) over each end of the Axle (ARG) until they butt up against the 3/4" x 1 1/8" Cotter Keys (ARH).

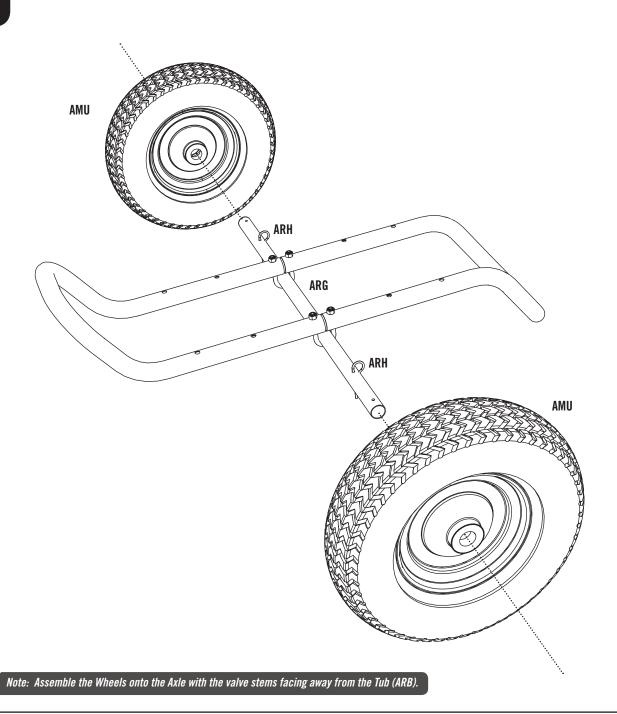

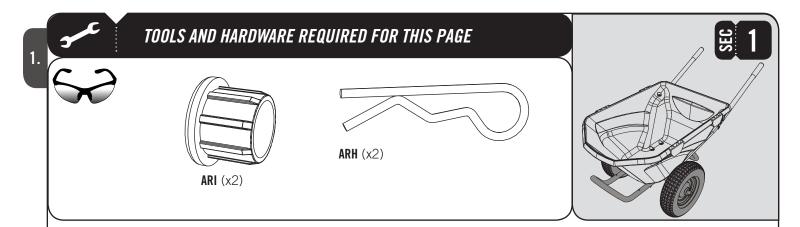

SEC 1.8

Secure the Wheels (AMU) to the Axle (ARG) by inserting one (1) 3/4" x 1 1/8"Cotter Key (ARH) through each hole at the ends of the Axle as shown. Insert one (1) 1" Axle End Plug (ARI) into each end of the Axle.

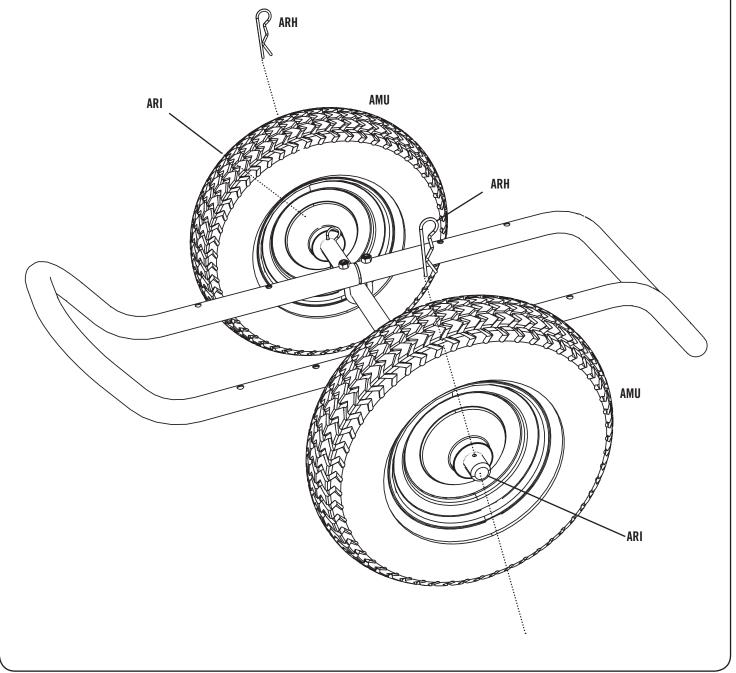


₿ 2 HANDLES-TO-TUB ASSEMBLY

HARDWARE REQUIRED

HARDWARE BAG REQUIRED: DBI

HANDLES-TO-TUB ASSEMBLY HARDWARE

 (Actual Size)



AVF (x2)

5/16" x 3" Round Phillips Head Bolt



ABD (x2) 5/16" Flat Washer




AAN (x2) 5/16" Cap Nut

AVG (x2)

5/16" Custom Plastic Spacer

PARTS REQUIRED

Parts shown at 10% of Actual Size

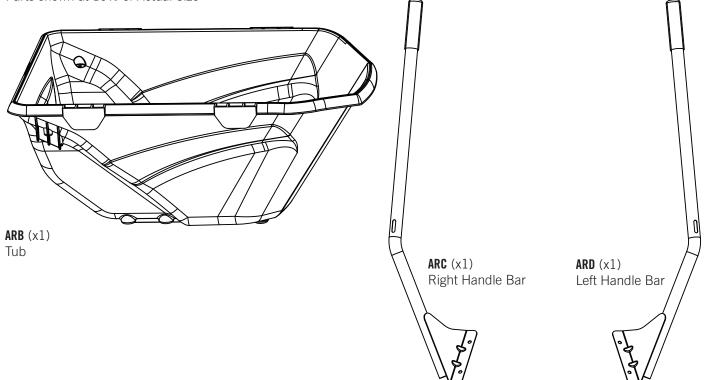

TOOLS REQUIRED








1/2" Wrench


Phillips Screwdriver


Safety Glasses

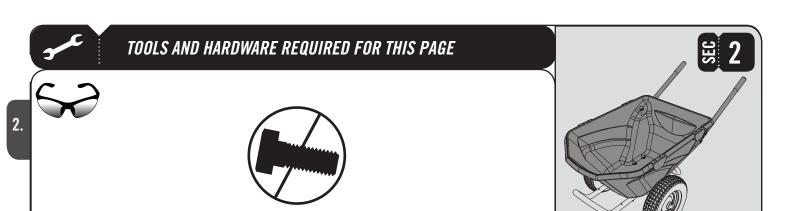

SEC 2.1

Turn the **Tub (ARB)** upside down and lay the **Left & Right Handle Bars (ARD & ARC)** over the bottom of the Tub so the holes in the Handle Bars align with the holes on the bottom of each side of the Tub.

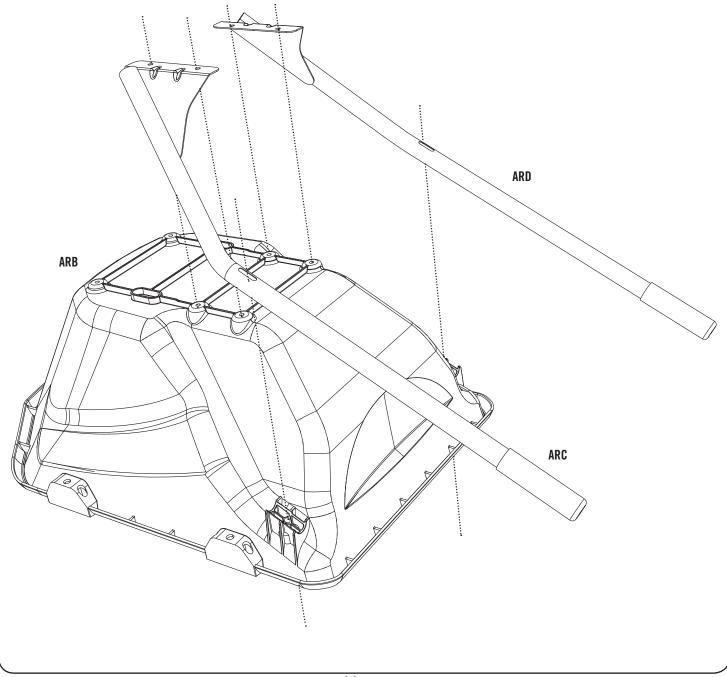

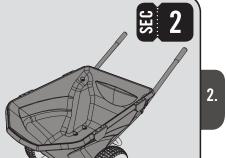


TOOLS AND HARDWARE REQUIRED FOR THIS PAGE







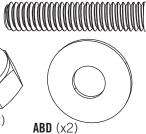




SEC 2.2

Secure the Left & Right Handle Bars (ARD & ARC) to the back of the Tub (ARB) using two (2) 5/16" x 3" Round Phillips Head Bolts (AVF), two (2) 5/16" Flat Washers (ABD), two (2) 5/16" Custom Plastic Spacers (AVG), and two (2) 5/16" Cap Nuts (AAN).

AVF (x2)

Note: Only hand tighten Nuts in this step.

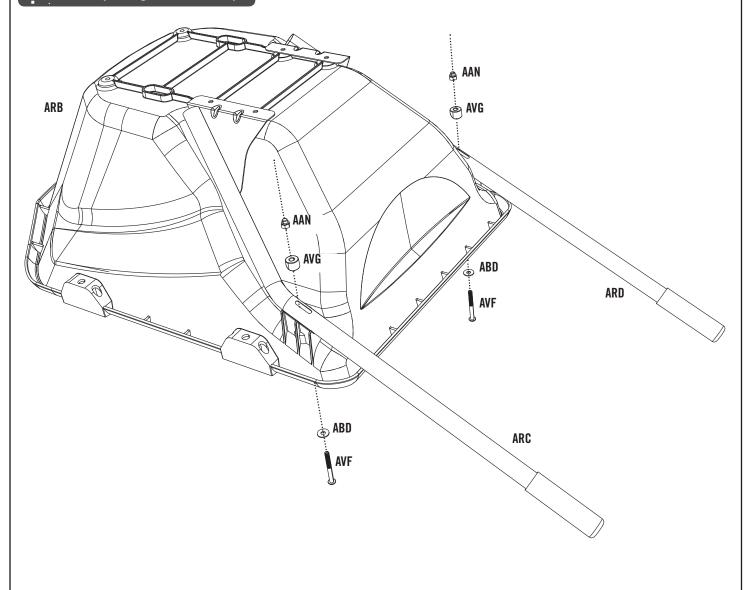


HARDWARE REQUIRED

HARDWARE BAG REQUIRED: DBJ

TUB-TO-FRAME ASSEMBLY HARDWARE

 (Actual Size)



AVH (x6) 5/16" x 2" Round Phillips Head Bolt



AAO (x6) 5/16" Nylock Nut



ABD (x6) 5/16" Flat Washer

TOOLS REQUIRED







Safety Glasses

1/2" Wrench


Phillips Screwdriver



TOOLS AND HARDWARE REQUIRED FOR THIS PAGE







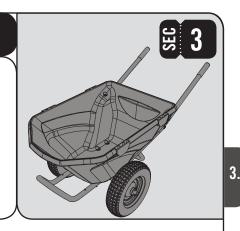

SEC 3.1


Carefully turn the **Tub (ARB)** over and place it onto the Roll Bar/Wheel Assembly. Align the holes as shown.

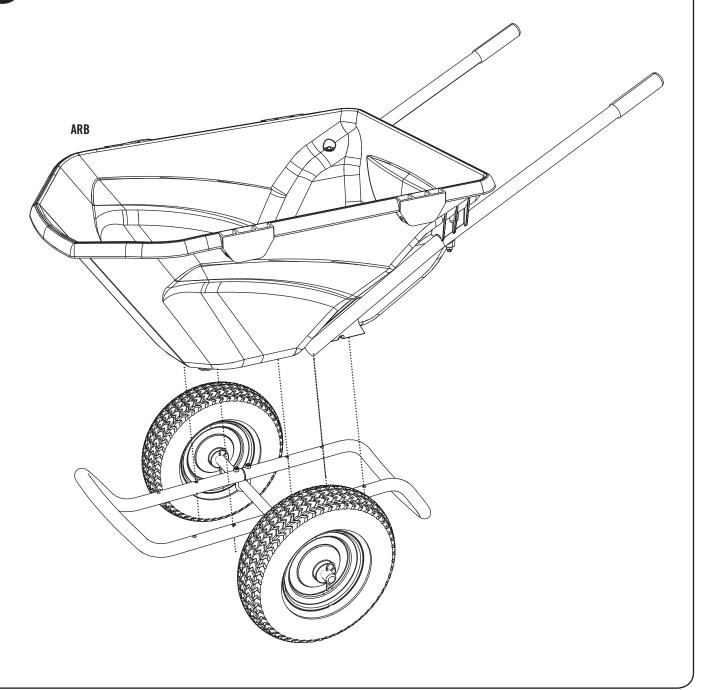

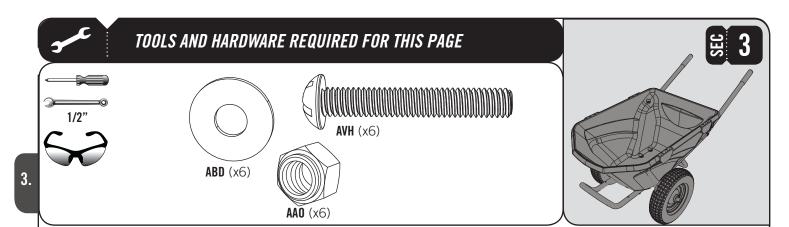

SEC 3.2

Secure the Handles to the upper back of the **Tub (ARB)** using six (6) **5/16" x 2" Round Phillips Head Bolts (AVH)**, six (6) **5/16" Flat Washers (ABD)**, and six (6) **5/16" Nylock Nuts (AAO)**.

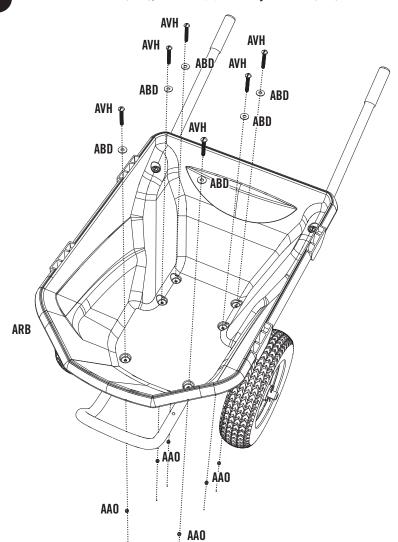

<u></u> ₩

Do not overtighten the Cap Nut. If the end of the Bolt breaks through the plastic cap, call our Customer Service Department. Exposed threads on the end of the Bolt may cause serious injuries.

SEC 3.3

Tighten all hardware.


떯 4 BUILD WALL EXTENSIONS

ADD EXTENSIONS

SEC

4.1

Standard 1" \times 2" (about 3/4" \times 1 1/2") boards can be inserted into the four slots on the sides of the Tub to extend the walls of the Wheelbarrow and hold a higher stack of debris.

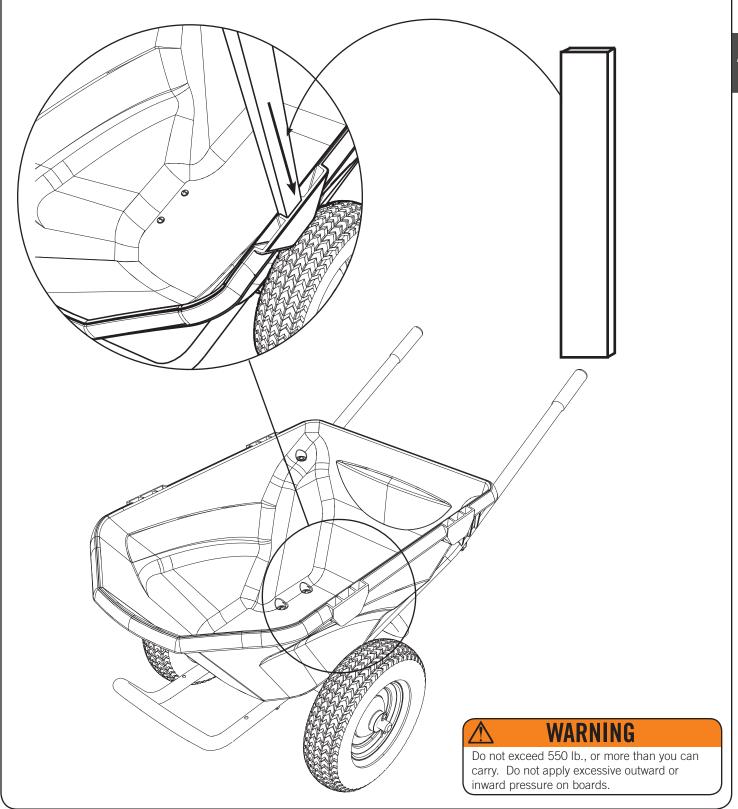

2-YEAR LIMITED FACTORY WARRANTY

LIFETIME PRODUCTS, INC. RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

- 1. Lifetime wheelbarrows are warranted to the original purchaser to be free from defects in material and workmanship for a period of two years from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration, or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.
- 2. The tires, wheels, and axle included with the wheelbarrow are not covered by this 2 year limited factory warranty, but are covered by a separate 1 year warranty.
- 3. This warranty is nontransferable and is expressly limited to the repair or replacement of part(s) which may be determined upon inspection by the manufacturer to be defective in material or workmanship. Shipping charges to and from the factory as well as labor costs are not covered and are the responsibility of the purchaser.
- 4. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use, improper loading or overloading, and installation of improper equipment will void this warranty.
- 5. Liability for incidental or consequential damages is excluded to the extent permitted by law. Some States do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you. While every attempt is made to embody the highest degree of safety in the wheelbarrow, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
- 6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by Federal and State law. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PLEASE INCLUDE YOUR DATED SALES RECEIPT AND PHOTOGRAPHS OF DAMAGED PARTS.

REPORT PRODUCT DEFECTS IN WRITING TO: Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010 or call 1-800-225-3865 M-F 7 a.m. to 5 p.m. MST.

REGISTER YOUR PRODUCT FOR QUICKER CUSTOMER SERVICE.

Visit www.lifetime.com or call 1-800-225-3865 to register your product today.

FOR INTERNATIONAL WARRANTY CLAIMS:

All warranty claims must be accompanied by a sales receipt. Report all warranty claims in writing to your regional sales support representative. Please include your dated sales receipt and photographs of damaged parts. To Identify the representative for your region — Please visit: www.lifetime.com/international

