

SETUP



For a video showing how to set up the Control Stainer, visit:
www.wagnerspraytech.com/controlstainer350

ASSEMBLY



NEVER point the spray gun at any part of the body.
 Make sure the power cord is unplugged.

1. Stir the spraying material thoroughly.
2. Fill the container. Use a strainer to remove any particles.
 (see **Thinning the Material**, previous page, if thinning is required).
3. Align the pickup tube -
 - A If spraying downward, the angled end of the pickup tube should be pointing toward the front of the nozzle.
 - B If spraying upward, the angled end of the pickup tube should be pointing toward the rear of the nozzle.



Make sure the pickup tube is inserted as far as it will go to ensure a tight fit.



Never tip the sprayer at more than a 45° angle. Material could get into the turbine and damage the sprayer.

4. Carefully screw the cup back onto the nozzle assembly. Tighten firmly.
5. Align the nozzle and the turbine approximately as shown.
6. Insert and twist the nozzle into the handle toward the “lock” symbol on the turbine. The tab below the trigger will lock the two pieces into place.



If the unit has already been used, make sure the nozzle seal is in place (see page 10).
 Do not pull trigger at any time if the turbine is not running. Paint will drip from the nozzle.

