

User Manual for Multifunctional Carpet Cleaner

I. Product Introduction

This multifunctional carpet cleaner integrates vacuuming and deep cleaning. Equipped with a retractable long pole and a dedicated cleaning head, it is suitable for cleaning various fabric surfaces such as carpets and upholstered furniture, helping to easily remove stains, dust, and deep-seated dirt.

II. Usage Steps

1. Preparation

Check whether all parts of the machine (main unit, retractable long pole, cleaning head, hose, etc.) are in good condition and connected firmly.

Open the water tank cover of the main unit, add clean water and special cleaning solution (if used) in proportion according to the instruction manual, and then close the tank cover tightly.

2. Startup and Adjustment

Place the machine on a stable and dry floor, and plug in the power supply.

According to cleaning needs, select the appropriate cleaning mode (such as normal vacuuming, deep cleaning) through the gear adjustment button on the main unit.

3. Cleaning Operation

Hold the retractable long pole, place the cleaning head flat on the carpet surface, push it forward slowly, and then pull it back. Repeat the action to ensure thorough cleaning.

For stubborn stains, you can pause the cleaning head for a while to allow the cleaning solution to fully work before moving it.

4. Post-Cleaning Operation

After cleaning, turn off the machine power first and unplug it.

Remove the cleaning head, pour out the remaining sewage in the main unit, rinse the sewage tank with clean water, dry it with a cloth, and then let it air dry.

III. Maintenance

1. Daily Cleaning

After each use, promptly clean the hair and debris from the cleaning head, rinse it with clean water and let it dry.

Regularly check the inside of the hose. If there is a blockage, rinse it with clean water or clean it with a soft brush.

2. Component Maintenance

Water Tank: Clean the water tank after each use to avoid residual dirt and bacteria growth; when not in use for a long time, ensure the water tank is completely dry before storage.

Filter Device: Clean or replace the filter components every 1-2 months according to the frequency of use (refer to the product manual for details) to ensure suction and cleaning effect.

3. Long-Term Storage

Ensure all parts of the machine are completely dry, especially the water tank and cleaning head. Store the machine in a dry, ventilated environment away from direct sunlight, and avoid heavy pressure and moisture.

IV. Precautions

Keep away from water sources (except for the machine's own water tank) during use to prevent electric shock; when the machine is working, do not let children or pets approach.

Do not use non-special cleaning solutions to avoid damaging the machine or affecting the cleaning effect.

If the machine makes abnormal noise, peculiar smell, or malfunctions, stop using it immediately and contact after-sales service. Do not disassemble it by yourself.