


### **USE AND CARE GUIDE**

### **EVEREST PIN UP WALL SCONCE-#35321**

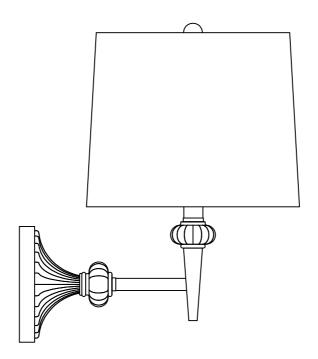

Questions, problems, missing parts? Before returning to the store, call Kenroy Home Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

904-642-4340

### THANK YOU

We appreciate the trust and confidence you have placed in Kenroy Home through the purchase of this lamp.

We strive to continually create quality products designed to enhance your home.

Thank you for choosing us!

### **Table of Contents**

Safety Information	2
Warranty	2
Pre-Installation	;
Planning Installation	3
Package Contents	3
Assembly	5
Care and Cleaning	,
Troubleshooting	7

## Safety Information

☐ Consult a qualified electrician with any electrical questions you may have.



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not continue the assembly process. Please call our Customer Service Team at 904-642-4340.

## Warranty

#### 1-YEAR LIMITED WARRANTY

#### WHAT IS COVERED

The manufacturer warrants this lamp to be free from defects in the materials and workmanship for a period of one (1) year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, assembled, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship.

#### WHAT IS NOT COVERED

This warranty shall not apply to the finish on any portion of the product due to weathering, as this is considered normal wear. The manufacturer does not warrant and specifically disclaims any warranty, whether expressed or implied, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to, any labor or expense costs involved in the replacement or repair of the product.

Contact the Customer Service Team at 904-642-4340.

### **Pre-Installation**

#### PLANNING INSTALLATION

Read all instructions before assembly.


To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping.

Keep your receipt and these instructions for proof of purchase.



NOTE: This vanity requires the use of two 120V, 60Hz, 100-Watt max, medium-base type A bulbs (not included). Do not exceed the recommended wattage.


### TOOLS REQUIRED

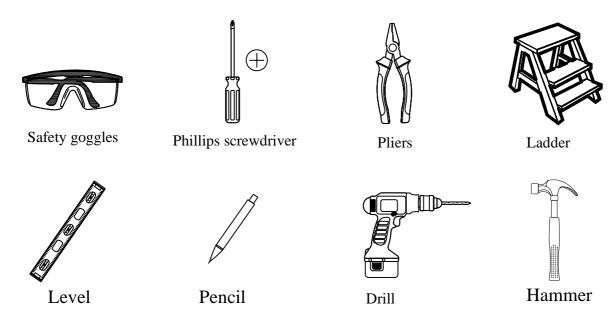

### HARDWARE INCLUDED



 
NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	Plastic anchor	2
BB	Wood screw	2
CC	Cord cover	2

# Pre-Installation (continued)

### PACKAGE CONTENTS

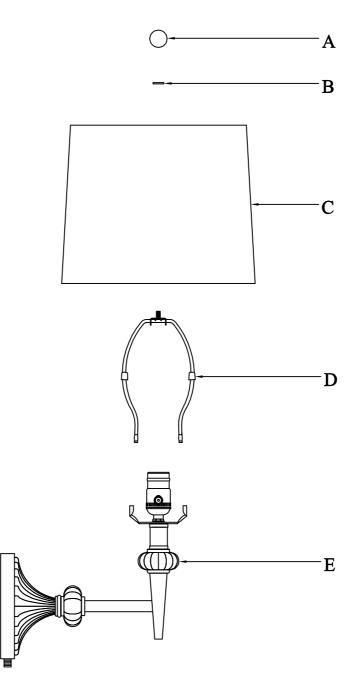


Part	Description	Quantity
A	Finial	1
В	Rubber washer	1
С	Shade	1
D	Harp	1
Е	Lamp body	1

# Installation instructions


# ${f 1}$ . Unpack the lamp and installing the wood screws

- ☐ Measure the distance between the keyholes on back of backplate, then mark spots on the wall.
- □ Drill pilot holes on the marked spots and insert plastic anchors (AA). (If fastening with wood screws (BB) to studs, skip this step)
- □ Install wood screws (BB) to the plastic anchors (AA) or the spots that you marked on studs.

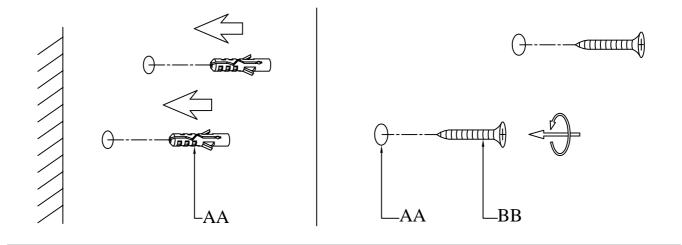

# 2. Hanging the lamp body


□ Hang lamp body (E) to wall by attaching the keyholes on back of the backplate to the wood screws (BB).

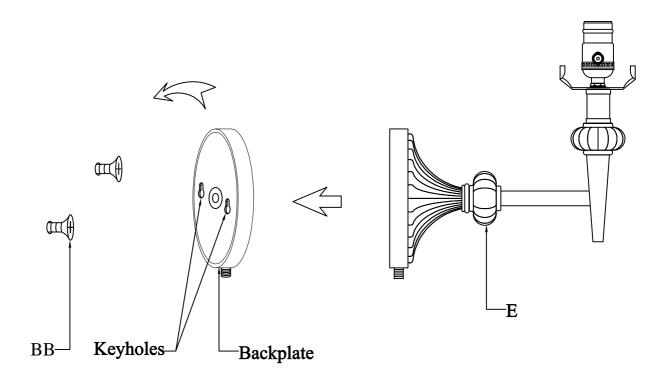

# Installation instructions (continued)


# 3. Installing the cord cover

□ Join the cord covers (CC) together and s crew the cord covers (CC) to the nipple on bottom of the lamp body (E).

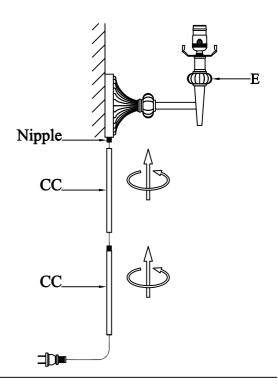


# 4. Assembling the shade

- □ Squeeze legs of the harp (D) together and insert the two ends between the prongs of the harp holder.
- □ Place the shade (C) onto harp (D) and secure with rubber washer (B) and finial (A).

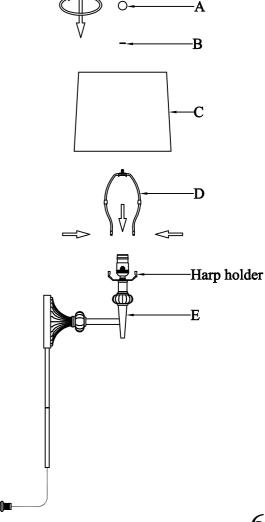

# Installation instructions (continued)

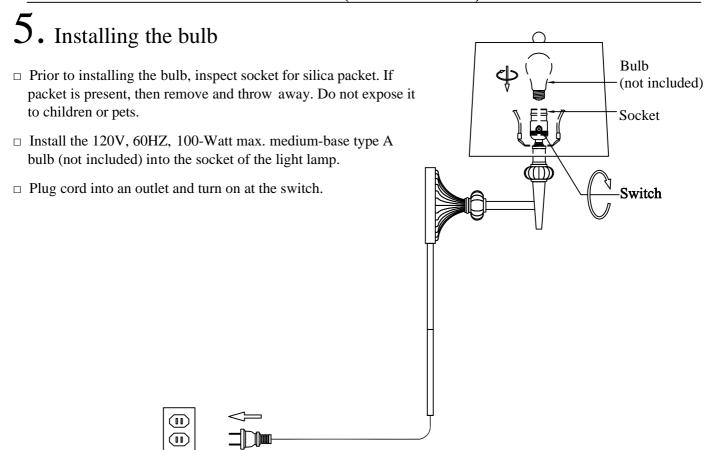

## Care and Cleaning

□ Clean the light fixture with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

# Troubleshooting

Problem	Possible Cause	Solution	
The bulb will not light.	☐ The bulb is burned out.	□ Replace the light bulb.	
	☐ The power is off.	☐ Ensure that the power supply is turned on.	
	☐ There is a faulty wire connection.	□ Check the wiring.	
	☐ The circuit breaker is off.	☐ Ensure that the circuit breaker is set in the on position.	
The fuse blows or a circuit breaker trips when the light is turned on.	☐ There is an exposed wire. ☐ There are too many items on one circuit.	<ul> <li>□ Discontinue use of the light fixture.</li> <li>□ Contact a qualified electrician or call the Customer Service Team at 1-800-986-3460.</li> <li>□ Unplug other items on the circuit.</li> </ul>	





## **CUSTOMER SUPPORT TEAM**

For any additional questions or concerns please contact our **Customer Support Team:** 



904-642-4340



@KenroyHome



**customerorders@kenroyhome.com**