

Installation instructions

1



2



3



4



Warranty

1. This product has a warranty period of 3 months.
2. The warranty period starts from the date of purchase.
3. The warranty is based on the manufacturer's production defects.
4. Wearable parts are not covered by warranty.

Date of purchase:

Dealer name:

Product model:

If your product has passed the warranty period, Replaceable accessories or repair kits can be provided for a fee.

Dealer phone number:

 
Dealer website:

High-pressure floor washing Instructions

Preparatory work:


1. When installing the starting hand, please enclose both ends of the starting hand cabinet into two base grooves and open the pin shaft and R-shaped pin.
2. To install the upper handle, please enclose the upper cabinet in the lower hand and fix it with the shaft and R-shaped shop.
3. To install the pipe, please screw the pipe (national fixed head) to the rotor head and tighten it with a wrench, and screw the temple pipe (movable head) to the position of the water gun on the upper hand. Pay attention. Please put the attached raw material tape on the hose mosquito several times before installation to leak water.
4. To fix the limb pipe, please put down the handrail and tie the hose and hand together after the hose is fully unfolded.

Optional accessories:

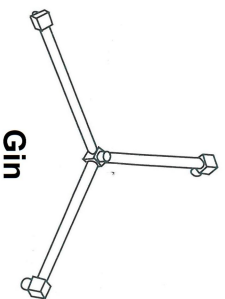

Gin

High pressure ball valve

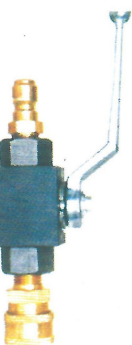

Operation guide:

Please connect your washing floor to the high-pressure cleaning machine with a quick connector.

When you are cleaning, please keep a steady and steady action to avoid strip-shaped places that are not cleaned. When you keep the floor washing box stationary in use, the pressure of water may damage the washing table. Check whether the bursting wire of the stator rotor is loose. It is necessary to keep the rotor in a stable round state when in use. The rotor needs to keep a distance of about 2.5CM from the cleaning surface.

Please don't use the washing ground without nylon wool. Nylon wool must keep contact with the cleaning surface to avoid any splashing.

The washing floor is designed for flat and horizontal surfaces only. Please do not use it to clean vertical surfaces or ceiling surfaces. Please wear goggles or safety goggles to protect grass during operation, and keep your hands and feet away from the shield when cleaning the floor.

When it is not used for a long time, please remove the rubber hose and the rotating rod under the shield. Please don't hit straight objects during use to avoid damaging the shield. Please do not artificially add weight to the shield.

When using, please pay special attention to cleaning objects protruding from the surface, because hitting such objects with high pressure water may cause the rod to rotate. Damage or rupture of rotor or shroud. When using, please keep your hands and feet away from the rotating rod rotating at high speed under the shield and the high-pressure water coming out. **Please separate the washing floor from the high-pressure cleaning machine before repair or maintenance, and turn off the water source and the power supply of the high-pressure cleaning machine**



Important note:

Before repair or maintenance, please separate the washing floor from the high-pressure cleaning machine, and turn off the water source and the power supply of the high-pressure cleaning machine. **If the mouth comes out normally and the rotating rod does not rotate?** The groove on the nozzle can help to control the water spray mode, and the return groove must be aligned with the rotating rod in order to keep the rotating rod rotating.

The water inlet pipe is filled with water, but the nozzle is not discharged?

Please separate the washing floor from the high-pressure washing machine, and then clean the nozzle. You can also use a thin needle to pass through your mouth, which may have been blocked by foreign matter.


There is no special requirement. The washing floor is usually matched with 025 nozzles, which may not match with your high-pressure cleaning machine. If you need assistance in determining the nozzle model matched with your high-pressure cleaning machine, please contact the dealer.

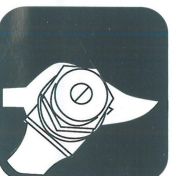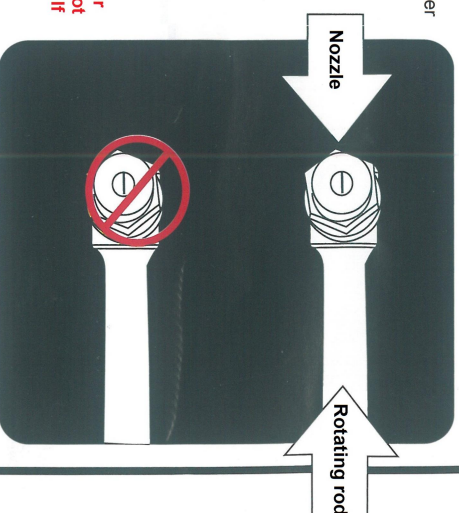


Heat the joint between the nozzle and the rotation to make the seal touch



Tighten and remove the nozzle from the rotating rod

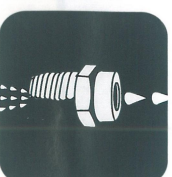

Since the nozzle with water until the foreign matter is taken out

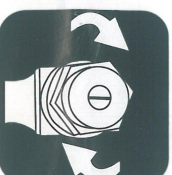

Reinstall the nozzle and keep the groove level with the rotary rod

Technical parameter:

The maximum flow rate is 30L/MN, 275 kg.

This product is forbidden to be used for hot water exceeding 125°C or steam falling at 230°C

Please regularly check whether the nozzle is blocked by dirt or foreign matter.

Before repair or maintenance, please separate the washing floor from the high-pressure cleaning machine, and turn off the water source and the power supply of the high-pressure cleaning machine.