


# **Installation Guide**

# Gate Swinging In

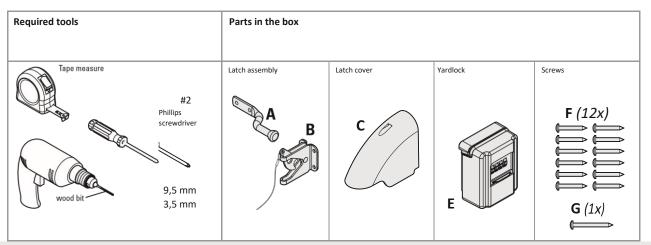

### **Important**


The following instructions are for IN-SWINGING gates. Instructions for OUT-SWINGING gates are available at www.yardlock.ca.

If you have an out-swinging gate, it is recommended that you reverse your hinges to create an in-swinging gate for added security.




#### Install latch assembly on gate interior


A Insert latch arm into latch and position on gate.

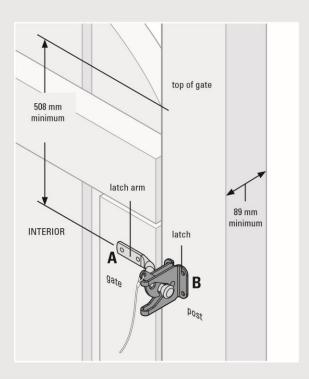

B Secure latch assembly with supplied screws.

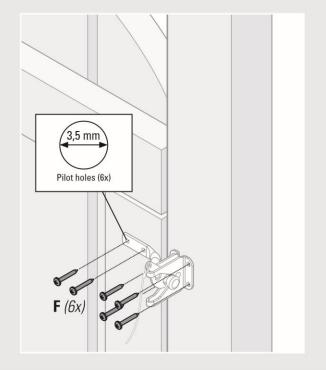

- A Mark the point where the catch meets the post.
  - gate post
- B Drill hole through post.

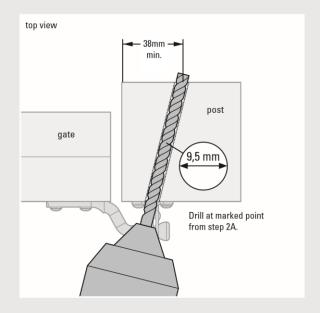


## Install spring and latch cover

A Push cable through post.





B Mount latch cover (C) on post above latch (B).

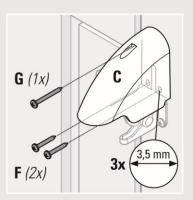


A Unlock Yardlock with default combination: 0-0-0-0


B Push cable through large hole in Yardlock.

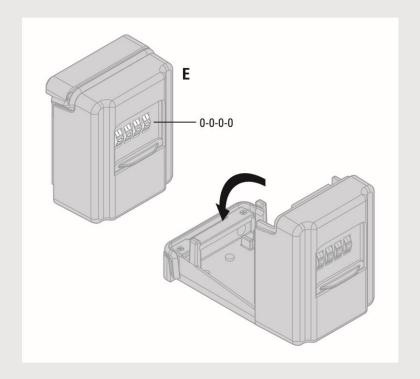

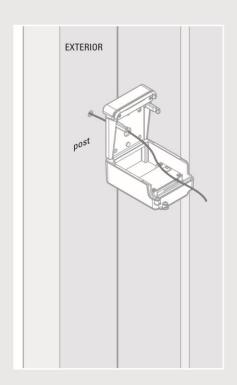

- Mount Yardlock on post with holes aligned.
- D Secure cable.

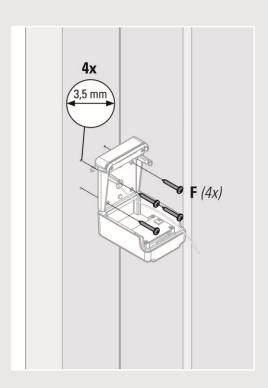


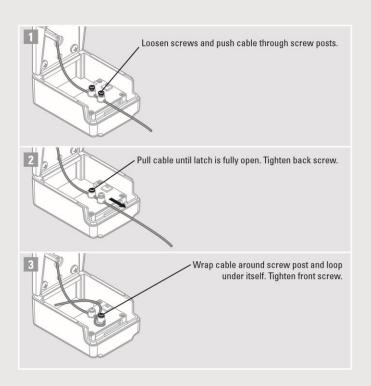

# 5

#### Set a new combination


A Remove rubber cover and move lever to learn position.

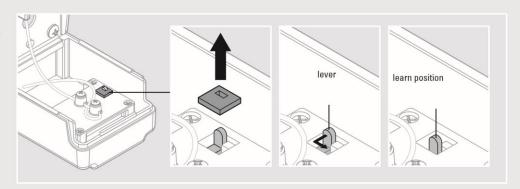

B Close Yardlock and rotate dials to desired combination.



Open Yardlock, move lever to original position, and install rubber cover.

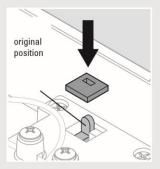




IMPORTANT: Write down and save your new combination in a safe place.




## **Normal Operation**

 A Enter code.



B Open Yardlock and gate.

 

C Close Yardlock



D Scramble dials.



Close shutter.



Close gate.

