

## Hessaire Pad Replacement Instructions

Covers Most Models



**⚠ WARNING** Always unplug unit from power source before performing any maintenance. Failure to do so could result in serious injury, electrical shock or death. Ensure back access panel and all parts are securely fastened back in place and nothing is obstructing the fan blade prior to powering the unit up again. See warning label on back of cooler prior to servicing.



Suggested Tools:  
#2 phillips screwdriver

- 1) Ensure unit is turned **off** and **unplugged**.
- 2) To change back side media pads, remove phillips screws from upper back side. Media keeper pins are used for certain models which will need to be removed to free up pad. If no media keepers are present, pads will simply tilt and pull out.
- 3) For models *MC26 & MC37/M150*, side media pads are removed from the back inside. *Note: Pads on the MC37/M150 are easier to remove if the fan blade is taken off first.*
- 4) For models *MC61/M250 & MC92/M350*, side media panels are taken out by removing the phillips screw from the upper outer side grill panel to access pad. Once the side grill is removed, the pad simply tilts and lifts out.
- 5) Reverse steps to install new replacement media pads.

**⚠** Ensure all side/back grill panels, media pads and screws are securely in place before operating cooler.

