



Measurement Guide
Electric Baseboard Cover Kit



Safety is Our Priority


These instructions are intended to supplement the installation instruction manuals provided with your heater and thermostat. For questions regarding your electric baseboard heater's instructions and safety warnings, please refer to the owner's manual provided by the manufacturer.

 CAUTION	 FIRE HAZARD	 BURN HAZARD
High temperature. Keep electrical cords, drapes, and other furnishings away from heater and heater cover by 12 inches.	Do not place objects, furniture, or anything flammable within 12 inches of the electric baseboard cover.	Do not touch while unit is heating. To avoid burns, do not touch the hot surface with bare skin.

Measurement Guide

Step 1: Measure Panel Length

Measure the electric baseboard heater from end to end.

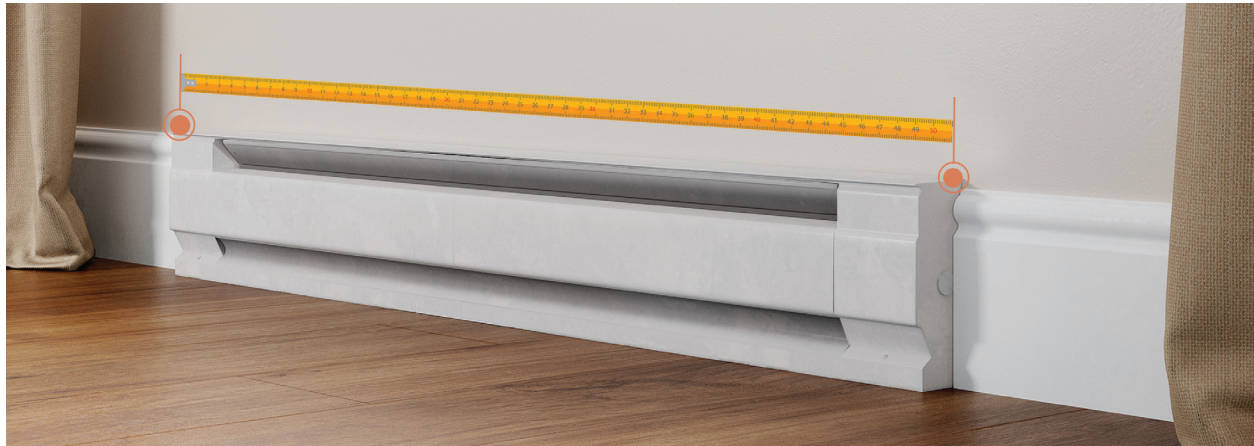

Compatible: Measure from end to end. Our kit for electric baseboard heater covers will fit measurements of 75 inches long or less.

Not Compatible: If your electric heater is longer than 75 inches, it is NOT compatible with our cover. Note: a $\frac{1}{4}$ inch of space between the heating unit and the cover must be maintained.

Longer than 75 inches? Contact us at 844.801.6429 or sales@baseboarders.com.

Step 2: Determine Panel Length

Electric Unit Panel Length	Cover Panel Length	SKU	Kit Components
36 inches or less	36 inches	EL-BB003-36-EC007-KIT	(1) 36 inch panel, (2) closed end-caps, (2) wall brackets
36.01 – 48 inches	48 inches	EL-BB003-48-EC007-KIT	(1) 48 inch panel, (2) closed end-caps, (2) wall brackets
48.01 – 60 inches	60 inches	EL-BB003-60-EC007-KIT	(1) 60 inch panel, (2) closed end-caps, (2) wall brackets
60.01 – 75 inches*	72 inches	EL-BB003-72-EC007-KIT	(1) 72 inch panel, (2) closed end-caps, (3) wall brackets

*Note: Each Baseboarders endcap can slide out 1-3/4 inches, providing an additional 3-1/2 inches in length, if needed.

Don't see your size? Contact us at 844.801.6429 or sales@baseboarders.com.