



Affordable. Reliable. Home Improvement.

ELECTRIC FIREPLACE LOGS


MODEL:HS1323-032A / HS1325-032A

VEVOR

Affordable. Reliable. Home Improvement.

ELECTRIC FIREPLACE LOGS

MODEL:HS1316-032B / HS1320-032B

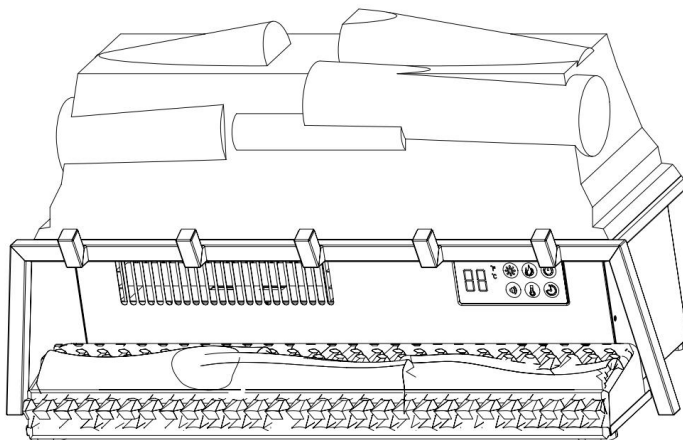

Pictures are for reference only, and the final product is subject to the physical object

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

SAFETY INSTRUCTIONS

- 1.Read all instructions before using this appliance.
- 2.This appliance is hot when in use. To avoid burns, do not let bare skin

touch hot surfaces.

If provided, use handles when moving this appliance. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 ft. (914 mm) from the front of this appliance.

3.CAUTION: Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating unattended.

4.If possible always unplug this appliance when not in use.

5.Do not operate any heater with a damaged cord or plug or after the appliance malfunctions, has been dropped or damaged in any manner.

6.Any repairs to this appliance should be carried out by a qualified service person.

7.Under no circumstances should this appliance be modified. Parts having to be removed for servicing must be replaced prior to operating this appliance again.

8.Do not use outdoors.

9.This heater is not intended for use in bathrooms, laundry areas and similar indoor locations.

Never place this appliance where it may fall into a bathtub or other water container.

10.Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like.

Arrange cord away from traffic areas and where it will not be tripped over.

11.To disconnect this appliance, turn controls to the off position, then remove plug from outlet.

12.Connect to properly grounded outlets only.

13.This appliance, when installed must be electrically grounded in accordance with local codes, with the current CSA C22.1 Canadian Electrical codes or for USA installations, follow local codes and the National Electric Code, ANSI/NFPA No. 70.

14.Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may

cause an electric shock, fire or damage the appliance.

15.To prevent possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Do not place unit on carpeting or rugs.

16.This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung on or near it.

17.Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

18.Avoid the use of an extension cord because of the risk of overheating the cord and the risk of fire. Extension cords are for temporary use only. If an extension cord must be used, it must be UL/CSA certified, rated at 15A (1875W), 125V maximum with 14 AWG minimum and constructed of two current carrying conductors with ground. A heavy duty extension cord with the shortest length possible for the connection is recommended and must not be longer than 50 ft. (15.2 m). Do not coil or cover the extension cord.



Electrical Connection

A 15-Amp, 120-Volt, 60 Hz circuit with a properly grounded outlet is required.Preferably, the log set will be on a dedicated circuit as other appliances on the same circuit may cause the circuit breaker to trip or the fuse to blow when the heater is in operation.The unit comes standard with a 6 ft. (1.8 m) long three wire cord, exiting the right side of the log set. Plan the installation to avoid the use of an extension cord. Extension cords are for temporary use only. If an extension cord must be used,it must be UL/CSA certified, rated at 15A (1,875W), 125V maximum with 14 AWG minimum and constructed of two current carrying conductors with ground. A heavy duty extension cord with


	the shortest length possible for the connection is recommended and must not be longer than 50 ft. (15.2 m). Do not coil or cover the extension cord.
	Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.
	Do not use this item if any part of it has been under water. Immediately call a qualified service technician to inspect the item and replace any part of the electrical system which has been under water.

Grounding Instructions

This heater is for use on 120 volts. The cord has a plug as shown at (A) in Figure 1.

An adapter as shown at (C) is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box.

The adapter should not be used if a three-slot grounded receptacle is available.

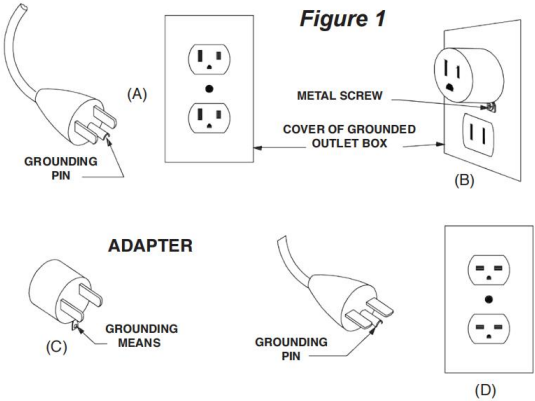

NOTE: Adapters are NOT for use in Canada.

SAFETY INFORMATION

Remote Control

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and Industry Canada ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The Remote Control should be used 2 PCS AAA batteries.



DO NOT mix old and new batteries.

DO NOT use rechargeable silver oxide cell batteries with remote control unit.

DO NOT mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.

DO NOT dispose of batteries in fire. Improper disposal may cause batteries to leak or explode.

CAUTION

PRODUCT DAMAGE MAY OCCUR.

Never attempt to disassemble or alter the product in any way not instructed by this manual.

SAVE THIS MANUAL

Model	HS1323-032A	HS1325-032A
Voltage frequency	120V~ 60Hz	120V~ 60Hz
Power(W)	1500	1500
Product Size (mm)	575×240×330	627×240×330
Net weight of products(kg)	4.7	5.07

INSTALLATION INSTRUCTIONS

Your new electric log set with heater can be installed in several ways:

- Into an existing fireplace.
- On a solid floor up against a solid wall.
- Into any opening or enclosure that meets the clearances to combustibles listed below. Simply place your electric log set in the desired location, observing the clearances and notes in this manual, and plug the cord into a minimum 15 amp, 120 Volt electrical outlet, Use an extension cord rated for a minimum of 1,875 watts if necessary.

Note: For best effect, install unit in an area out of direct sunlight and about 3-3/8" (86mm) away from a wall.


Warning: Do not install unit on carpeting, rugs, beds, blankets, pillows etc. Keep combustible materials such as furniture, bedding, papers, clothes and curtains at least 3 feet (914 mm) from the log set.

Clearances to combustibles

Front: 36"(915mm) **Rear:** 3/4"(19mm) **Sides:** 4-1/8"(105mm)

Top: 12-5"(127mm)

Minimum Enclosure Size

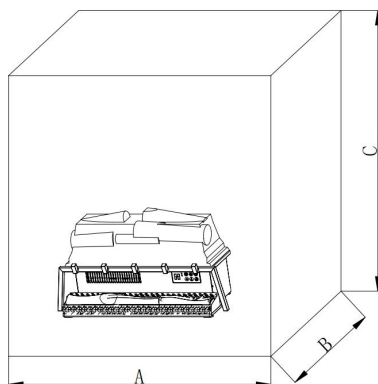

Figures 2

Ref.	HS-1323-032A	HS-1325-032A
A	29"(738mm)	31"(788mm)
B	9.5"(242mm)	9.5"(242mm)
C	18"(457mm)	18"(457mm)

OPERATING INSTRUCTION

The log set control functions can be accessed in two (2) ways:


- Using the control panel buttons, located on the lower right-hand corner of the log set.
- Using the multifunction remote control unit.

The log set conveniently features separate controls for flame effect and for heater control


This allows you to operate the unit in two (2) different modes:

- **As a full-featured log set** - both flame effect and heater are on. This mode allows you to enjoy the look of the fire along with the heat output of a heater.
- **As a visual effect** - only the flame effect is on, the heater is off. We

recommend this mode for warm weather application, when you want the ambiance of a fire, without any heat output.

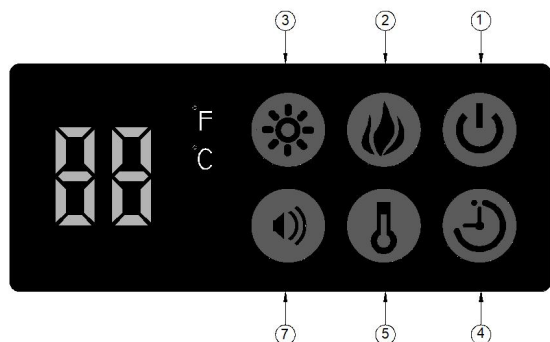

Figures 3

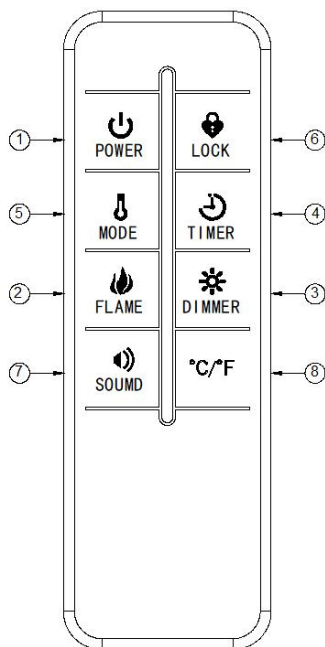

Figures 4

1.MAIN POWER BUTTON:

This button supplies power to all the functions of the log set,
The Main power button must be in the ON position,
either from the remote or controls on the log set for the functions to work.

2.FLAME COLOR EFFECT BUTTON:

There are 5 different flame color effects are available,

C1.Yellow+Red

C2.Blue

C3.Blue+Yellow

C4.Yellow+Red(Breathing)

C5.The unit will cycle automatically between all flame effects periodically.

3.FLAME BRIGHTNESS BUTTON:

There are 5 different flame brightness can be chosen:5-4-3-2-1(5 is the

brightest)

4.TIMER BUTTON:

This button controls the timer ON/OFF and 24-time setting from 1H to 24H. Press and hold for 5 seconds to turn off the buzzer.

5.TEMPERATURE ADJUSTMENT BUTTON:

Temperature adjustment range:70°F -95°F (21°C -35°C)

To switch from Fahrenheit to Celsius,hold the HEATER CONTROL button for 5 seconds when Heater is on.

When the heating is turned off, the fan delays blowing for one minute to dissipate heat.

6.CHILD LOCK BUTTON:(This function is only available on the remote control.)

Press it for 5 seconds, and hear the sound, it shows that the "CL" child lock is on, and all buttons of the key panel and remote control cannot be operated.

Press and hold for 5 seconds again, hear the sound then the Child Lock is off, and all buttons of the key panel and remote control return to normal.

7.Wood burning sound BUTTON:

This button controls the wood burning sound switch.

8.Temperature unit switch BUTTON:

This button is used to switch between degrees Fahrenheit and degrees Celsius.

OPERATING INSTRUCTION

The infrared remote control relies on a line of sight and must be pointed at the controls of the log set to work. The remote control unit has the controls required to turn ON/OFF both the main power and the heater. If you prefer to use the control buttons on the log set unit itself, they are on the lower right corner of the unit. The layout of the buttons and remote control unit can be seen in Figures 3 and 4.respectively.

1.Plug your log set into a 15-amp, 120-volt power outlet.

2.Turn the power on. Flame will show on the wall behind the log set.

3. Open the battery cover of the remote control, install 2 "AAA" batteries and activate the remote control.
4. Point the remote control directly at the control buttons of the log set and use the buttons to operate the log set.

CARE AND MAINTENANCE

Before attempting ANY maintenance:

1. Turn off power to the unit.
2. Unplug the power cord from outlet.
3. Let log set cool if it has been operating.

Maintenance of Motors:

Always disconnect the appliance from the main power supply and allow it to cool before any servicing operation.

The motors used on the fan heater and flame blower are pre-lubricated for extended bearing life and require no further lubrication. However, periodic cleaning/vacuuming of the appliance around the air intake and exhaust, as well as the fan heater is recommended. For heavy or continuous use, periodic cleaning must be done more frequently. If the heater blows alternating cold and warm air, check the fan for free movement and for debris restricting air flow. If the fan does not move freely, the unit must be turned off and the fan replaced immediately in order to prevent further damage to the unit.

Cleaning:

Cleaning of the log set is to be done only with a vacuum cleaner or by using a soft cloth, slightly dampened in water (if needed, a small amount of dish soap can be added to the water) and dried using a clean, dry soft cloth. DO NOT use any abrasive household cleaners as these products will damage the unit.

