

EVERBILT

TM

Item #
Model # HY100G

USE AND CARE GUIDE

10 ft. x 10 ft. Pro Canopy with Single Awning Panel and Double Sidewall



Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-800-305-1726

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Everbilt through the purchase of this canopy. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Everbilt!

Table of Contents

Table of Contents	2	Setting Up the Canopy	4
Safety Information	2	Taking Down the Canopy	11
Warranty	2	Care and Maintenance	14
Pre-Installation	3	Service Parts	15

Safety Information



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.
This tent meets the flammability requirements of CPAI-84.
The fabric may burn if left in continuous contact with any flame source.
The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



CAUTION: Take care not to pinch your fingers in the frame during set up and take down.



CAUTION: Please try to avoid using it in heavy rain, high winds, stormy weather, especially lightning storms.



CAUTION: Never set up or continue to use in any rain, wind, or storm conditions, especially lightning storms. Damage can occur to the tent and put you and others in potential danger.



CAUTION: Avoid setting up the tent on steep inclines.



CAUTION: Do not use this tent for permanent shelter. It is designed for temporary use only.



CAUTION: Never leave the tent unattended.

Warranty

WHAT IS COVERED

The manufacturer warrants for a period of 1 year from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, the manufacturer may provide replacement parts to the original purchaser. Original receipt or proof of purchase as well as proof of defect is required. The manufacturer will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser 1 year from the date of purchase and is not transferable. This warranty does not cover any product purchased through non-authorized dealers and/or online auction websites.


WHAT IS NOT COVERED

This 1 Year Limited Warranty does not cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain, or hail. In case of inclement weather, remove all valuables and persons and seek appropriate shelter. Under no circumstances will the manufacturer be liable or responsible for any incidental or consequential damages. This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 1 Year Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Contact the Customer Service Team at 1-800-305-1726 or visit HOMEDEPOT.com.

Pre-Installation

PACKAGE CONTENTS


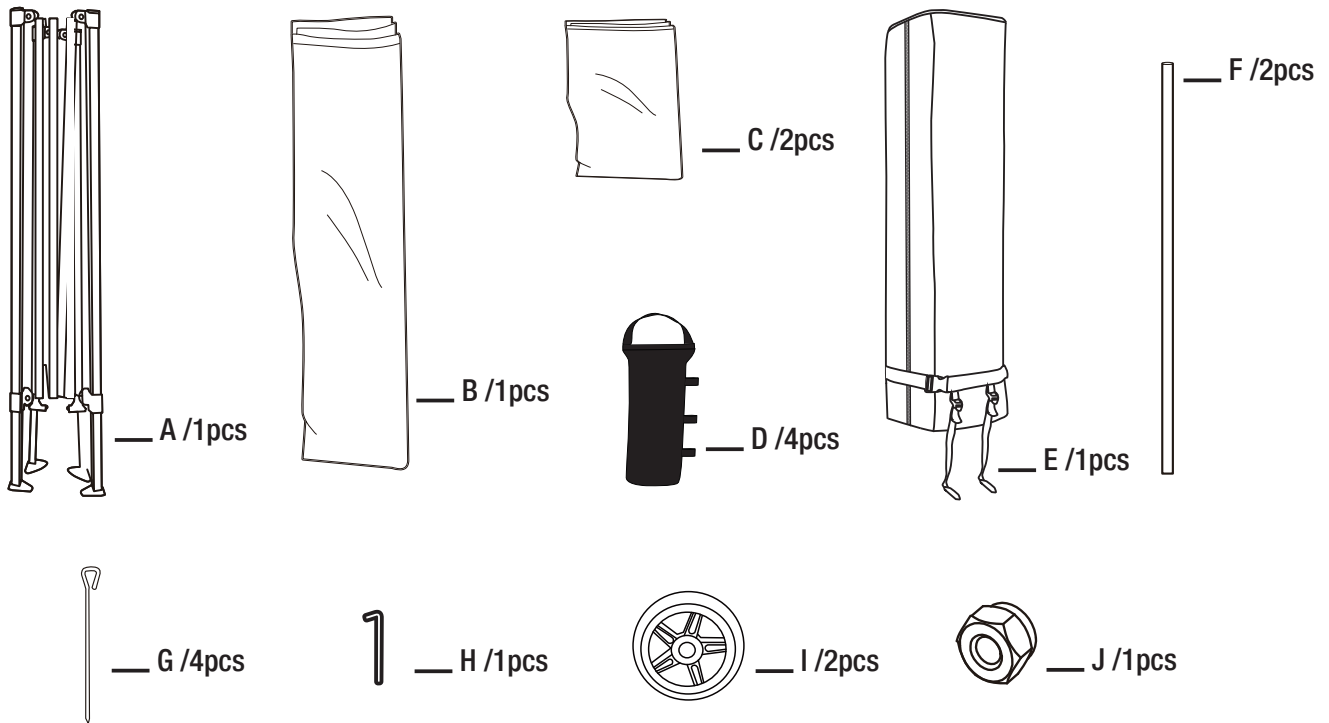


Part	Description	Quantity
A	Frame	1
B	Canpoy	1
C	Side Wall	2
D	Weight Bag	4
E	Cover bag	1
F	Awning pole	2
G	Stake	4
H	Hex wrench (for maintenance only)	1
I	4" PU Wheel	2
J	nut	1

Setting Up the Canopy

1 OPENING THE CANOPY FRAME

- With a partner, stand across from each other.
- Grasp a truss at the top of the frame(A) and the other truss at the bottom, as shown. Lift slightly off ground and step backwards while squeezing trusses together.

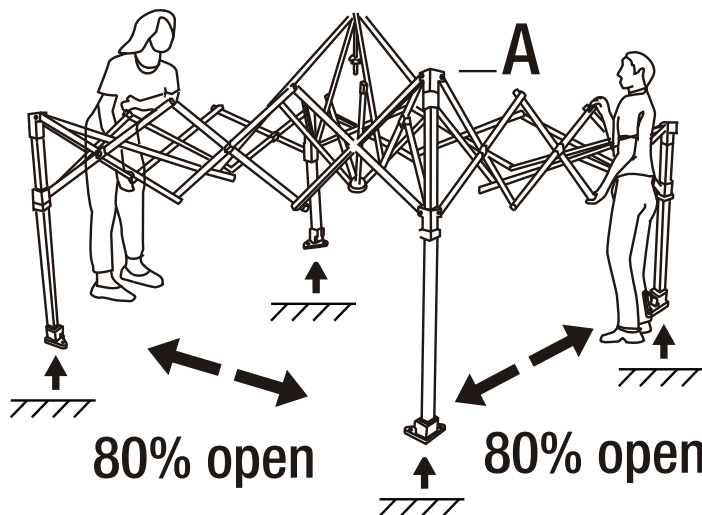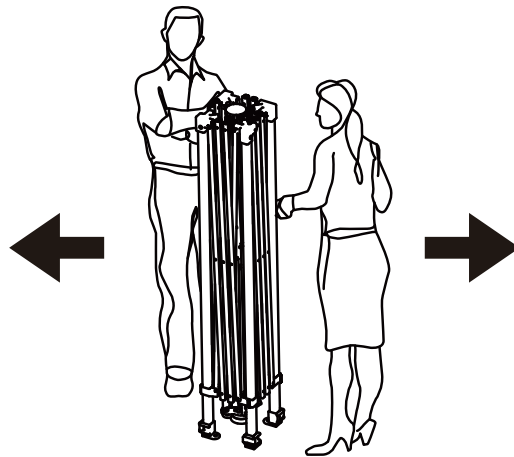


IMPORTANT:

Lift up the frame 2"-3" off the ground especially in tall grass or sand. Grasp the trusses away from the connections to avoid pinching. Get the frame 80%-90% opened.

Setting Up the Canopy

2 ATTACHING THE CANOPY

- Unfold the canopy (A) and place on top of the frame (B).
- Slide the EZ clip tab™ over the knob to secure the top tightly.
- Secure the canopy (A) to the corners of the frame (B) using the Velcro connections.

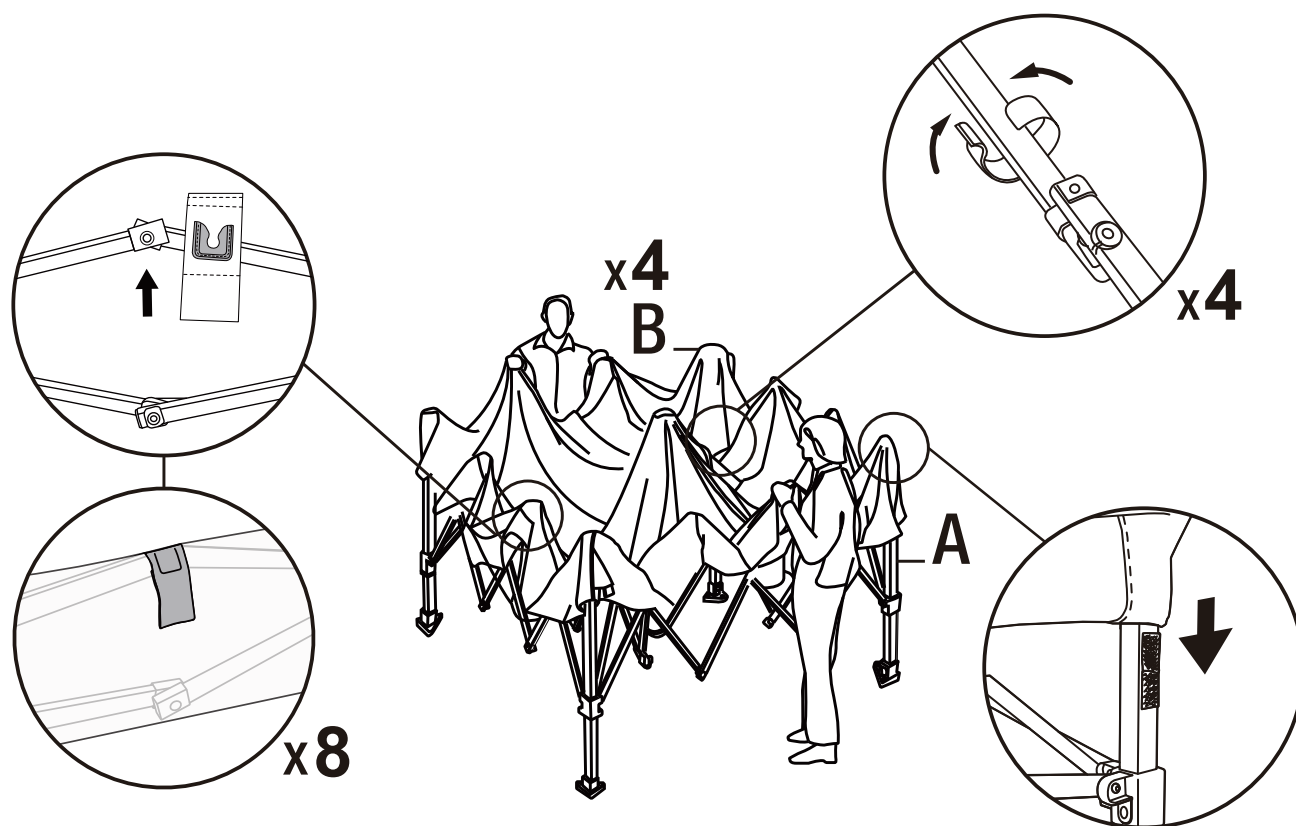


IMPORTANT:

Find the corners of the canopy before draping over frame.
Do not attach the canopy while the frame is fully extended.

Setting Up the Canopy

3 LOCKING THE FRAME

- Lift up one side of the frame (B) and walk under it.
- Place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole.

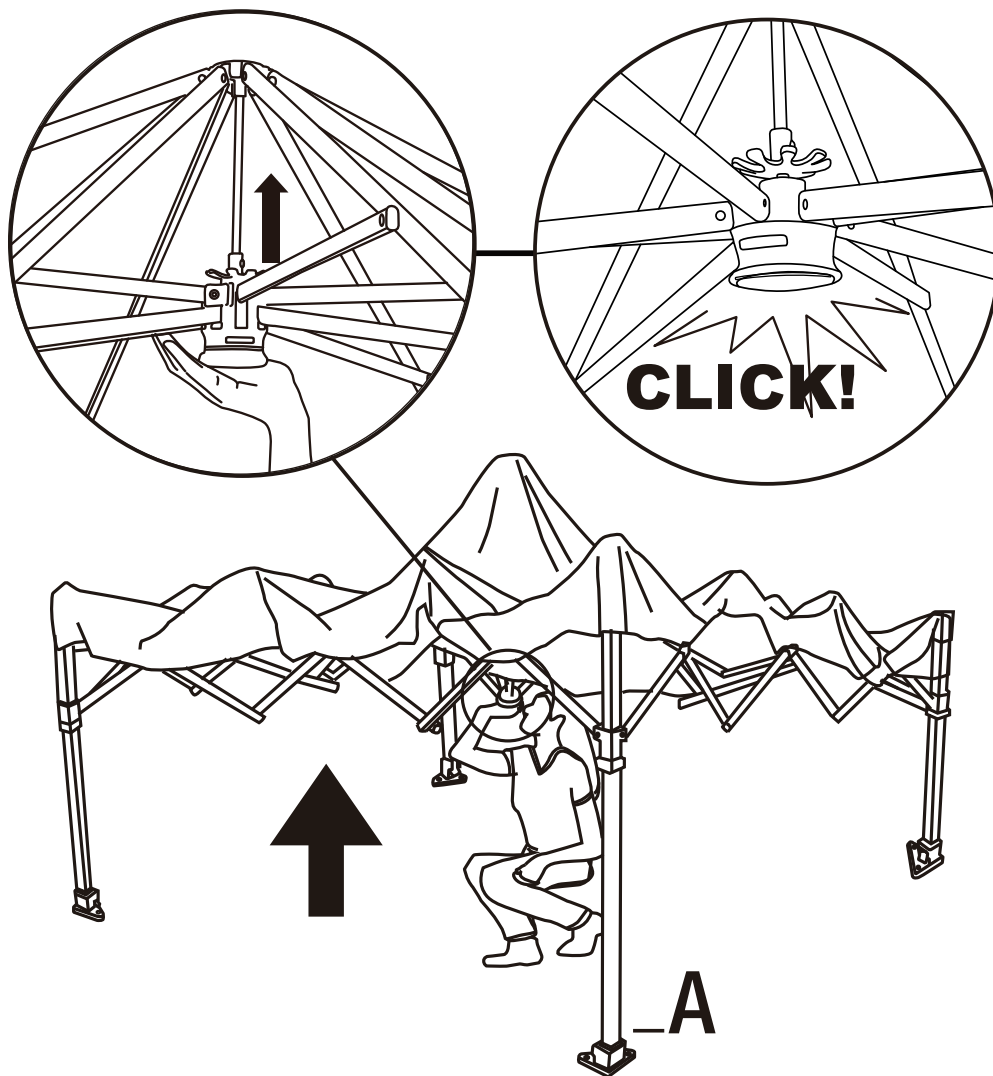


IMPORTANT:

Lift the frame slightly off the ground while pushing up hub.
Use both hands to guide the pole into the hub.

Setting Up the Canopy

4 ATTACHING THE EXTENDED AWNING TOP AND AWNING POLES

- Insert the two awning poles into holes.
- Put awning pole into extended awning top sleeve until in place. Repeat on the other side.
- Attach the extended awning top to the canopy top with Velcro.

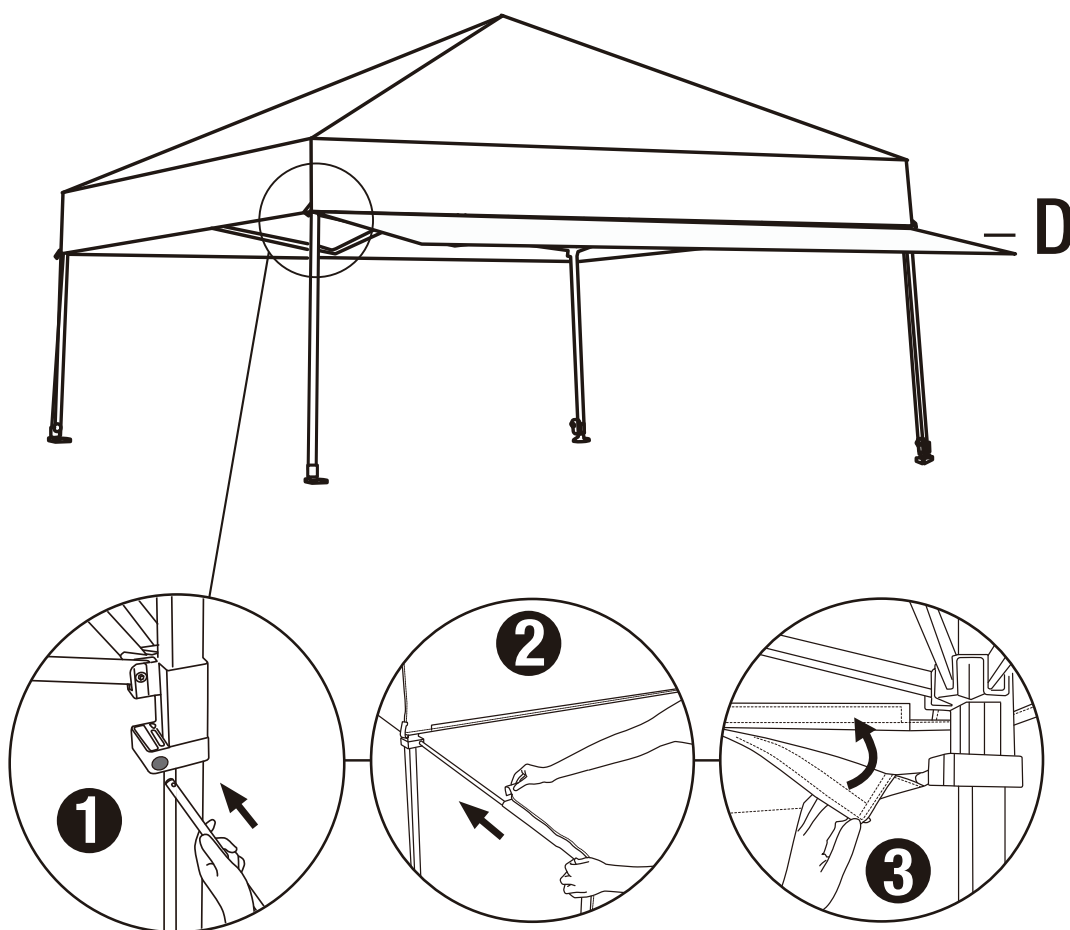


IMPORTANT:

Canopy top on each side has Velcro, so don't need to search for where the Velcro is beforehand.

Setting Up the Canopy

5 ATTACHING THE SIDEWALL

- Insert the two hooks of the sidewall upper corners into the holes on the canopy legs.
- Hang the integrated plastic wall-hooks on the outer truss bars.
- Secure the sidewall with hooks and loops.
- On grass or dirt setup insert the in the stakes the wall bottom loops to reduce wind flapping.

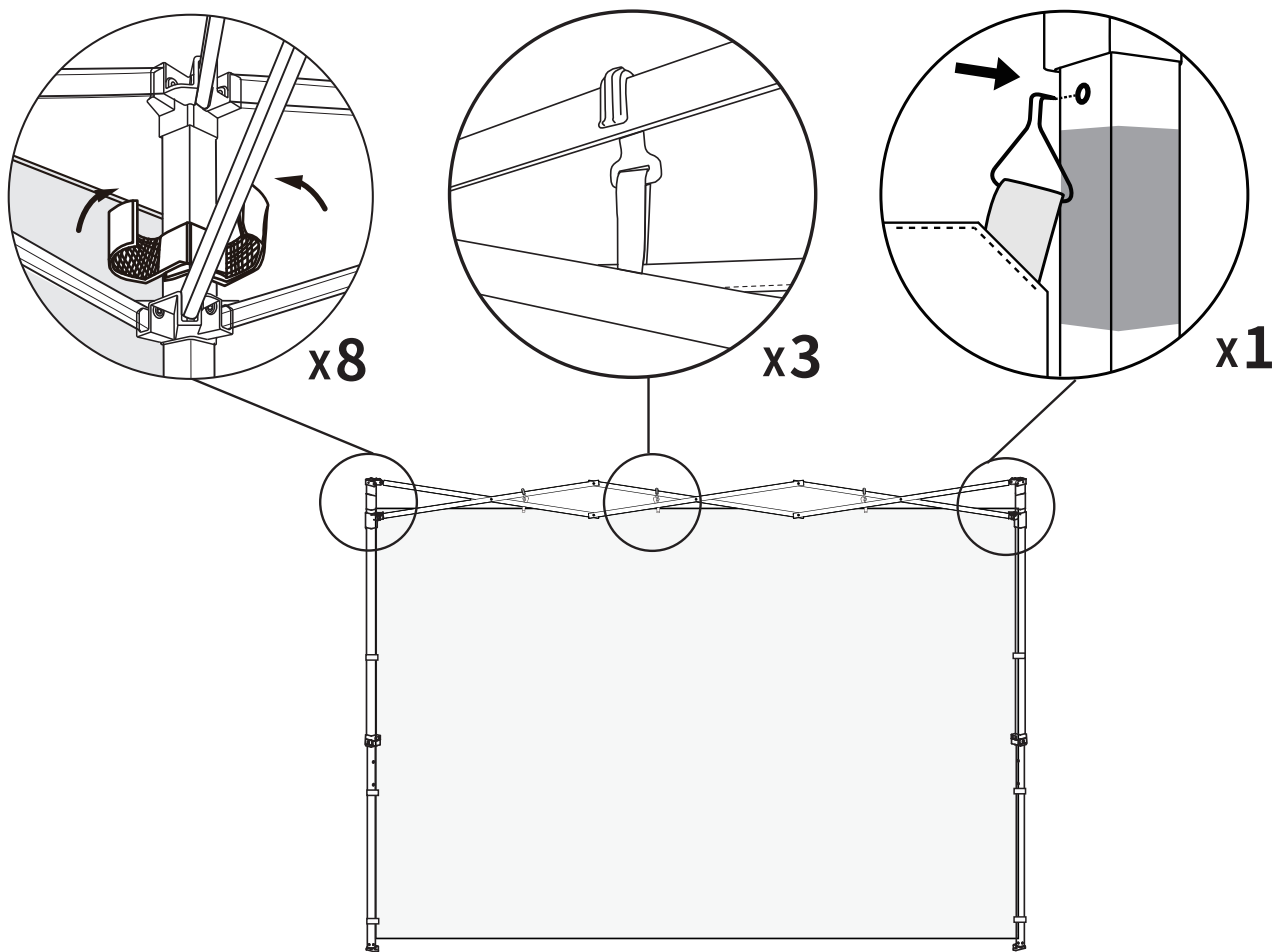


IMPORTANT:

2 Mesh pocket for small item storage and 2 garbage bag holders to keep you organized.

Setting Up the Canopy

6 ALWAYS BE SURE TO ANCHOR THE FRAME

- Lift up one side. Grasp the outer or upper leg with one hand and pull out the inner leg with the other.
- Extend until the button engages.
- Set legs to desired height.
- Insert a stake (G) into the foot of each canopy leg.
- Fill up the weight bags with sand or gravel and simply use the hook and loop strap around each leg.

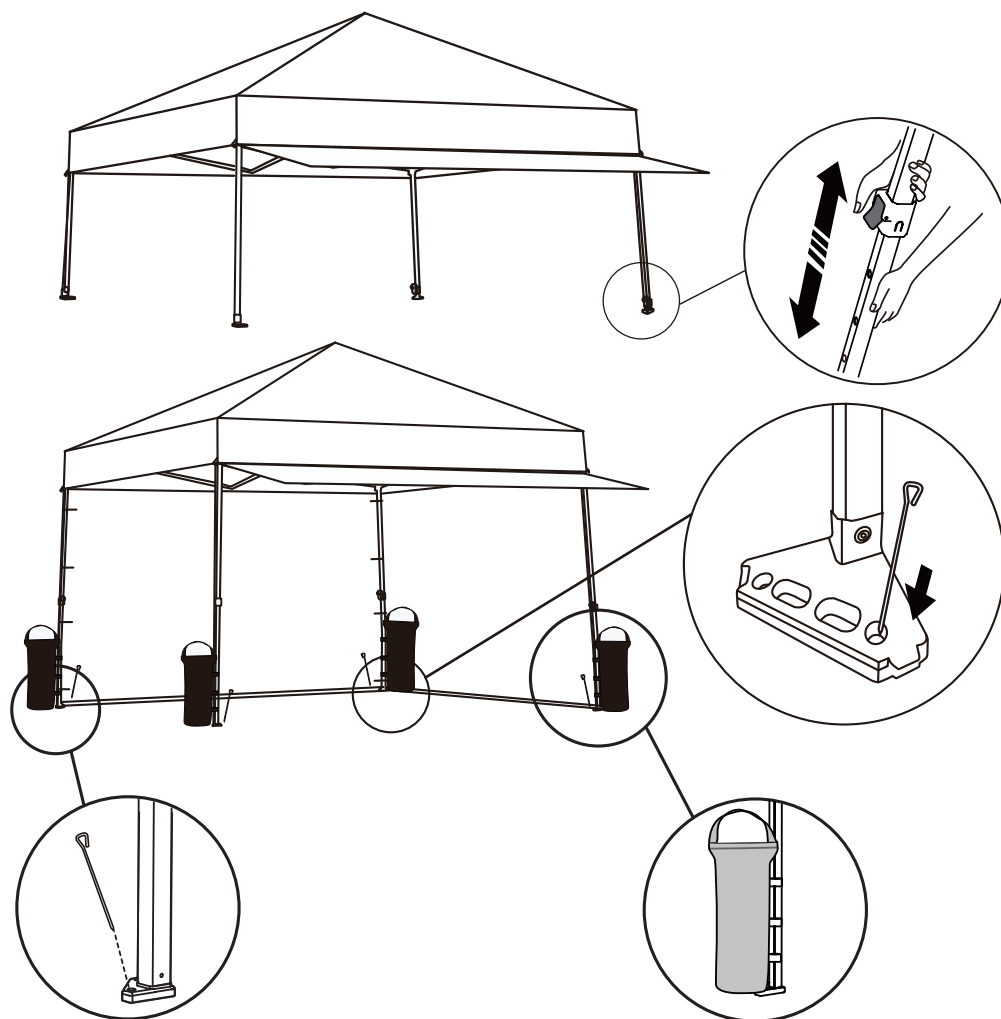



IMPORTANT:

Always secure your canopy with the stakes.

Setting Up the Canopy

7 ST0-N-Go Wheel Installation


- Insert each wheel axel into the hole provided on two of the footplates.
- Lock the wheel tight with the provided hex wrench.

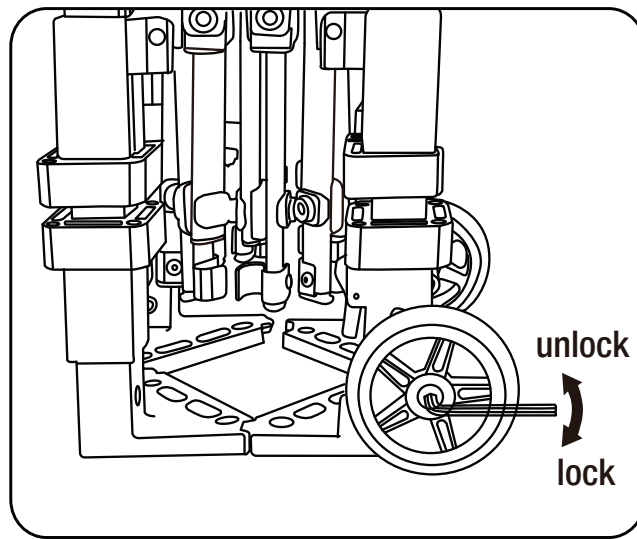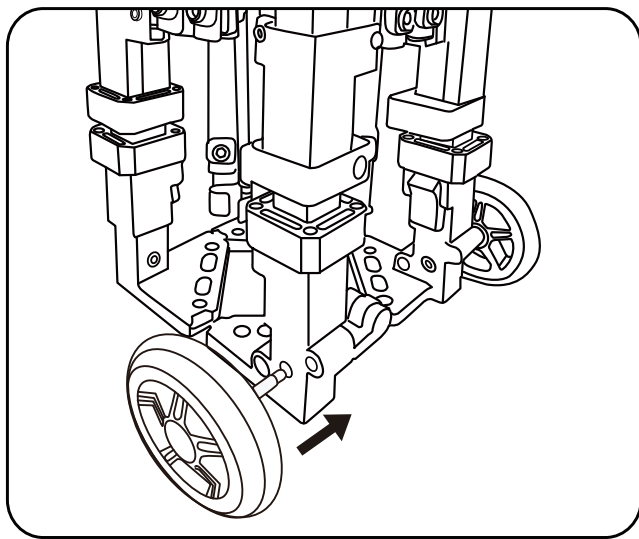

Taking Down the Canopy

1 REMOVING THE SIDEWALL


- Remove all weight pockets and stakes from the ground.
- Untie the hooks to take down it.
- Unfasten the Velcro from the weight bag.

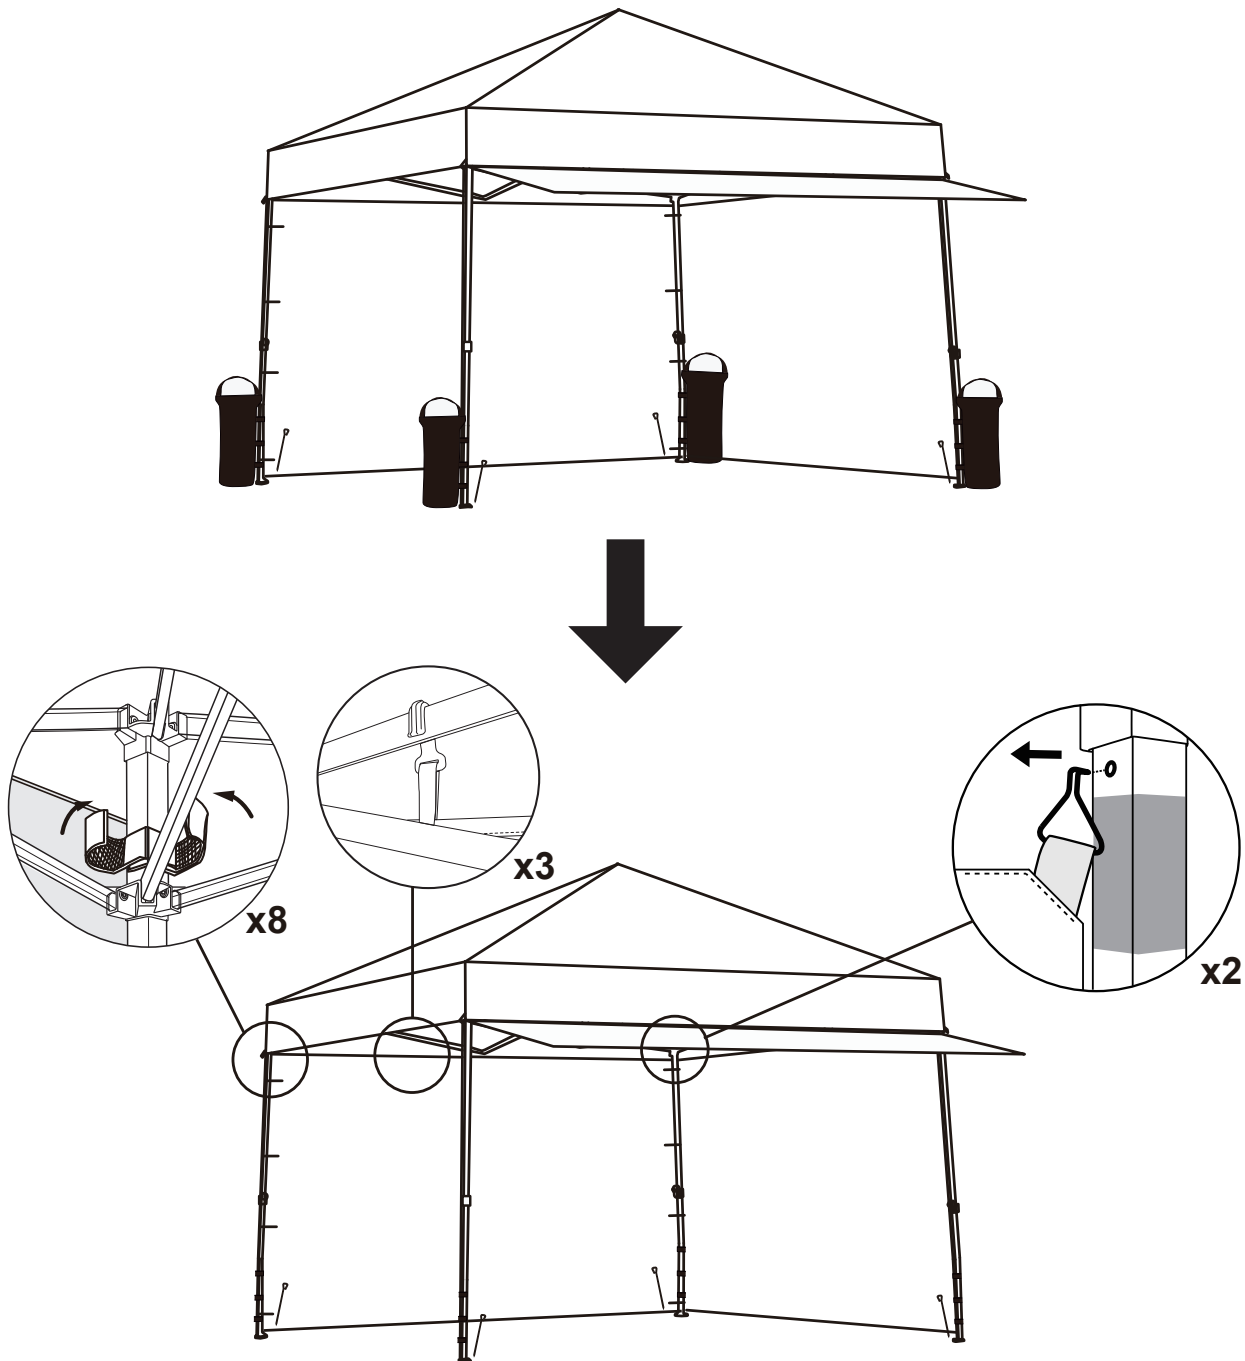

Taking Down the Canopy


2 REMOVING THE STAKES AND RETRACTING THE LEGS

- Press the push button to lower all legs.

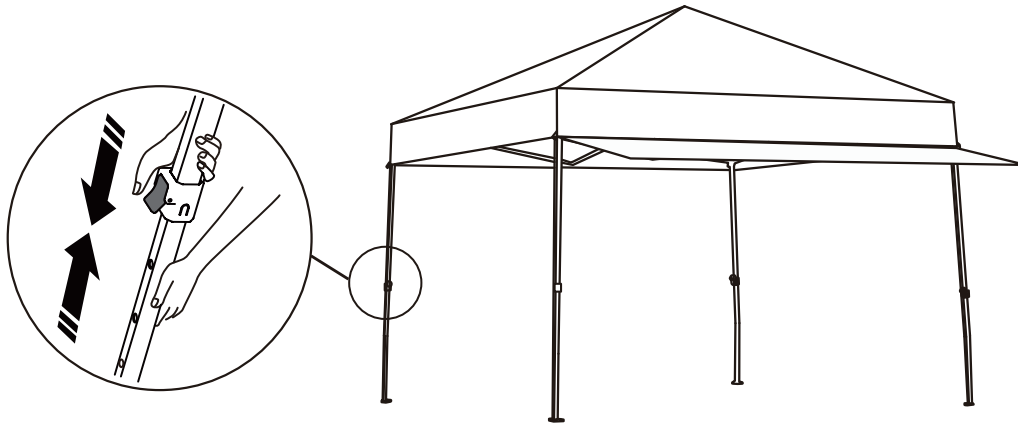

3 REMOVING THE EXTENDED AWNING TOP AND AWNING POLES


- Pull down the extended awning top hook and loop.
- Remove extended awning top.
- Take down the awning poles.

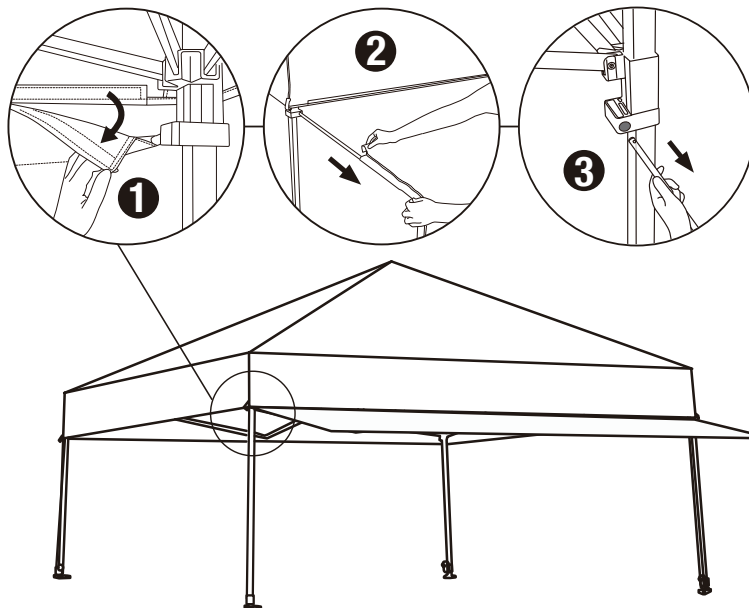

Taking Down the Canopy


4 UNLOCKING THE CANOPY

- From underneath the canopy, press in the red lock button. pull down on the central hub until it is separated from the central pole.

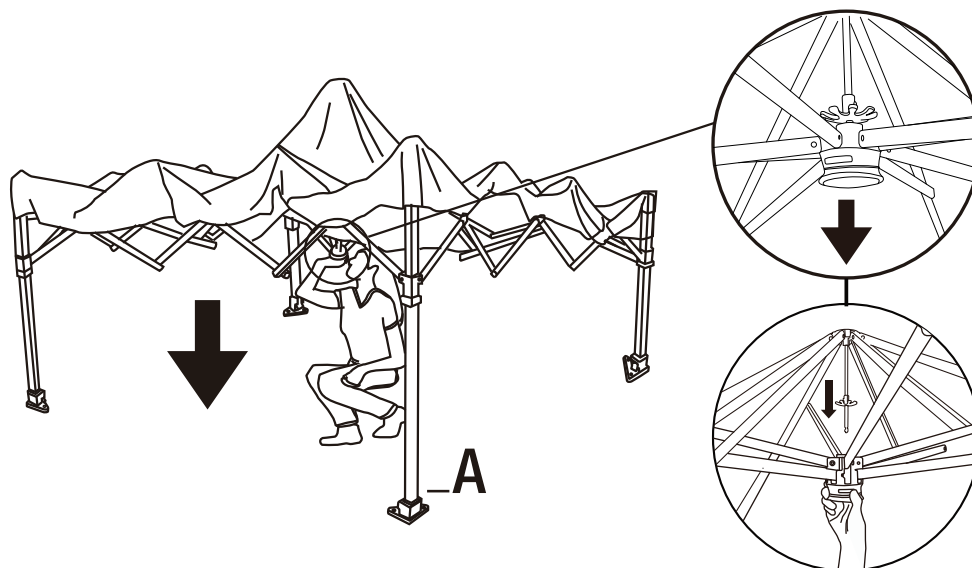

5 FOLDING THE FRAME


- Lift the canopy off the ground 2-3 inches and walk it in from both sides until the frame is fully closed.

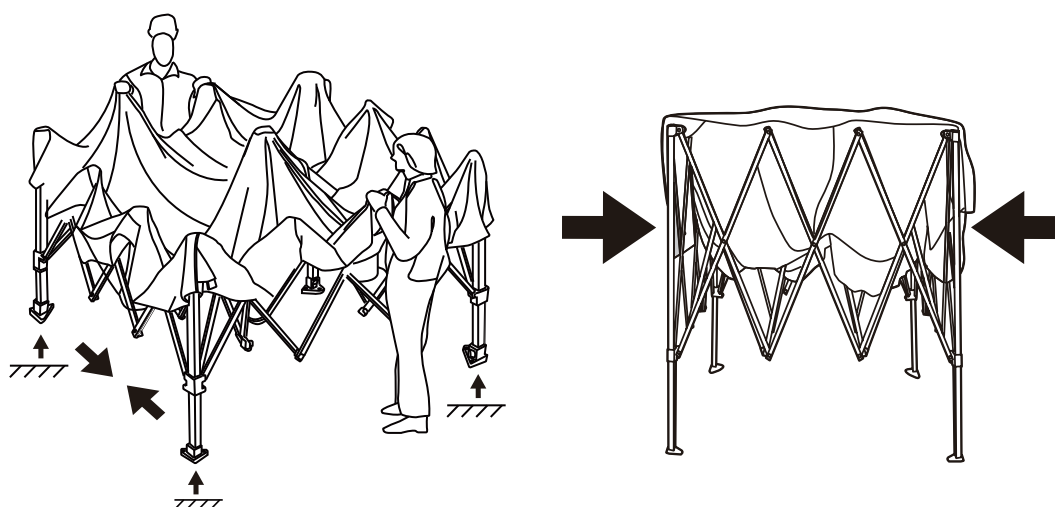

Taking Down the Canopy

6 PACKING THE CANOPY IN THE STORAGE BAG

- Position the cover bag strap to align with the 2 wheeled legs. Slide down the bag over the closed frame. Zip the cover closed.
- Secure the frame with the buckle and tighten the strap.
- Insert red plug as shown. Tighten the strap by pulling down the strap loop.

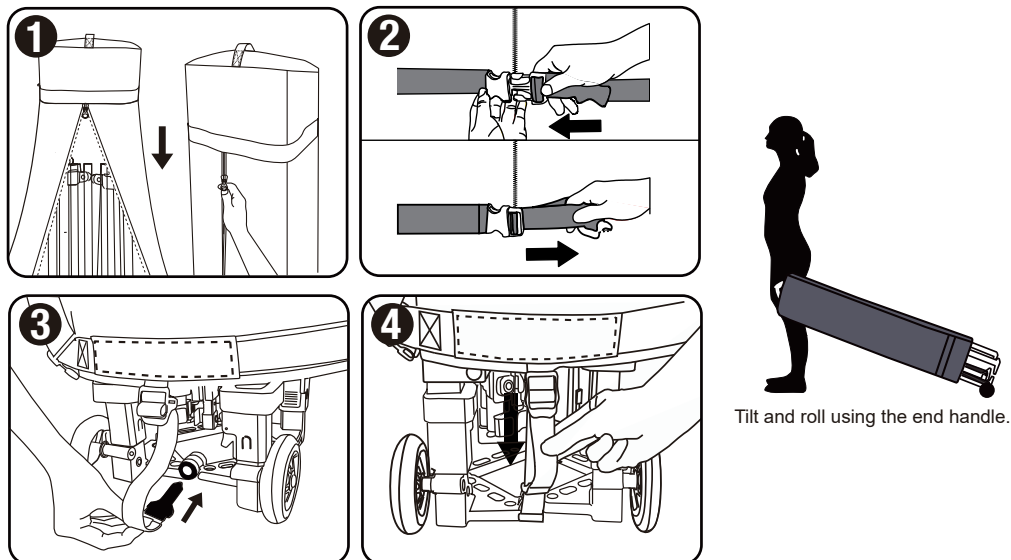


Care and Maintenance


- Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives, or bleach.
- Do not machine wash.
- Never fold or store the canopy when it is wet or damp. Allow it to dry completely to avoid mildew.

Service Parts

To access spare parts, please call toll free 1-888-502-9589, Monday - Friday, 9:00 AM - 4:00 PM PST; or visit www.crown-shades.com; or email to care@OutdoorDesignz.com

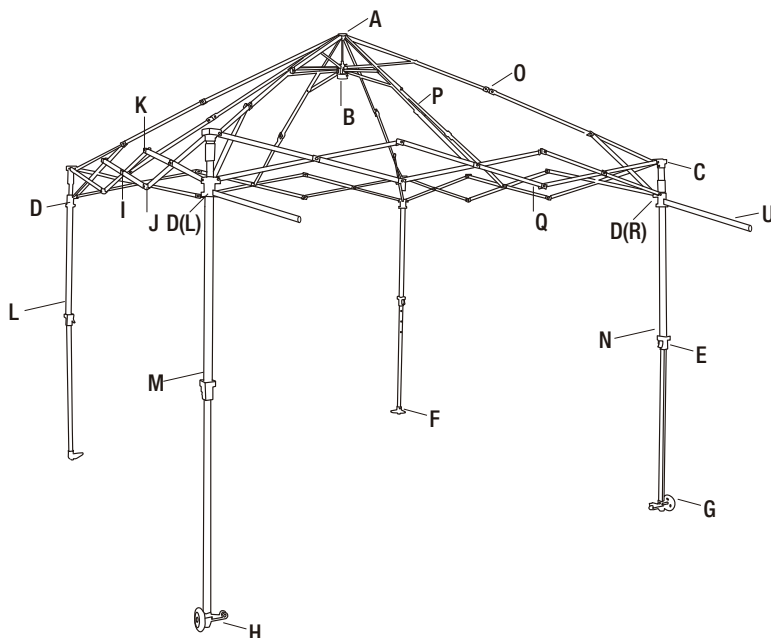

Part	Description	Reference No.
A	Central Pole	UNCP98BK08
B	Central Bottom Hub	HCCH00BK00
C	Leg Cap-31.6Aluminum	UNLC12BKHY
D	Slider-31.6 Aluminum	UNLS12BKHY
D (L)	Slider-LE31.6 Aluminum	UNLS12BKLE
D (R)	Slider-Ri31.6 Aluminum	UNLS12BKRI
E	Leg Extender	UNLE12BKHY
F	Plastic Foot Without Wheel	UNFT00BKNW
G	Plastic Foot (Right)	UNFT00BKRI
H	Plastic Foot (Left)	UNFT00BKLE
I	M5 Bolt Kit (A)	UNBKM5BKAA
J	M5 Bolt Kit (B)	UNBKM5BKBB
K	M5 Bolt Kit (C)	UNBKM4BKCS
L	Leg Assembly Without Wheel	UNLA12WHHY
M	Leg Assembly (Left)	UNLA12WHLE
N	Leg Assembly (Right)	UNLA12WHRI
O	Ceiling Assembly	HCCA10WH00
P	Ceiling Assembly Support	HCCA10WHCS
Q	Eave Assembly	UNEA10WH00
R	Top Fabric-Blue	EBT610WH00
S	Carry Storage Bag	SDCB10BKST
T	Extended Awning Top	UNAT20WH00
U	Awning Pole	UNAP20WH00
V	Side Wall	UNS110WH00
W	4" PU Wheel	WH04BKPU00

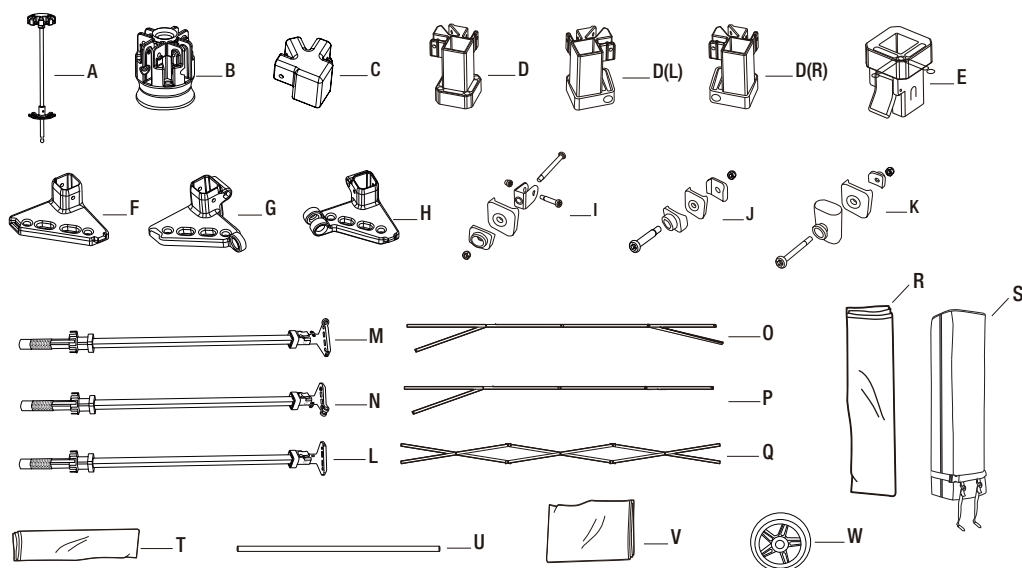

Please contact 1-800-305-1726 for further assistance.



Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-800-305-1726

HOMEDEPOT.COM

Retain this manual for future use.