

Electric Fireplace

Instruction Manual

Electric Fireplace Packing List

1	Electric Fireplace
1	Remote Control
1	Battery
1	Instruction Manual
1	Fastener Package



QUICK REFERENCE GUIDE

- I. Prior to installation, please ensure:
 1. The rated voltage of your heater fits the output voltage of your outlet;
 2. The light bulbs in your heater are in good condition. To check this, please follow the instructions for replacing the light bulbs on section MAINTENANCE.
- II. The heater on your electric fireplace may emit a slight, harmless odor when first used. This odor is a normal condition caused by the initial heating of internal heater parts and will not occur again.
- III. If your heater does not emit heat, please ensure the Heater Switch is on. For further information, please consult section Operation of the Practical User's Guide.

NOTE

Procedures and techniques that are considered important enough to emphasize.

CAUTION

Procedures, which if not carefully followed, will result in damage to the equipment.

WARNING

 
Procedures, which if not carefully followed, will expose the user to the risk of serious injury, illness or death.

IMPORTANT INSTRUCTIONS

WARNING

You should read and always follow the important instructions below to reduce the risk of fire, electric shock, and injury to persons.

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces, such as surfaces near the heater outlet or light bulbs. The grill directly in front of the heater outlet becomes hot during heater operation. If provided, use handles when moving this heater. Keep combustible materials such as clothes, pillows, furniture, bedding, papers and curtains at least 3 feet from the front of this appliance.
3. **CAUTION:** Whenever the heater is left operating and unattended, extreme caution is necessary if children or invalids are nearby.
4. Do not install the heater directly on carpet or a similar surface, which may restrict air circulation beneath the unit.
5. Always unplug heater when not in use.
6. To disconnect heater, turn controls to off then remove plug from outlet.
7. Do not use outdoors.
8. This heater is not intended for use in wet locations such as bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
9. Do not operate any heater with a damaged cord or plug, or if the heater has malfunctioned, or if the heater has been dropped or damaged in any manner. Discard heater, or Return heater to authorized service for examination, adjustment or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs and runners. Arrange cord away from traffic areas and where it will not be tripped over. Do not route cord under furniture or appliances
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or may damage the heater.
12. To prevent a possible fire, do not block heater outlet or any ventilation or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

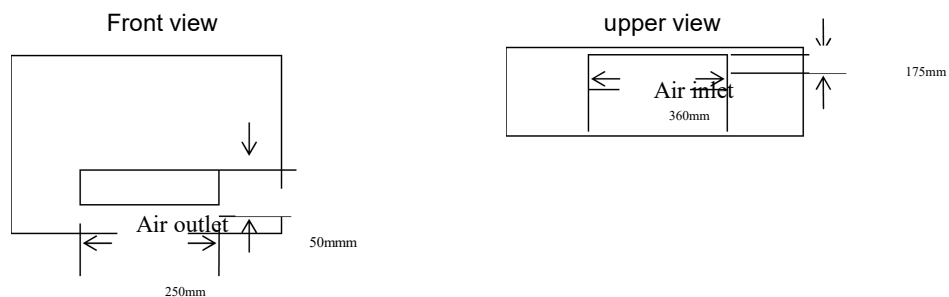


13. All electrical heaters have hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored or where the unit will be exposed to flammable vapours.
14. Do not modify this heater. Use it only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
15. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
16. Do not burn wood or other materials in this heater.
17. Do not strike heater glass.
18. Always use a certified electrician should new circuits or outlets be required.
19. Always use properly grounded, fused and polarized outlets.
20. Always use ground fault protection where required by electrical code.
21. Always disconnect power before performing any cleaning, maintenance or relocation of the heater.
22. When transporting or storing the heater and cord, keep in a dry place and free from excessive vibration.
23. The heater must not be located immediately below a socket-outlet.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. Heater is for household use only.

GROUNDING INSTRUCTIONS

This heater is for use on 120 volts. The cord has a plug as shown at A in Figure. An adapter as shown at C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

 Figure

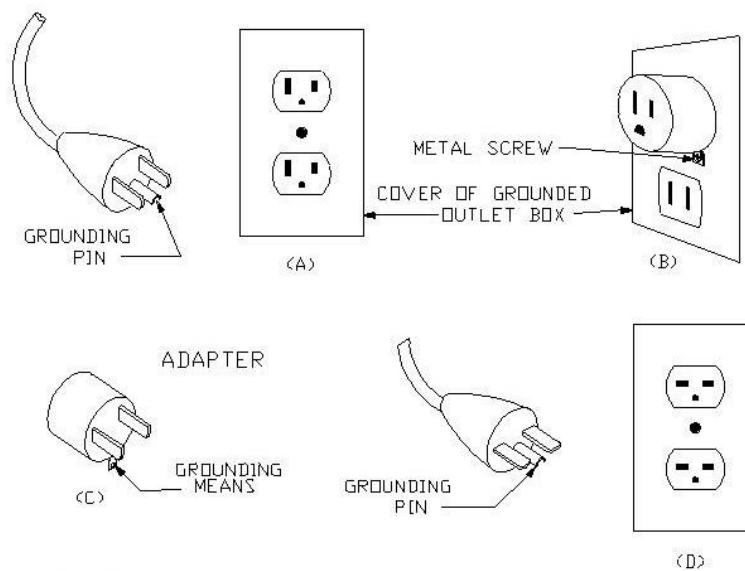

AA210

INSTALLATION

This section provides step-by-step instructions for installation of your heater.

WARNING

The outlet must be 15A/120V.

CAUTION

Do not remove the four rubber feet at the bottom of the heater or install the heater directly on soft surfaces, which may restrict air circulation. Otherwise, it may cause a risk of fire or damage.

1. Select a suitable location, which is not susceptible to moisture, safe, dust free, away from high traffic and away from things may catch fire or block openings such as drapes, furniture, etc.

NOTE

This heater is household use only.

It is a good idea to place your heater near an existing outlet for ease of electrical hook up.

2. Place the heater in the desired location to see how it will look in the room.
3. The size of IN2400 is: 24" W x 18 ½" H x 7 ¾" D
The size of IN2600 is: 26" W x 23" H x 7 ¾" D
The size of IN3000 is: 30" W x 25 ½" H x 7 ¾" D
4. If there is no 15A/120V outlet near the desired location, install a new one.

WARNING

Do not attempt to wire you own new outlets or circuits. To reduce the risk of fire, electric shock or injury to persons, always use a licensed electrician.

5. Make sure the heater is switched off (refer to operation instruction section).
6. Plug the heater into a 15A/120V outlet. Wiring the cord along the corner of wall.
Plug must be accessible after installation.

OPERATION

This section will explain the function of each convenient control.

NOTE

The heater may emit a slight, harmless odor when first used. This odor is a normal condition caused by initial heating of internal heater parts and will not occur again.

• Control Panel Operation

A. Buttons and Indicators

There are four buttons on the remote control, and four on the control panel of the heater, each pair of buttons with the same label perform the same function, the back of it is manual switch near the power cord:

<ON/OFF> button is power switch of the heater;

<DIMMER> button is used to adjust the brightness of simulated flame and logs;

<LOW> button turns the fireplace insert on and switches it to low-power status. If the fireplace insert is already working at low-power status, to push this button will turn the fireplace off.

<HIGH> button turns the fireplace insert on and switches it to high-power status. If the fireplace is already working at high-power status, to push this button will turn the fireplace off;

There are four indicators on the control panel:

 
⏻ is the power indicator, it lights up when the heater is working, and turned off when the heater is turned off;

💡 indicates the status of the simulated flame and logs.

🔥 indicates the heater is working in low-power status;

🔥 indicates the heater is working in high-power status.

The red window on the control panel of heater is the eye of receiver, please do not cover.

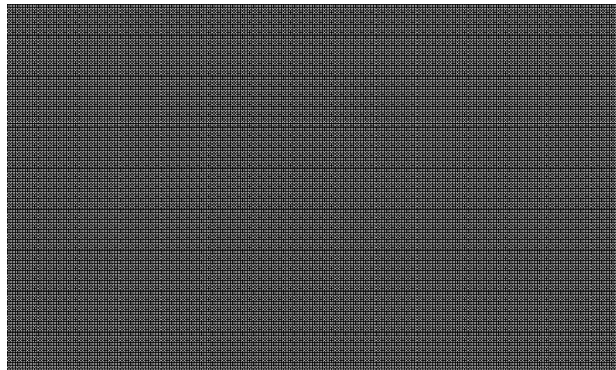

B. Operation

On the first use of remote control, install the battery first: open the battery box by sliding its cover along the arrow, install one (1) coin cell battery according to the marks in the box, and slide the cover to its original position. If no battery installed or the battery is not working, the remote control will be unusable.

To use the remote control effectively, point it to the electric fireplace and keep a distance of 1-5 meters.

There are four buttons marked the same as buttons on the remote control, each pair of them perform the same function, choose as you favour.

1. **On/Off Switch.** Press on/off switch to turn fire on. The indicator  lamp will brighten up in the control panel. Press the <ON/OFF> button again; the fireplace insert will be powered off.
2. **Flame Effect Dimmer.** Adjust the brightness of simulated flame and logs. When the fireplace insert is powered on, flame is turned on automatically. Press <DIMMER> button to adjust the brightness, the  lamp will be flashing. During the dimming cycle the fire will slowly dim then brighten allowing user to choose suitable level. Press a second time to stop cycle when the desired brightness level is obtained.
3. **Heater Low Heat (750 W).** Press <LOW> button once to switch the fireplace insert to low-power status. The indicator lamp  will brighten up. Press again the <LOW> button to turn it off.
4. **Heater High Heat (1500 W).** Press <HIGH> button once to switch the fireplace insert to high-power status. The indicator lamp  will brighten up. Press again the <HIGH> button will turn it off.

NOTE: Before the heater emits heat or after it stops producing heat, the hot air outlet may output air for 10 seconds. This is designed to protect the circuit.

5. Switch off the heater when you leave it for a long time.
6. Remove the lithium battery from the appliance before it is scrapped.
7. The lithium battery needs to be disposed of safely.
8. Roll up the power cord in the supports when the fireplace is not in use. If you select to store your heater fully assembled, be sure to cover it, to protect it from accumulating dust.
9. Temperature Limiting control will automatically turn the unit off if it reaches a certain temperature. Unplug the unit. When the temperature falls, the thermostat will be restored. Connect the plug to power and heater will work.

MAINTENANCE

WARNING

Disconnect power before attempting any maintenance or cleaning to reduce the risk of fire, electric shock to persons or damage.

Light Bulb Replacement

Light bulbs need to be replaced when you notice a dark section of the flame or when the clarity and detail of the log exterior disappears. There are two bulbs under the log set for IN2400 and IN2600. Four bulbs for IN3000.

WARNING

Allow at least 5 minutes for light bulbs to cool off before touching bulbs to avoid burning of skin.
Except the light bulb replacement, any other servicing should be performed by an authorized service representative.

I. Bulb Requirements

Light bulbs are 40 Watt, 120 volts Candelabra with an E-12 small socket base.

CAUTION

Do not exceed 40 watts per bulb

II. Operation

1. Open the light bulb area:

 
 
The light bulb area is at the back of electric fireplace, see "E". There are 6 screws on it. Loosen the screw and then you can open it.

2. Examine the bulbs to determine which bulbs require replacement.

3. Remove old bulb and replace a new one. Hold the socket while unscrewing or screwing bulbs.

4. Replace the cover of light bulbs.

5. Done.

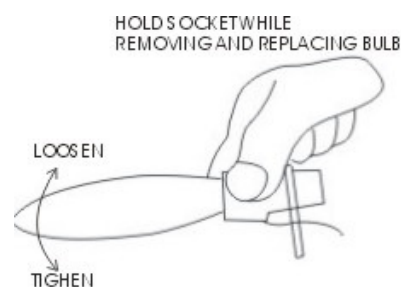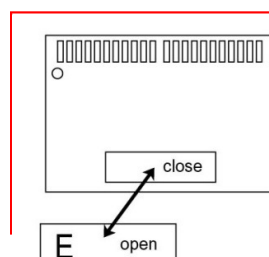

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.