 
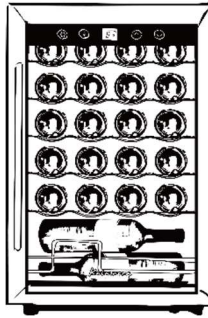 
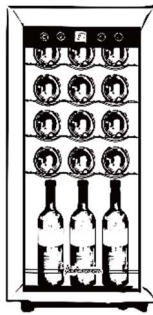 


Kalamera



INSTRUCTION MANUAL

Compressor Wine Cooler

12-Bottle / 18-Bottle / 24-Bottle / 101-Cans


MODEL: KRC-12SS / KRC-18SS / KRC-24SS / KRC-6893

Please read carefully and follow all safety rules and operating instructions.


Content

Your Wine/Beverage Cooler	1
Technical Data	2
Safety Precautions	3
Important Precautions	4
Installation Instructions.....	4
Operating Your Wine/Beverage Cooler	5
Care and Maintenance	6
Trouble Shootings.....	7
Warranty	8

 
Your Wine/Beverage Cooler

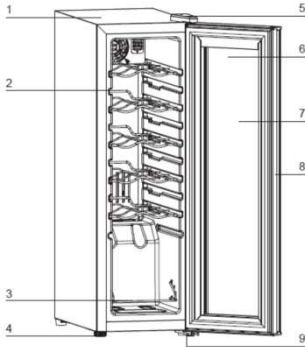


KRC-12SS

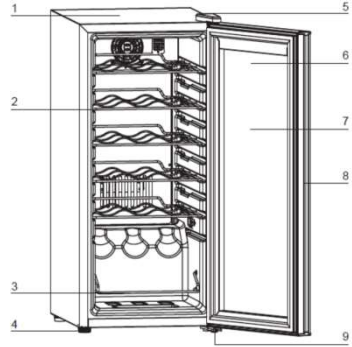 

KRC-18SS

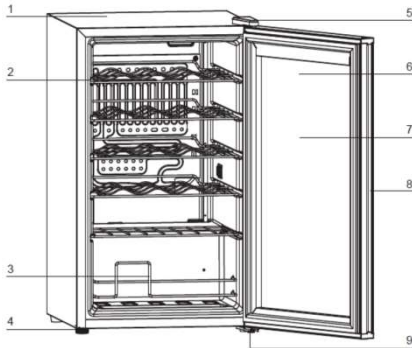 

KRC-24SS

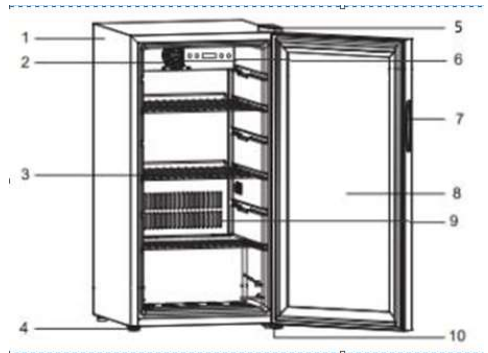 

KRC-6893

- 1. Cabinet
- 2. Shelf
- 3. Retainer Bar
- 4. Foot
- 5. Upper Door Hinge with Cover


- 6. Control Panel
- 7. Glass Door
- 8. Handle
- 9. Bottom Hinge


Technical Data

Model No.	KRC-12SS	KRC-18SS	KRC-24SS	KRC-6893
Capacity	12bottles	18bottles	24bottles	2.4cu.ft
Voltage	110-120V	110-120V	110-120V	110-120V
Rated Current	1.2A	1.2A	1.2A	1.2A
Frequency	60Hz	60Hz	60Hz	60Hz
Input Power	85W	85W	85W	85W
Temperature Range	40~66°F (5~19°C)	40~66°F (5~19°C)	40~66°F (5~19°C)	38~65°F (3~18°C)
Net Weight	37.5lbs	43.0lbs	47.0lbs	47.0lbs
Gross Weight	41.9lbs	46.6lbs	52.9lbs	52.9lbs
Product Size	9.9x17.7x31.2	13.6x17.7x30.3	16.9x17.7x29.1	16.9x17.7x29.1
Packing Size	13.8x21.7x33.5	17.5x21.7x32.3	20.7x21.5x31.5	20.7x21.5x31.5

Electrical Circuit Diagram

  For KRC-12SS / KRC-18SS:

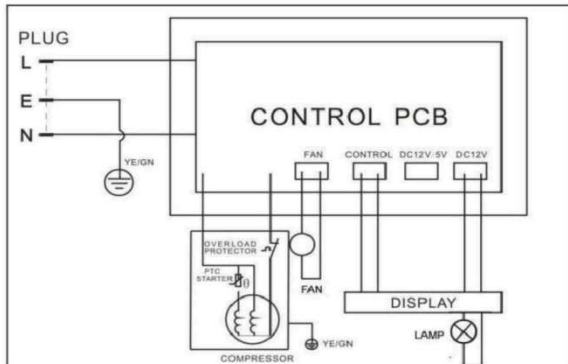

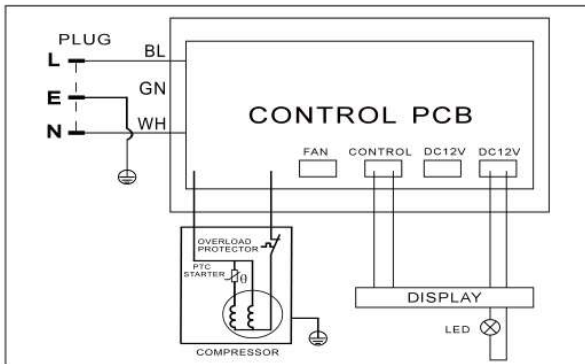

Safety Precautions

To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions.



- **PLEASE READ** all instructions before installing, operating, or servicing the appliance.
- **Danger and Warning:** Failure to follow this safety statement will result in severe personal injury or death, property, or equipment damage.
- **RISK OF CHILD ENTRAPMENT.** Before you throw away your old refrigerator or freezer, take off the doors and leave shelves in place so children may not easily climb inside. Keep children away from the wine cooler, avoid them put fingers in air outlet on the kick plate.
- **⚠️ SHOCK HAZARD -** Electrical Grounding required.
- Never attempt to repair or perform maintenance on the unit until the electricity has been disconnected.
- Never remove the round grounding prong from the plug and never use a two-prong grounding adaptor.

- Altering, cutting of power cord, removal of power cord, removal of power plug, or direct wiring can cause serious injury, fire or loss of property and life, and will void the warranty.
- Never use an extension cord to connect power to the unit.
- Always keep the working area dry.

Important Precautions

- Do not lift unit by door handle.
- Do keep the door closed before installing into cabinet.
- Be sure the kick-plate on the front bottom is free from obstruction. Obstructing free airflow can cause the unit to malfunction and will void the warranty.
- Allow unit temperature to stabilize for 24 hours before use.
- Do not block any internal fans.
- Use only genuine supplier's replacement parts. Imitation parts can damage the unit, affect its operation or performance, and may void the warranty.

Installation Instructions






Before using your wine cooler:

- Remove the exterior and interior packing.
- Before connecting the appliance to the power outlet, let it stand upright for approximately 24 hours. This will reduce the possibility of malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded.
- To level your appliance, adjust the front legs at the bottom of the appliance.

Operating Your Wine/Beverage Cooler

- It is recommended that the wine Cooler be installed in an area where the ambient temperature is between 41-90°F (5-32°C).
- **CONTROL PANEL**



- **SETTING THE TEMPERATURE CONTROL**
 - Your Cooler is equipped with a control panel lock feature which will lock itself automatically 30 seconds after the last time a button is pressed.
 - Press the  button to unlock the control panel.
 - You can manually adjust the temperature inside Cooler by pressing the buttons on the display panel. The two buttons on the panel  and  adjust the temperature in increments of 1°C or 1°F.
 - You can select the temperature to display in Fahrenheit or Celsius by pressing the  button for 3 seconds.
 - You can turn the interior light on or off by pressing the  button.
- **Note**
 - If the unit is unplugged, the power is lost or turned off, you must wait 3 to 5 minutes before restarting the unit if you attempt to restart before this time delay, the Cooler will not start.
 - When you use the Cooler for the first time or restart the Cooler after having been shut off for a long time, there could be a few degrees variance between

the temperature you select and the one indicated on the LED readout. This is normal and it is due to the length of the activation time. Once the Cooler is running for a few hours everything will be back to normal.

Care and Maintenance

Cleaning your wine cooler

- Unplug the wine cooler and remove the bottles.
- Wash the inside with warm water or baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- The outside of wine cooler should be cleaned with mild detergent or warm water.

Moving your wine cooler

- Remove all the bottles.
- Securely tape down all loose items inside your wine cooler.
- Turn the leveling legs up to the base to avoid damage.
- Tape the door.
- Be sure the wine cooler stays in the upright position during transportation.

Trouble Shootings

You can solve many common wine cooler problems easily. Try the suggestion below to see if you can solve the problem before contacting the service center.

PROBLEM	POSSIBLE CAUSE
Wine cooler do not operate.	Not plugged in using different voltage. The circuit breaker tripped or a blown fuse.
Wine cooler is not cold enough.	Check the temperature control setting. The door is open too often. The door is not closed completely. The door seal does not seal properly. The wine cooler does not have the correct clearance.
The light does not work.	Main control board does not work. PCB Problem. There is some problem with the plug.
Vibrations.	Check to assure that the wine cooler is leveled.
The wine cooler seems to make too much noise	The wine cooler is not leveled. Check the fan.
The door will not close properly.	The wine cooler is not leveled. The doors were reversed and not properly installed. The seal is weak. The shelves out of position.
LED could not display.	Main control board does not work. PCB Problem. There is some problem with the plug.
LED display error.	Weak quality of display. Temperature point is out off.
Buttons are not functional.	Temperature controller panel is damaged.

Warranty

KALAMERA LIMITED WARRANTY

Limited One Year Warranty

Warranty Terms:

The manufacture warrants to the original purchaser of this product that the product will be free from manufacturing defects in workmanship and material for a period of 1 year from the date of original purchase when this major appliance is operated and maintained according to instructions attached to or furnished with the product.

The purchaser must contact the manufacture Customer Service Department and provide a description of the defective part, including digital pictures if requested, with buying channel, serial number, order ID and the original purchase documentation as validation of warranty coverage date.

Once confirmed that your appliance is eligible for the warranty service, KALAMERA Customer Service Department will contact you by mail or phone about the maintenance solution. Replacement parts and/or units will be new, re-manufactured or refurbished and is subject to the manufacturer's discretion. KALAMERA is not responsible for damage resulting from shipper mishandling or improper packing. Do not return a defective product to the place of purchase. Product received without a return authorization number will be refused.

After receiving the unit, please do not remove, altered original model/serial number, that will influence the after-sale service. Please carefully keep the user manual and warranty card for future reference.

If you need service, first see the "Troubleshooting" section of the User Manual. After checking, you may find additional help by mailing or calling us.

Write down the following information about your product to better help you obtain

assistance or service if you ever need. You can find this information on the model and serial number located on the product.

Dealer name	
Model number	
Serial number	
Purchase date	

Warranty Exclusions:

The warranty will not apply if damage is caused by any of the following:

1. Damage to the product due to misuse, mishandling and abuse.
2. Product not assembled or installed according to manufacturer's instruction.
3. Repairs by unauthorized persons or service centers with unauthorized spare parts.
4. Failure to provide reasonable and necessary maintenance.
5. Improper power supply such as low voltage, defective household wiring or inadequate fuses.
6. Accident, alteration, misuse, or abuse of the appliance such as using non-approved accessories, inadequate air circulation in the room or abnormal operating conditions, such as extreme temperatures.
7. Damage in transit or when moving the appliance.
8. Use of force or damage caused by external influences.
9. Store improper things.
10. Normal wear and tear.
11. Cosmetic damage, including scratches, dents, chips, or other damage to the finish of your product, unless such damage results from defects in materials or workmanship and is reported to us within 30 days from the date of purchase.
12. Fire, water damage, theft, war, riot, hostility or acts of God such as hurricanes, floods, etc. In addition to consequential damage and incidental damages, such as damage to person or property are not coverable under this warranty.
13. Partially or completely dismantled appliances.

To obtain service or information, please send email to

service@kalamera.com

Product contents and specifications may change without notice.

Copyright © 2022 KALAMERA INC

www.kalamera.com