 


Manual

Remove contents from the bag and ensure you have all components listed below

PACKAGE COMPONENTS

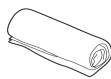

Tent



2*Tent Tie Straps



 
Air Pump



6*Guy Ropes



Tent Bag

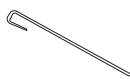

18*Stakes

 
If you are missing any components, please contact us. We will provide you with a satisfactory solution promptly.
Amazon Contact: Log in to your Amazon account > select "Your Orders" > find the order ID > click "Contact Seller"

ASSEMBLE THE TENT

1. Spread out the tent, secure the ground stakes at the four corners of the tent floor, and set up the air pump.



2. Open the first layer of the valve cap, connect the air pump, and inflate until the pressure gauge needle points to the green zone on the dial. Once the desired pressure is reached, remove the air pump and twist shut the outer valve cap (adjust the bending position as needed during the inflation process to ensure proper tent inflation). There are two valves that need to be inflated.

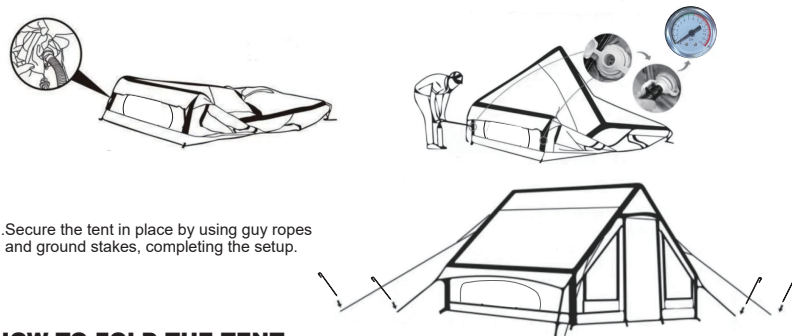

3. Secure the tent in place by using guy ropes and ground stakes, completing the setup.

HOW TO FOLD THE TENT

- 1) Open the doors and windows to allow air to escape. Unscrew the valve cap and release the air.
- 2) Fold the tent in half and roll it towards the valve, expelling the remaining air columns.
- 3) Roll up the folded tent, making sure its width is narrower than the length of the tent storage bag. Larger tents may not fit into the tent storage bag.
- 4) Securely roll the tent and fasten it with straps before placing it inside the tent storage bag.

WARNING

- Tents provide temporary shelter in outdoor environments and are not suitable for long-term use. While tents can withstand moderate weather changes, they may be completely destroyed in extreme conditions such as heavy rain, strong winds, or blizzards. Please pay attention to weather conditions and plan your camping accordingly.
- Keep all flames and heat sources away from the tent fabric.
- Avoid cooking, smoking, high temperatures, and open flames inside the tent as they pose a significant risk to the tent. If cooking inside the tent is unavoidable due to severe external weather, use aluminum foil or other heat-insulating materials under the stove and ensure all doors and windows of the tent are open for ventilation.
- Avoid using unprotected open flames, such as candles, as lighting sources inside the tent at night.

CAUTION

- Do not refuel lanterns, stoves, or heaters inside the tent.
- Do not cook inside the tent.
- Do not use gas heaters inside the tent.
- Do not store flammable liquids inside the tent.
- Ensure proper ventilation inside the tent.
- After use, dry the tent thoroughly and store it in a dry condition.

CHOOSING A CAMPSITE

- Select a flat ground without rocks, tree branches, or other hard or sharp objects to set up the tent. Avoid setting up the tent in hazardous camping sites such as mountain tops, cliffs, or riverbanks. Please follow the instructions for setup, ensuring the availability of ground stakes and guy ropes to achieve a fully taut and even tent structure.