


USE AND CARE GUIDE

GRAND MARINA 2PK KD DINING CHAIR SET

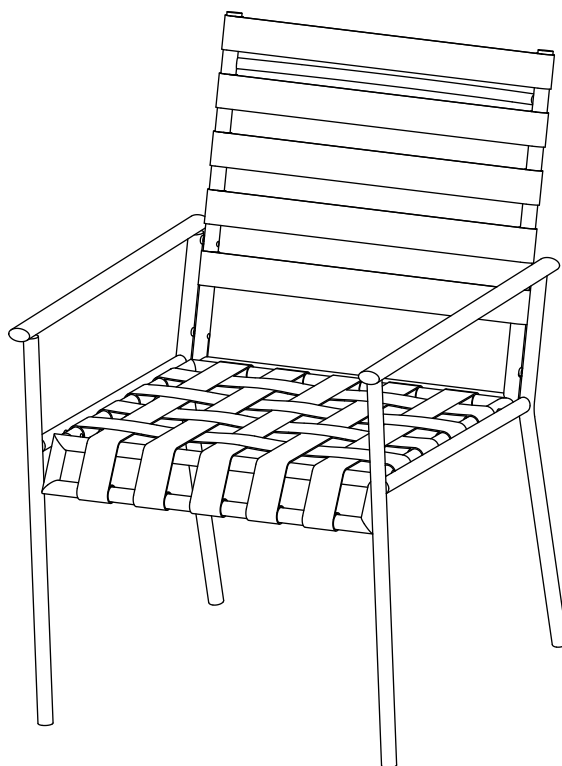

Questions, problems, missing parts?
Before returning to the store, call StyleWell Customer Service
8 a.m. – 7 p.m., EST, Monday-Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this Grand Marina KD Dining Chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!

Table of Contents

Table of Contents.....	2	Pre-installation.....	4
Safety Information.....	2	Planning Installation.....	4
Warranty.....	3	Hardware Included.....	4
What is Covered.....	3	Package Contents.....	5
What is Not Covered.....	3	Installation.....	6
		Care and Cleaning.....	8

Safety Information

SAVE THESE INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- ❑ Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- ❑ Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



DANGER: Please keep children out of the assembly area at all times.



IMPORTANT: Please check the tightness of the bolts at least every 90 days.

Warranty

THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.

1 YEAR LIMITED WARRANTY

WHAT IS COVERED

Residential use of this furniture is warranted for a one (1) year limited warranty period for the frame construction. The warranty is valid from the date of purchase and applies only to the original purchaser. If your Stylewell outdoor furniture fails structurally during normal use (other than damage as a result of dropping or breaking a cast part) within one (1) year of purchase, the manufacturer will repair or replace the frame at its discretion with the same or similar product if the original product is discontinued, at no charge. Cushions are warranted for a one (1) year period against seams separating or tearing. Fabric is covered under the 1 year limited warranty. The finish is warranted against peeling, cracking or blistering for a period of one (1) year provided the product has not been scratched or abraded. Scratches and chips resulting from normal wear and tear are not covered. Straps and/or wicker weave are warranted for a period of one (1) year against separation or tearing. Fading of the finish, straps and/or wicker weave resulting from exposure to elements is not covered. Stains as a result of chemical spills and certain food items are not covered.

WHAT IS NOT COVERED

The following are expressly excluded from warranty coverage: failure caused by unreasonable or abusive use; furniture that was sold as clearance items, display models, or items purchased in "as is" condition; freight damage; furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly; normal fading of straps and fabric; discoloration of frame or fabric from exposure to elements, oils, spills, fluids or chemicals; table top breakage; rust, hardware corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures; glass table tops; purchased or replacement parts; and plastics. Also excluded from warranty coverage is lost time of use and/or money, inconvenience, travel, packaging, or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product. Warranty is to the original purchaser when items are purchased from one of our authorized retailers, and is not transferable. All warranty claims must be submitted with a dated register receipt within the warranty period. Should replacement of the warranted item be unavailable, the manufacturer reserves the right to substitute items of its choice similar in style, color and quality. For quality control purposes and verification, we reserve the right to request photographs of the damaged items(s). The terms of this warranty are subject to change without notice. Shipping and handling charges are all times the responsibility to the claimant.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-installation

PLANNING INSTALLATION

PLEASE READ COMPLETE INSTRUCTION MANUAL PRIOR TO ASSEMBLY!

Identify all parts in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.


TOOLS REQUIRED



HARDWARE INCLUDED



NOTE: Hardware shown to actual size.

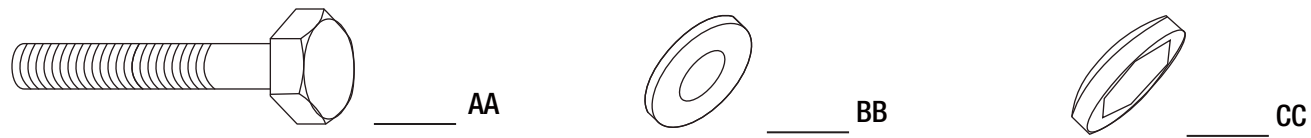


Part	Description	Quantity
AA	M6*35 Hex Bolt	16+1
BB	M6 Washer	16+1
CC	M6 Hex Bolt Cap	16+1
DD	Socket Wrench	1


4050b_2pk-HW - Hardware Kit

Pre-installation (continued)


PACKAGE CONTENTS

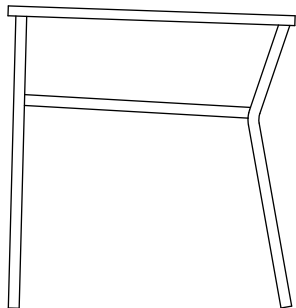


_____ **A₁**
4050b_2pk-A1-AL - Left Arm

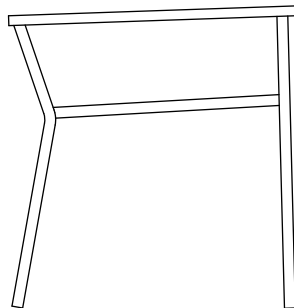

_____ **A₂**
4050b_2pk-A2- AR - Right Arm

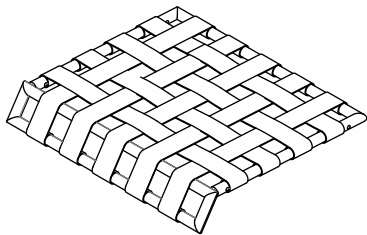

_____ **B**
4050b_2pk-B-S - Chair Seat

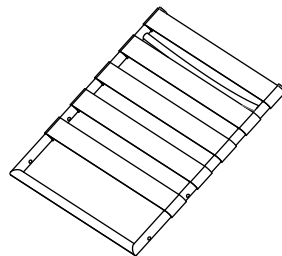

_____ **C**
4050b_2pk-C-B - Chair Back

Part	Description	Quantity
A ₁	Left arm	2
A ₂	Right arm	2
B	Seat	2
C	Back	2


Installation

1 Attaching The Leg

- Place the seat frame (B) and arms (A₁) and (A₂) on a soft, flat, non-abrasive surface.
- Attach the left arm (A₁) and right arm (A₂) to the seat frame (B) using the M6*35 hex bolts (AA) and M6 washers (BB).




NOTE: Do not fully tighten the bolts, only hand tighten until assembly is complete. Then fully tighten with the provided wrench.

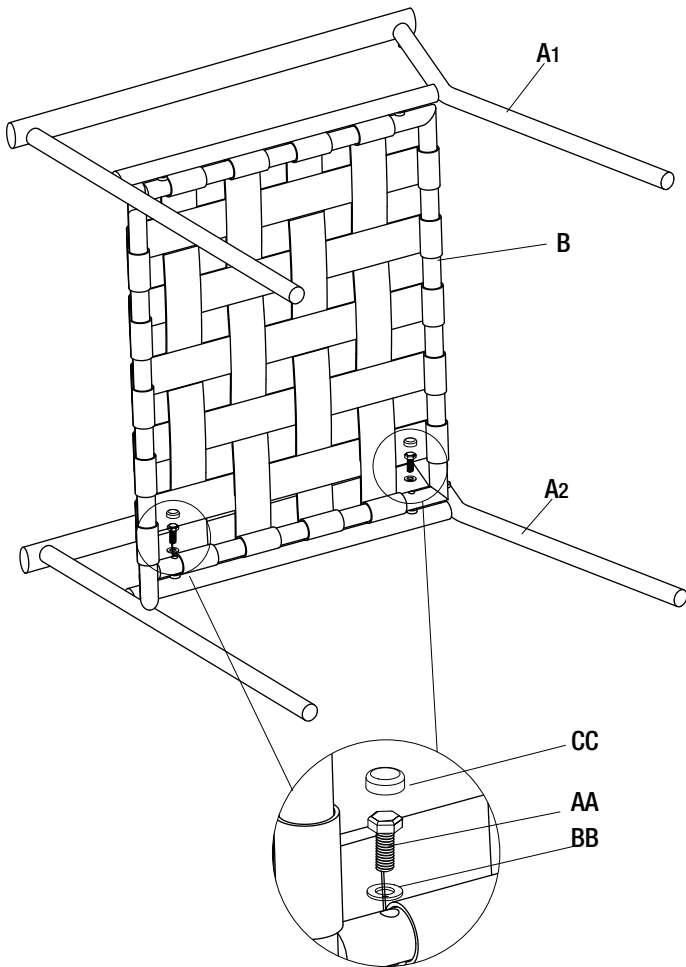

2 Attaching The Back


- Attach the back (C) to the arms (A₁) and (A₂) using the M6*35 hex bolts (AA) and M6 washers (BB).
- Please ensure all the bolts are assembled correctly. Tighten all the hex bolts (AA) with the wrench (DD). Attach the hex bolt caps (CC).

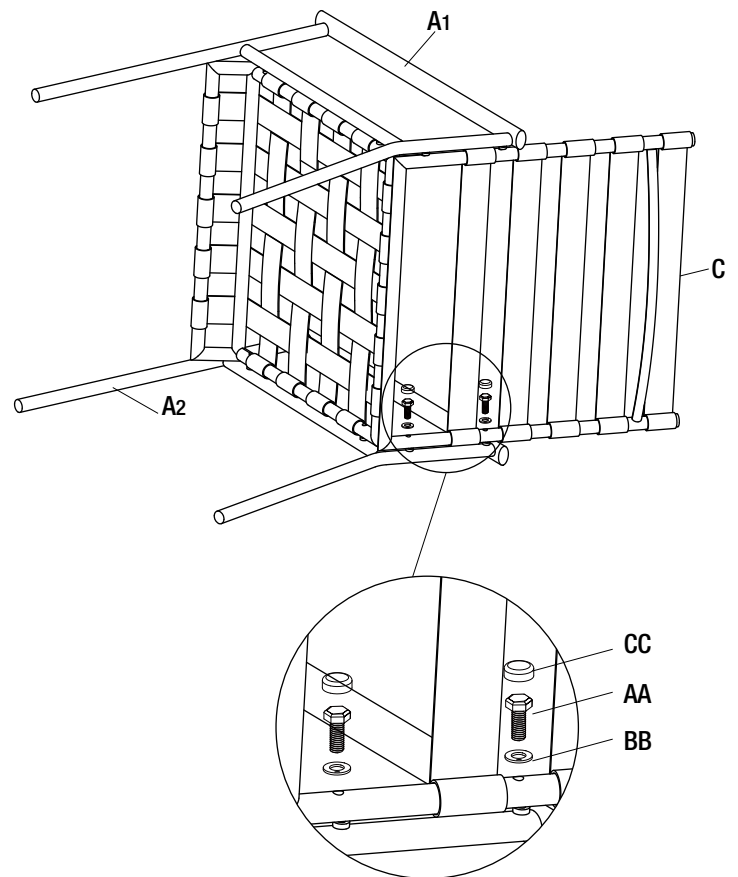

Installation (continued)

3 Positioning The Chair

- ☐ The chair is now ready for use.
- ☐ Repeat step 1-2 for the second chair.

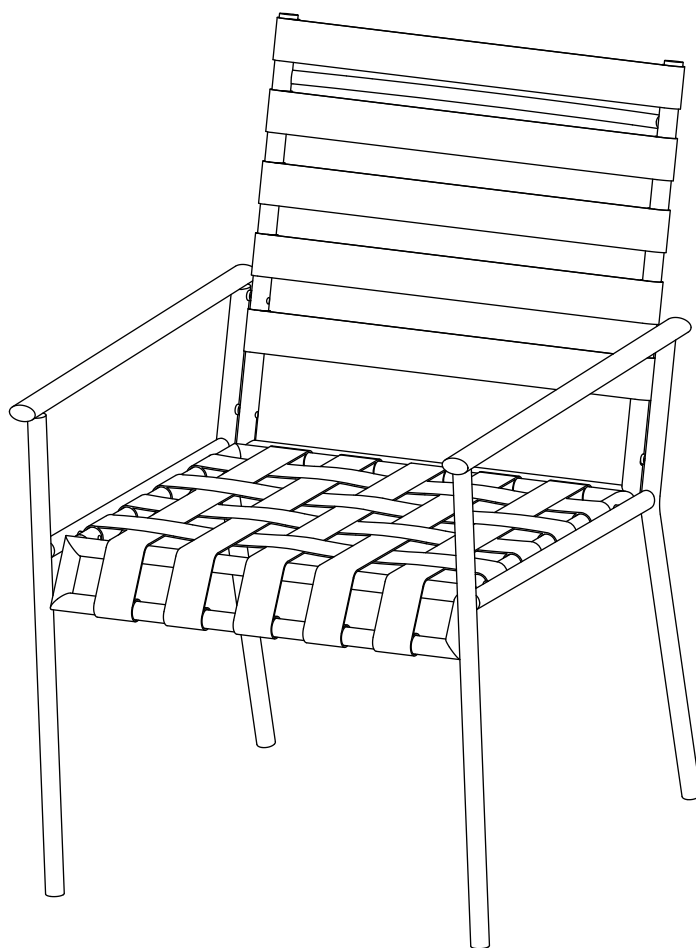

Care and Cleaning

- Clean the furniture frame with a wet towel using a mild soap and water solution, dry completely with a soft towel.
- Clean the cushions and the sling seat material with a mild solution of soap and water. Hang cushions to drip dry completely. It is recommended that cushions be stored in a dry area during rain and if they are not in use and indirect sunlight. Do not machine wash or dry. Do not use bleach or strong solvents to clean any of your patio furniture. It will harm both fabrics and metal finishes.
- Caution should be used when using oil, lotions and other chemicals such as chlorine or repeated exposure to extreme weather conditions (including heat), which may cause permanent discoloration to the fabric.
- To maintain and protect the furniture, always cover it with an outdoor furniture cover or store in a safe dry area when not in use for long periods of time.

StyleWell™

Questions, problems, missing parts?
Before returning to the store, call StyleWell Customer Service
8 a.m. – 7 p.m., EST, Monday-Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.