

Care and Use Manual for 2-Piece Folding Outdoor Chair with Storage Bag

Product Overview

Congratulations on your purchase of the 2-Piece Folding Outdoor Chair with Storage Bag! This portable chair is designed for both indoor and outdoor use, making it perfect for camping, picnics, fishing, and more. With its lightweight, durable construction and convenient storage features, this chair is built to provide comfort and convenience wherever you go.

Key Features

1. Lightweight and Durable Construction

- The chair is made of high-quality steel pipes, offering a perfect balance of strength and portability. It can support up to 280 lbs (127 kg).
- The fabric is made of durable Oxford cloth, which is resistant to wear and tear, ensuring long-lasting use in various weather conditions.

2. Convenient Storage Bag

- The chair features a unique storage bag underneath the seat, ideal for keeping small items such as garden tools, toys, mobile phones, and other personal belongings within easy reach.

3. Anti-Slip Feet

- The chair is equipped with anti-slip feet to prevent sliding or tipping over, providing extra stability and safety, especially on uneven surfaces.

4. No Installation Required

- The chair can be easily folded and unfolded without any tools or complicated setup, making it convenient for transportation and storage.

5. Versatile Use

- Perfect for indoor and outdoor activities such as camping, picnics, fishing, and backyard gatherings.

Assembly Instructions

- No Assembly Required The chair comes fully assembled. Simply unfold it and it's ready to use.

How to Fold and Unfold the Chair

1. Unfolding the Chair

- Hold the chair by the seat and backrest.
- Gently pull the seat and backrest apart until the chair is fully extended and the frame locks into place.
- Ensure that the frame is securely locked before use.

2. Folding the Chair

- Hold the chair by the seat and backrest.
- Press the frame release levers (usually located on the sides of the chair) and push the seat

and backrest together.

- Once the chair is fully folded, secure it with the attached strap if available.

Care and Maintenance

1. Cleaning

- Fabric Wipe the fabric with a damp cloth and mild soap. For tougher stains, use a soft brush and a gentle cleaning solution. Avoid using harsh chemicals or bleach.
- Frame Wipe the steel frame with a damp cloth to remove any dirt or debris. Dry thoroughly to prevent rust.

2. Storage

- Always fold the chair before storing to save space.
- Store the chair in a dry, shaded area to protect it from the elements.
- If storing outdoors, consider using a chair cover to protect it from rain and dust.

3. Maintenance

- Regularly check the chair for any signs of wear and tear, such as frayed fabric or rust on the frame.
- If any part of the chair is damaged, discontinue use and contact customer service for replacement parts.

4. Transport

- When transporting the chair, ensure it is securely folded and consider using a carrying bag for added protection.

Safety Precautions

- Weight Limit Do not exceed the weight capacity of 280 lbs (127 kg).
- Surface Use Use the chair on a stable, level surface to prevent tipping.
- Children Keep the chair away from children when not in use to avoid accidental folding or pinching.
- Weather Conditions Avoid using the chair in extreme weather conditions, such as strong winds or heavy rain, to prevent damage or injury.

Warranty

This product is covered by a limited warranty. For more information, please refer to the warranty card included with your purchase or contact our customer service team.

Contact Information

For any questions or concerns, please contact our customer service team
anna-b-owen@outlook.com

Thank you for choosing our 2-Piece Folding Outdoor Chair with Storage Bag. We hope it brings you comfort and convenience on all your adventures!