 


Item # : TW485PCXB

Assembly Instructions

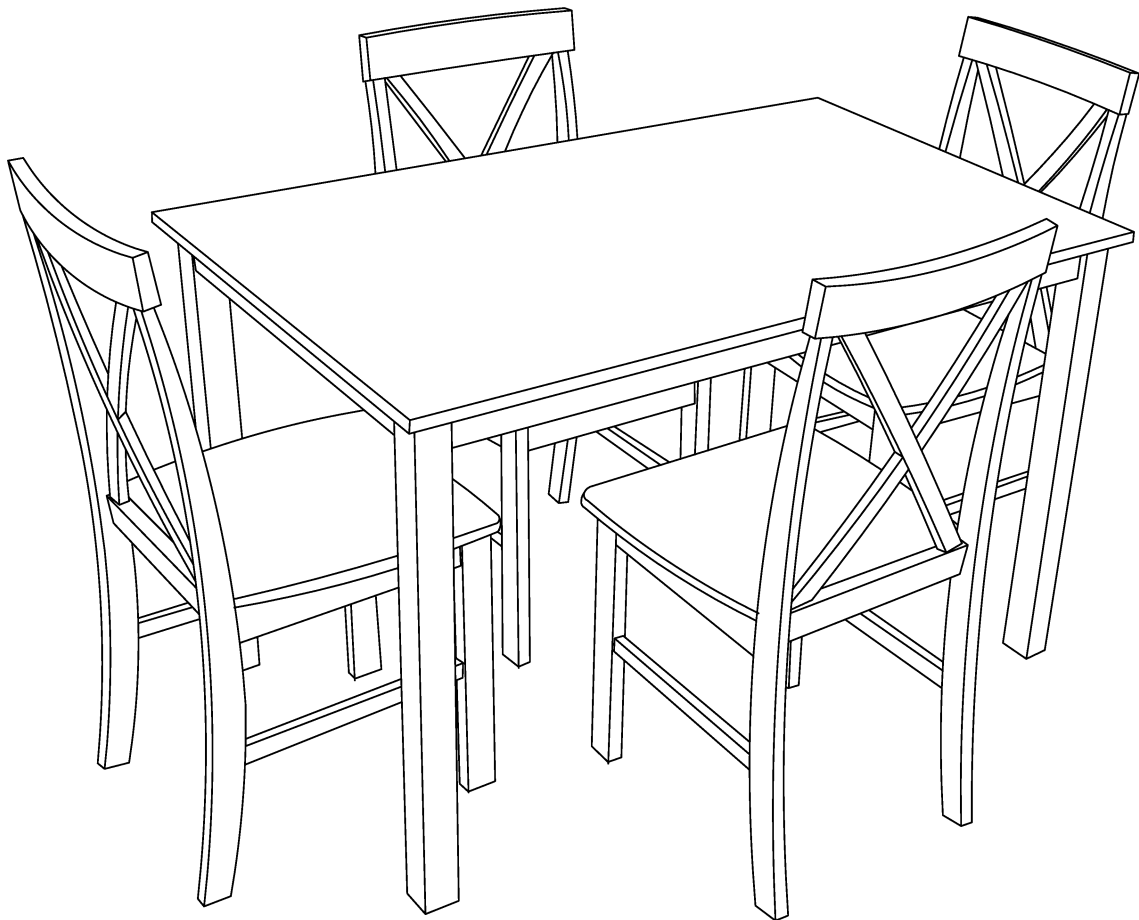

Walker Edison®

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkerediton.com

Revised 14/03/2019(L)

Outdoor Furniture Care / Cleaning Guidelines

 
 
 
 
 
 
Our patio furniture is designed to be enjoyed for years to come, and while many of our products are weather resistant, UV protected, and water resistant, they still need some care to keep them looking great. Follow these simple tips to maintain the function and appeal of these products.

- I. **Wood Products** - To maintain the attractive coloring and natural wood grain of acacia products, we recommend applying teak oil, at the beginning and the end of each patio season. Teak oil is available at your local hardware store. We also recommend that acacia products are covered when not in use.
- II. **All-Weather / Metal Products** - To keep these products clean and looking sharp, we recommend washing these products as needed with warm, soapy water and wipe down with a clean, dry cloth.
- III. **Cushions** - To clean our comfortable cushions, we recommend pulling the cover off of the cushion and washing on the gentle cycle in your washing machine. It is also recommended that the cushion covers are air dried.

 
For additional product information, help assembling a product, or for any other customer support issue, please contact our customer service team.

Walker Edison Furniture, LLC
4350 West 2100 South, Salt Lake City, UT 84120
Toll Free: 1-877-203-2917
www.walkerediton.com
Monday - Friday 8 am to 5 pm (MST)

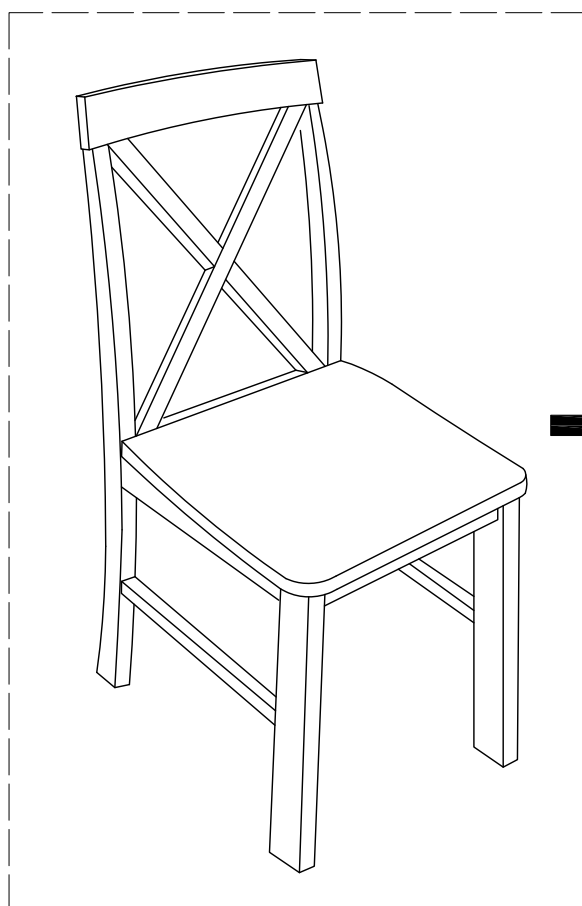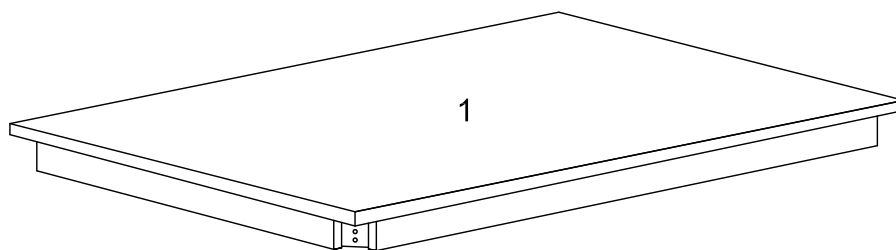

 

 



Parts List

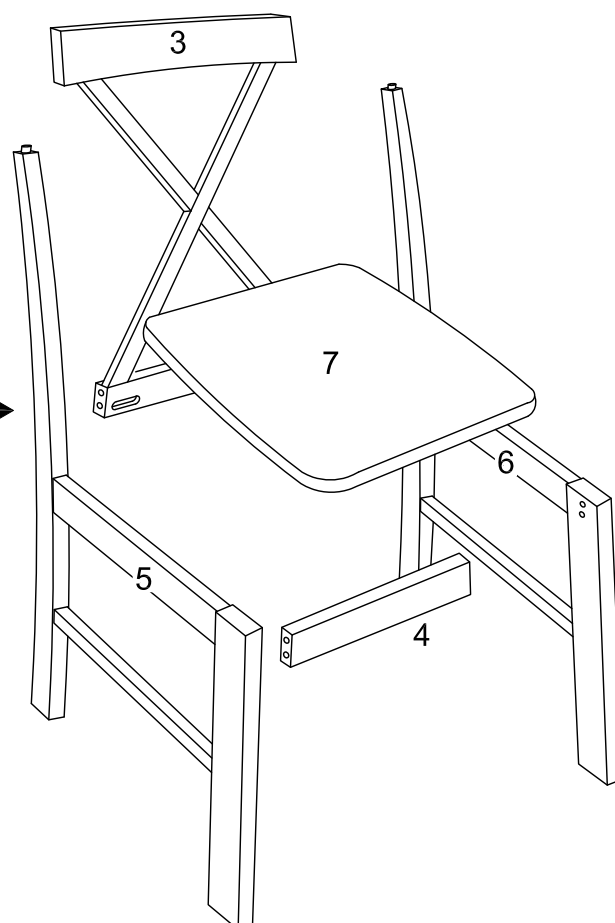


x 4



 Hardware List


A		M8*60mm	Bolt	8 pcs
B		Ø5/16"	Spring washer	8 pcs
C		Ø5/16"	Washer	8 pcs
D		M6*45mm	Bolt	16 pcs
E		15*18mm	Bent washer	16 pcs
F		M4*32mm	Screw	16 pcs
G		M10*35mm	Dowel	16 pcs
H		M5mm	Hex Key	1 pc
J		M4mm	Hex Key	1 pc

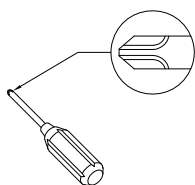 

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

 Step 1

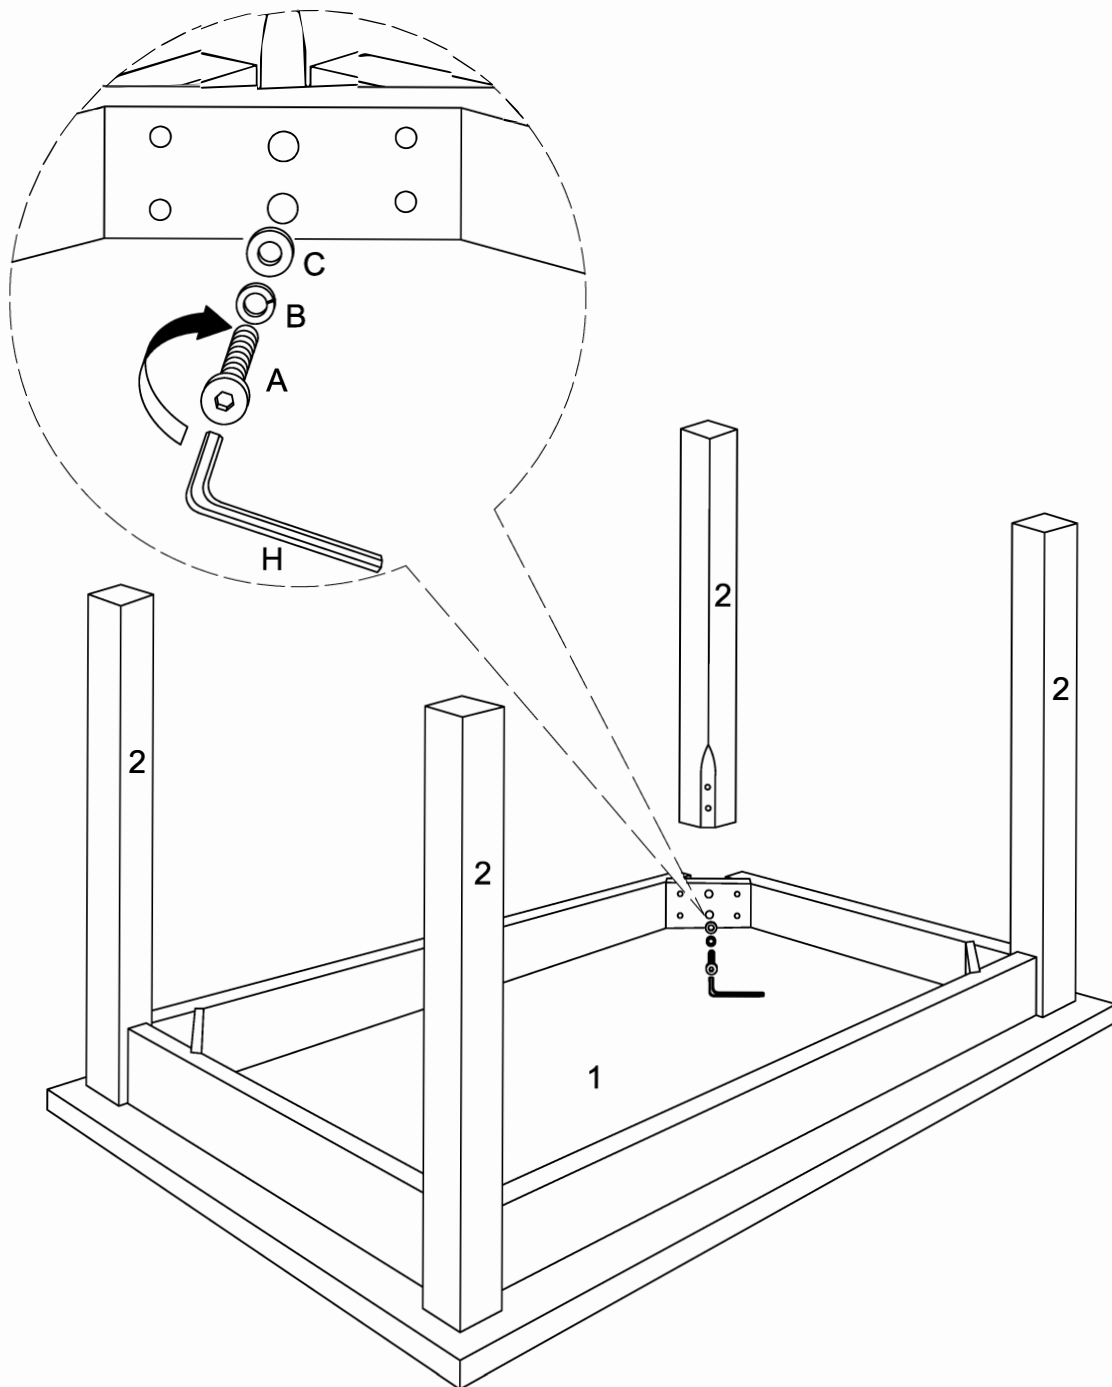


Using bolt(A) connect spring washer (B) and washer (C) to secure top panel (1) to legs (2) with hex key (H) as per diagram .

 Step 2

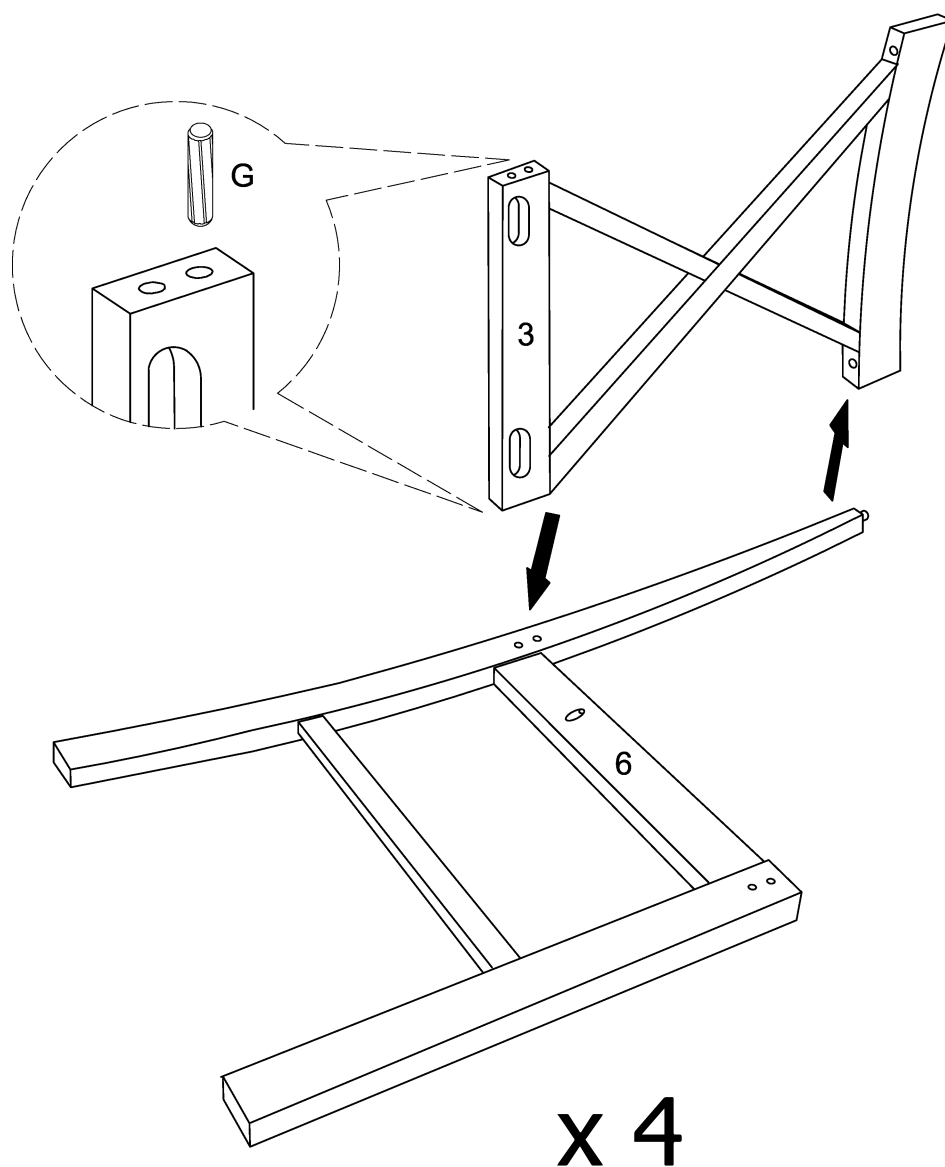

Insert dowel (G) into part (3) attach part (3) to part (6) as per diagram.

 Step 3

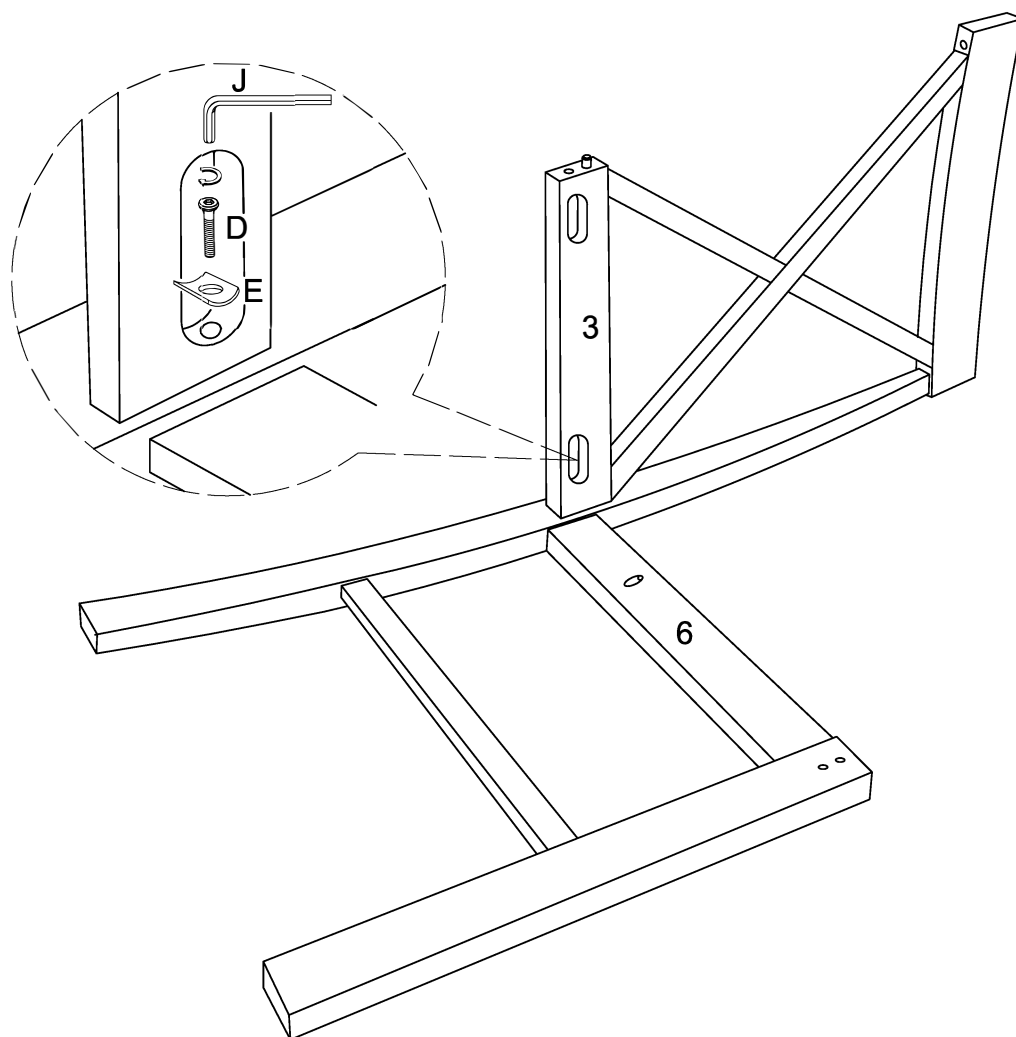


x 4

Using bolt (D) insert bent washer (E) secure part (3,6) with hex key (J) as per diagram.

Please do not fully tighten the bolts when assemble this step ,otherwise it may be caused the next step can not be assembled.

 
Step 4

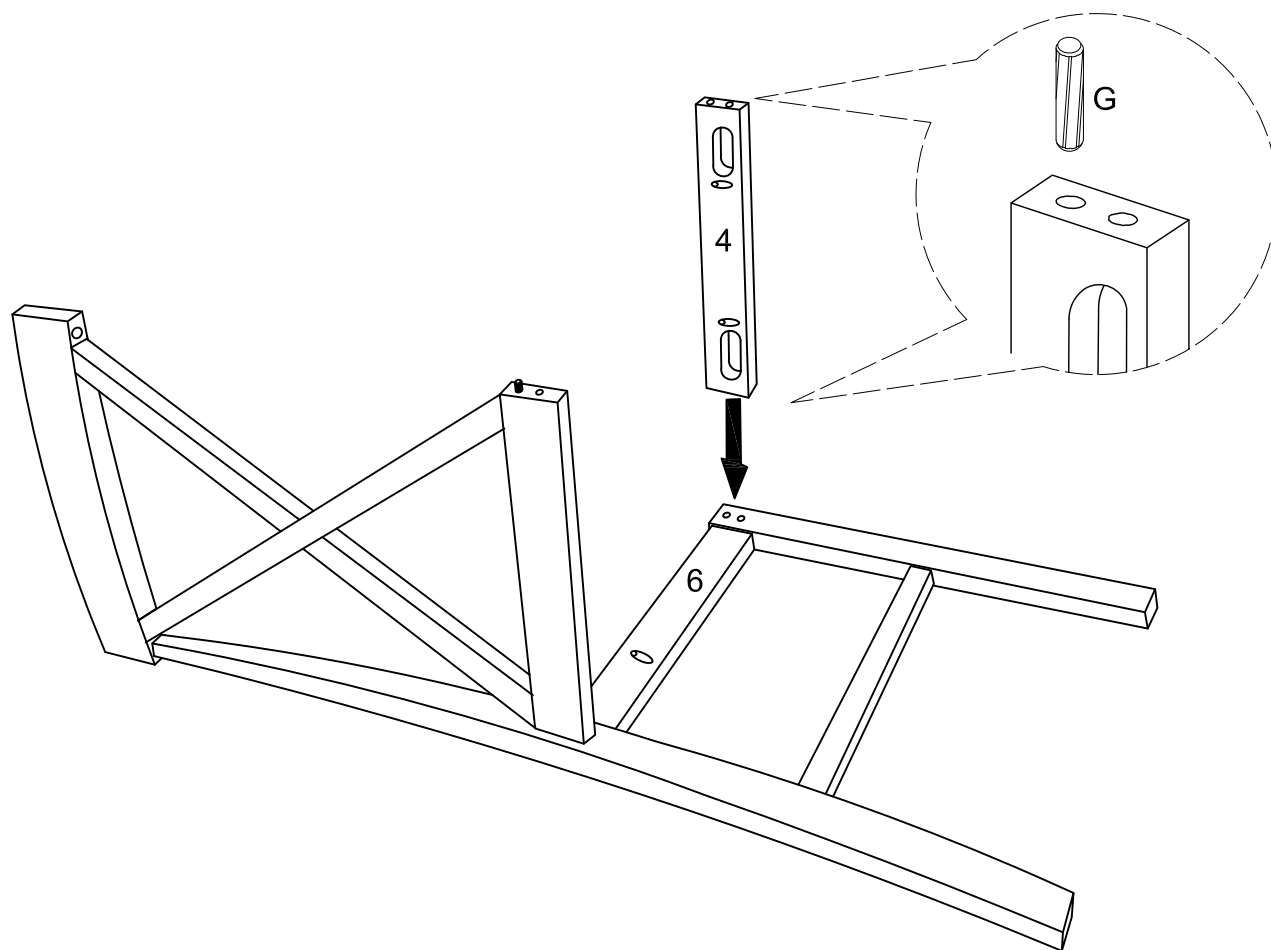

x 4

Insert dowel (G) into part (4) attach part (4) secure to part (6) as per diagram.

 Step 5

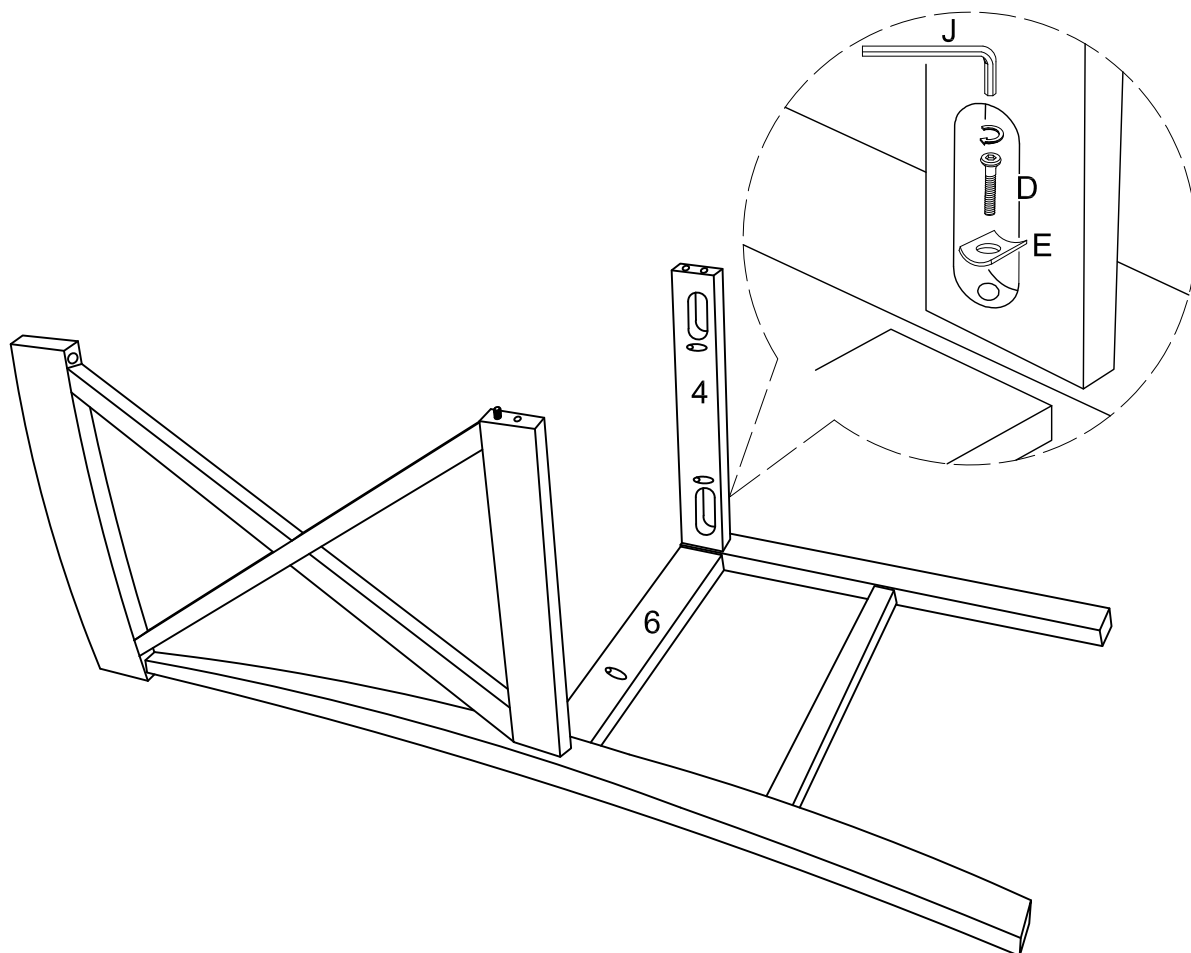


x 4

Using bolt (D) insert bent washer (E) into part (4) to part (6) with hex key (J) as per diagram.


Please do not fully tighten the bolts when assemble this step ,otherwise it may be caused the next step can not be assembled.

 Step 6

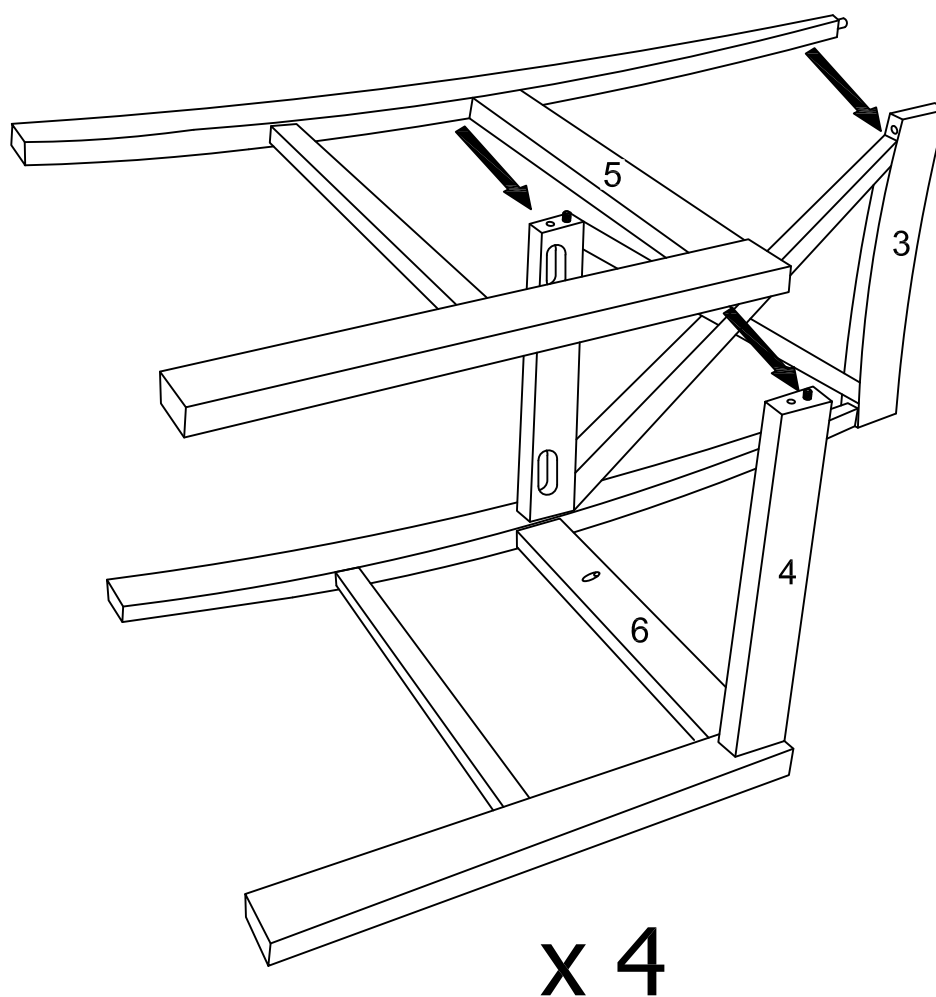


Put part (5) into parts (3,4) as per diagram.

 Step 7

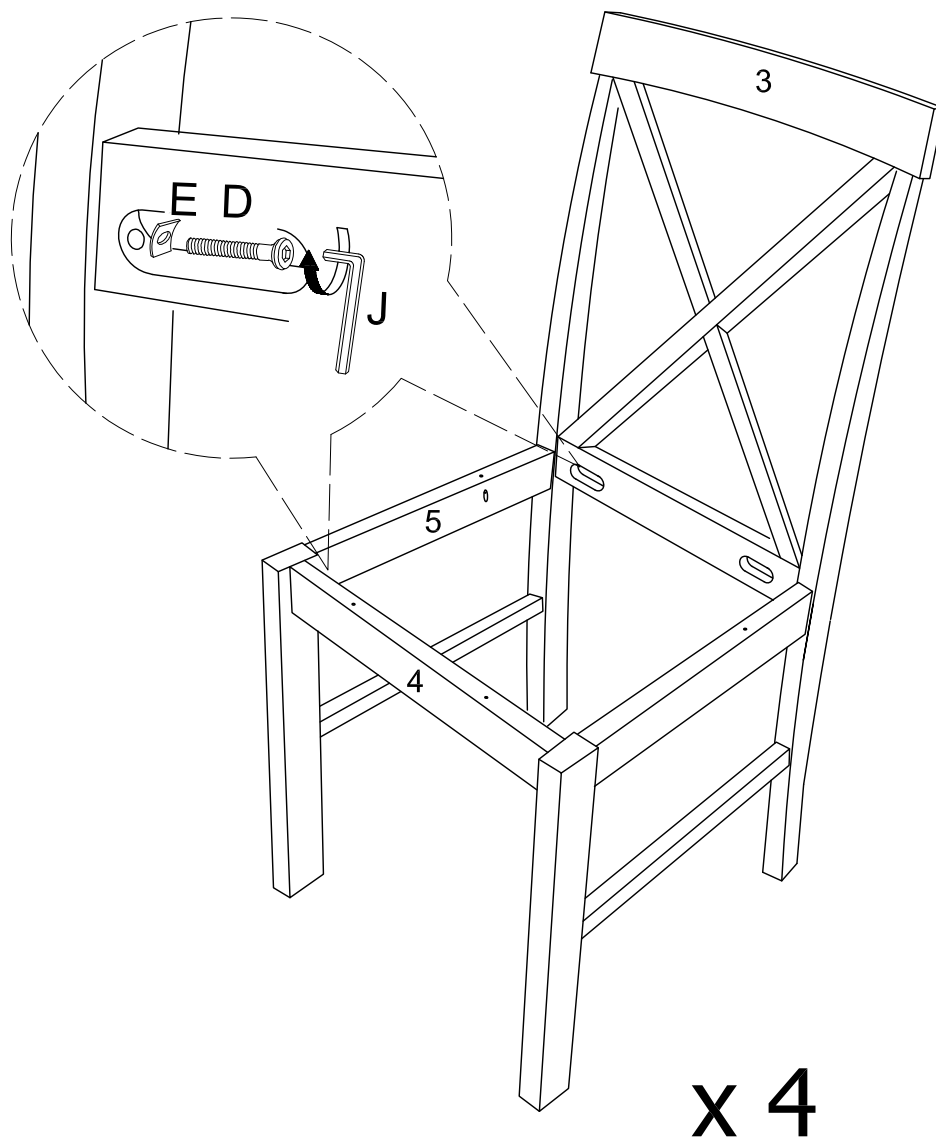


Using bolt (D) insert bent washer (E) secure part (3,4,5) with hex key (J) as per diagram.
Please do fully tighten all the bolts .

 Step 8

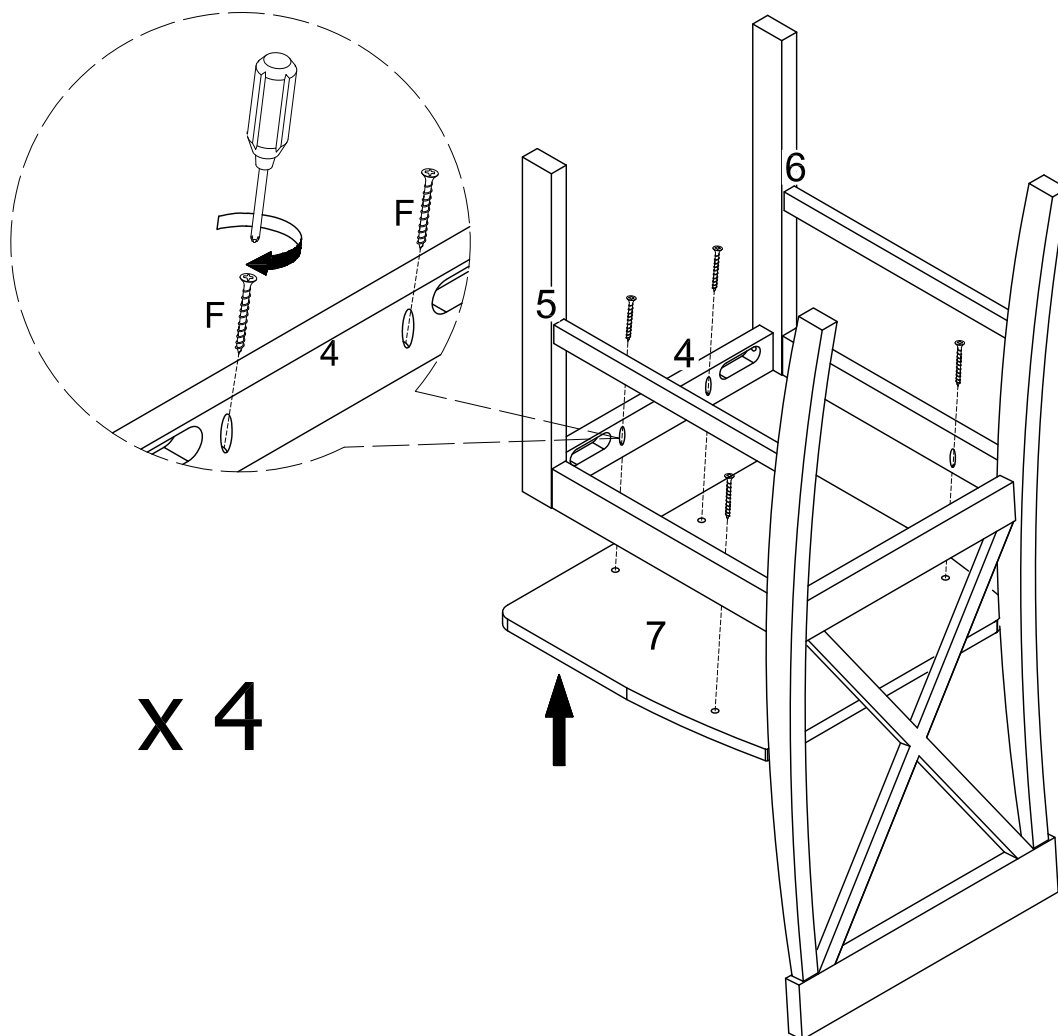

After full adjustment, secure part (7) to parts (4,5,6) with screw (F) and a Philips Head screwdriver as per diagram .

 Step 9

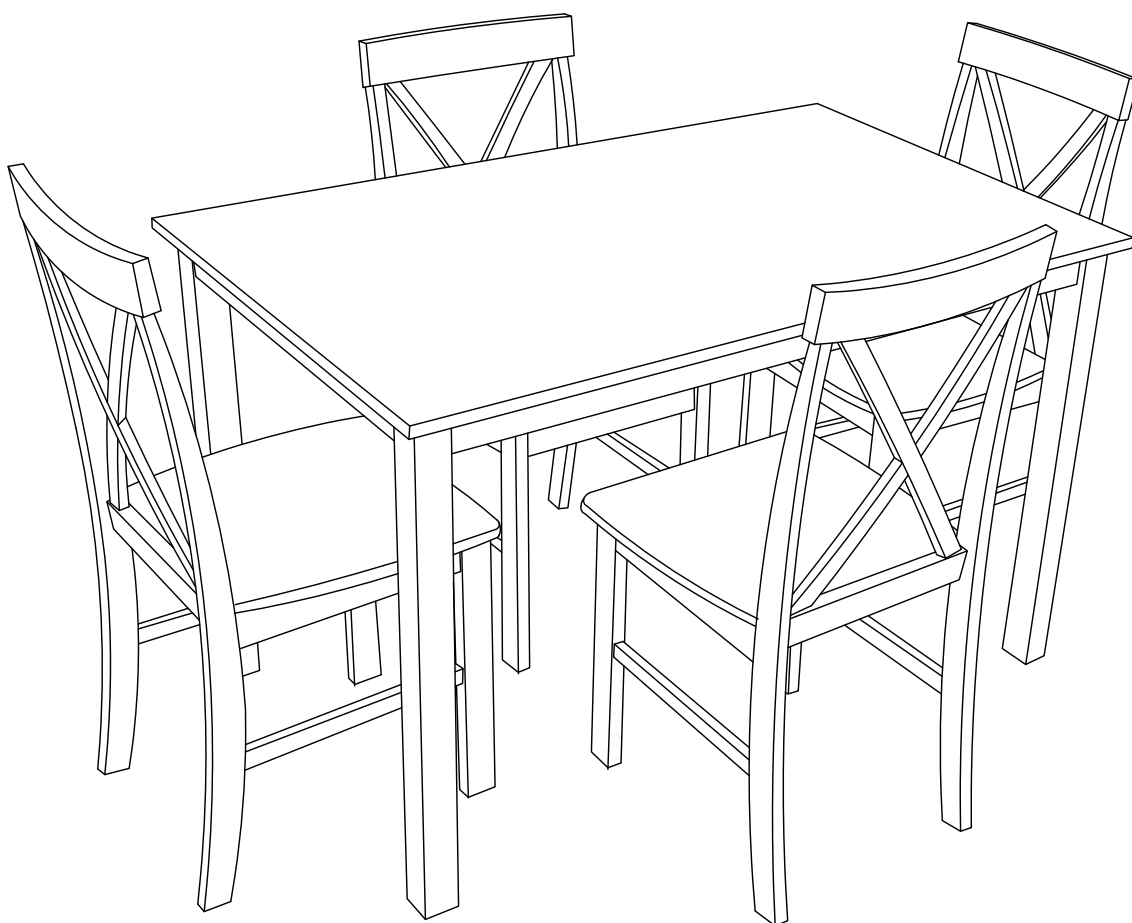

Final Assembly