




USE AND CARE GUIDE

50 FT. 14/3 13 AMP RETRACTABLE EXTENSION CORD REEL

Questions, problems, missing parts?
Before returning to the store, call
Husky Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday
9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

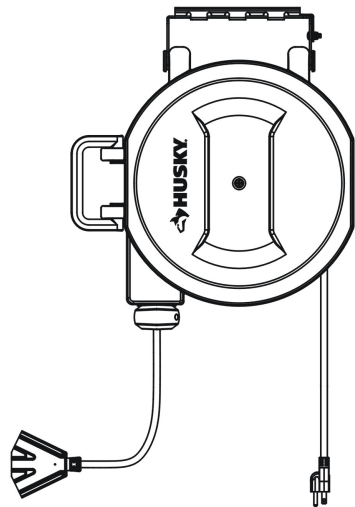

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of this retractable cord reel.
We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of
products available for your home improvement needs. Thank you for choosing Husky!

Safety Information

WARNING: Not suitable for outdoor use. General-use cord reel only. Indoor, dry location use only.


WARNING: Risk of fire! Not for use near hazardous locations or near flammable vapors.

WARNING: Hold onto the cord until the cord stopper reaches the reel opening. Failure to follow these instructions could result in injury.

WARNING: Users and bystanders must wear safety goggles.

Pre-Installation

TOOLS REQUIRED

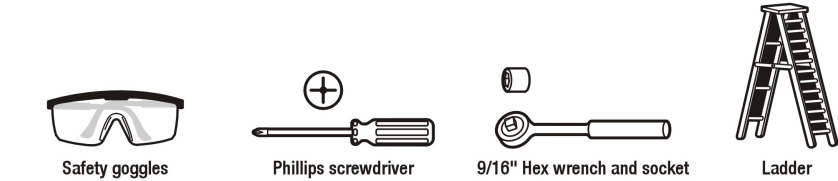

HARDWARE INCLUDED


AA	BB	CC	DD	EE	FF
Part	Description	Quantity	Part	Description	Quantity
AA	Expansion screw	4	DD	Washer	1
BB	Bracket fixing screw	1	EE	Nut	1
CC	Lock washer	1	FF	Self-tapping screws	6

Installation on a Ceiling

1 Mounting the Bracket


IMPORTANT: Use cord reel with 125 Volt AC power only.

- Mount the bracket (A) directly onto a beam with 4 expansion screws (AA).
- Use the self-tapping screws (FF) for a more secure placement.

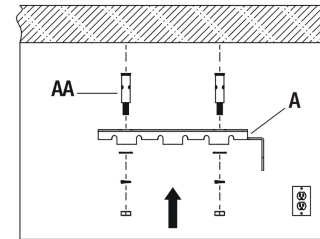


2 Attaching the Reel

- Slide the reel (B) onto the mounting bracket (A).

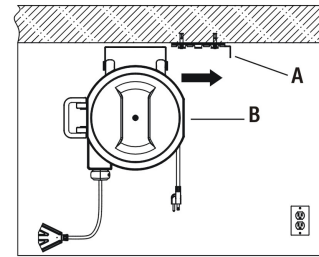


3 Fixing the Bracket to the Ceiling

- Fix the reel (B) to the bracket (A) using the bracket fixing screw (BB), lock washer (CC), washer (DD), and the nut (EE).

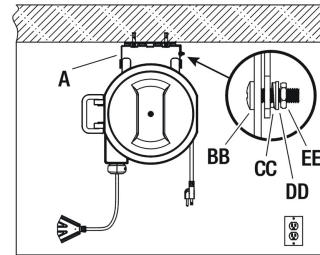

4 Adjusting the Cord Length

- Adjust the cord stop, so the outlet hangs at the desired length, when the cord is retracted.
- Plug the power cord into an outlet.

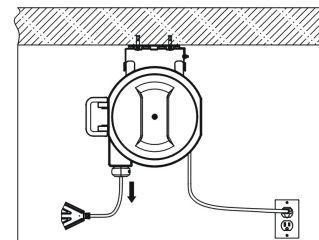


Installation on a Wall

1 Mounting the Bracket


IMPORTANT: Use cord reel with 125 Volt AC power only.

- Mount the bracket (A) directly onto a beam with 4 expansion screws (AA).
- Use the self-tapping screws (FF) for a more secure placement.

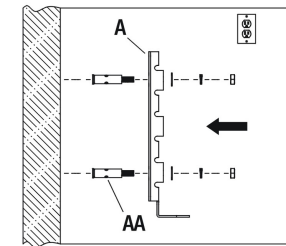


2 Attaching the Reel

- Slide the reel (B) onto the mounting bracket (A).

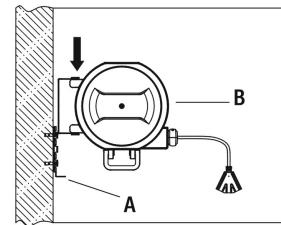


3 Fixing the Bracket to the Wall

- Fix the reel (B) to the bracket (A) using the bracket fixing screw (BB), lock washer (CC), washer (DD), and the nut (EE).

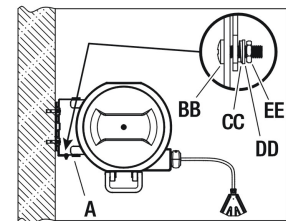

4 Adjusting the Cord Length

- Adjust the cord stop, so the outlet hangs at the desired length, when the cord is retracted.
- Plug the power cord into an outlet.

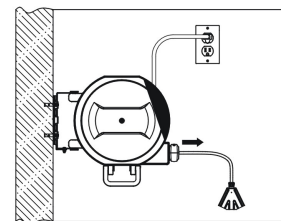

Warranty

For details on the 3 YEAR LIMITED warranty, see sales associate, call 1-888-HD-HUSKY or visit www.huskytools.com.

Contact the Customer Service Team at 1-888-HD-HUSKY or visit www.HUSKYTOOLS.COM.




Questions, problems, missing parts? Before returning to the store,
call Husky Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday 9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

Pre-Installation (continued)

PACKAGE CONTENTS

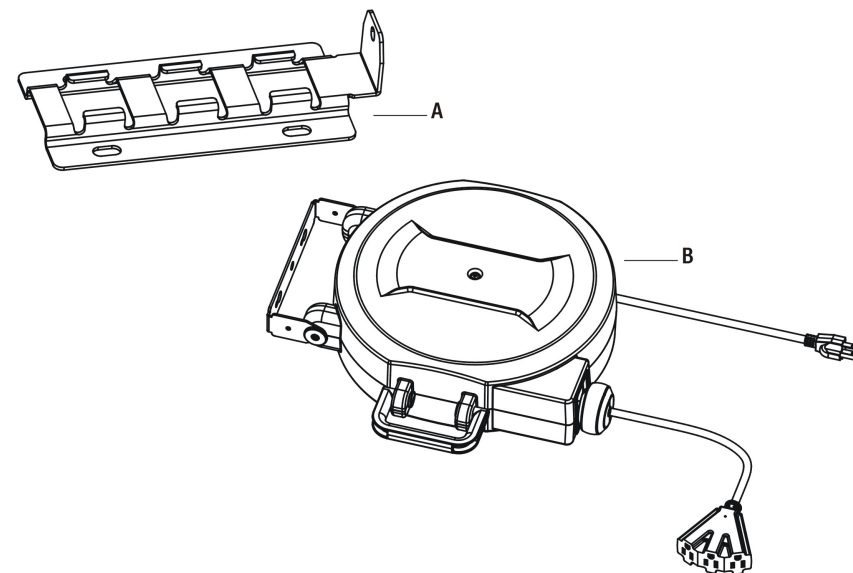


Part	Description
A	Bracket
B	Retractable cord reel

Operation

WARNING: Never release the cord while retracting. Hold onto the cord until the cord stopper reaches the reel opening. Failure to follow these instructions could result in injury.

- Fully extend the cord before connecting a tool or appliance.
- Pull the cord to desired length, then stop. Let the cord retract back approximately 1-2 ft., then gently pull until you hear a "click". The cord should now be locked. If the cord does not hold, continue to pull until you hear another "click".
- The retract the cord, pull the cord out 2-4 in. or until the cord stopper (1) reaches the reel opening.

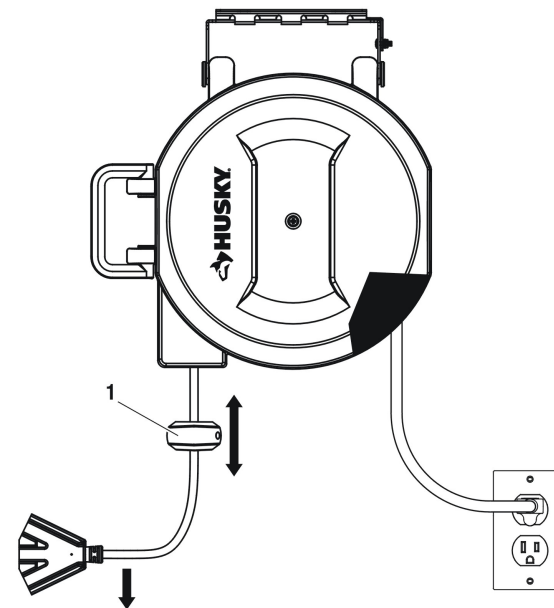

Overload

DO NOT OVERLOAD

- Check the amperage rating of the tool or appliance before connecting the cord. This is to ensure that you are not overloading the circuit. The amperage rating of this unit can be found on the label on the outer plastic housing of the reel.
- If the circuit breakers disengages, unplug all connected tools and re-set.
- Then check the amp rating of the tool(s) that caused the overload, for compatibility.