

# Use and Care Manual

— For Wooden Swings —

## **Assembly Tips:**

1. Don't screw in the holes too tightly at first. That will make assembly more easier.
2. Remember to add the wahser at each side of the screws to protect the wood from getting cracked.

## **Use Tip - How to adjust the chains:**

Unscrew the end of the chains and fix it to the proper positon on the chain. Then screw it again.

## **Why you need to adjust the chains:**

1. Sometimes you need to hang it on the swing stand and you will find the chains are too long.
2. Sometimes you will find the angle of the swing is not so comfortable for you.

## **General Care Tips:**

1. For the swing frame, just simply wipe it.
2. For the cushion, with the zippered design, you can take it off then clean the cushion cover.