



America's Favorite Garage Doors®



garage door OEM

# REPLACEMENT PART

## 9' Weather Seal for Steel Doors

Creates a tight seal between garage door and concrete floor (Works with U shaped applications up to 9' wide)



Installation instructions on back

# INSTALLATION INSTRUCTIONS

## 9' Weather Seal for Steel Doors

### Tools Needed:

LOCKING PLIERS OR C-CLAMP SCISSORS OR KNIFE



### WARNING

If your door is connected to an automatic opener, be sure to disengage the opener before beginning work. At no time should you remove bottom roller carrier because it is under spring tension. If complications do occur contact a qualified door dealer for service. Never use a board or ladder to prop the door open.

 
 
 
**STEP 1:** Unplug garage door opener and manually disconnect opener from the door, if applicable. Open garage door to full open position. Secure door in this position by placing a vice grip or C-clamp above top roller (Figure 1). Place another vice grip or C-clamp below bottom roller (Figure 2) to keep door from moving.

**STEP 2:** Slide old astragal out one end. Slide full length of new astragal in flush with one end. Crimp retainer down on astragal in this end as shown (Figure 3). Go to other end, push about one inch extra into retainer and crimp retainer (Figure 3). This procedure is to hold astragal in place due to shrinking. Trim end flush with door edge.

**STEP 3:** Remove clamps, close door and readjust lock if necessary.

### GARAGE DOOR OPENER OWNER, PLEASE READ!

**STEP 4:** Reconnect opener to the garage door and plug it in. SAFETY REVERSE AND TRAVEL OF THE GARAGE DOOR OPENER MUST BE TESTED. Refer to door opener manual for proper procedures or contact a qualified door agency for service.

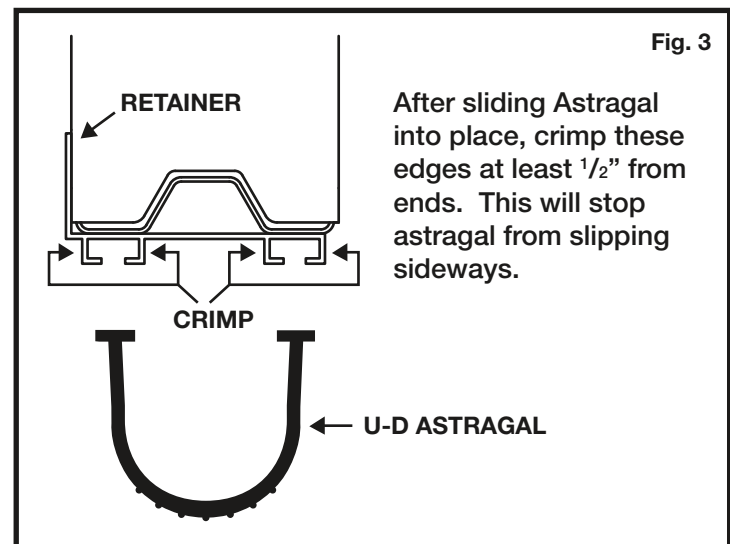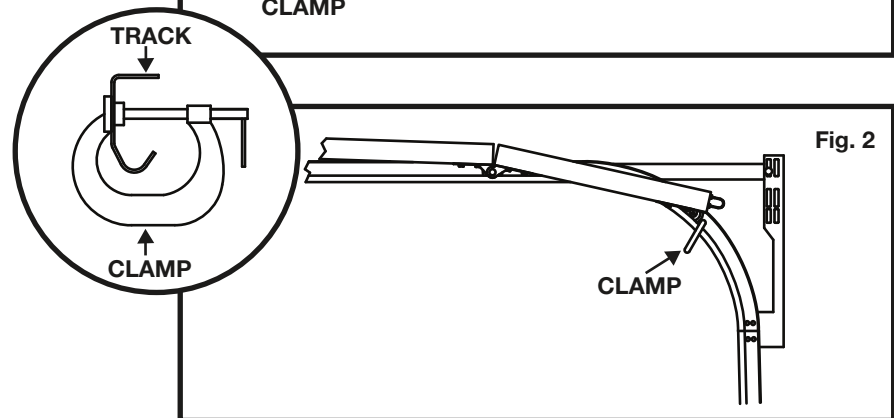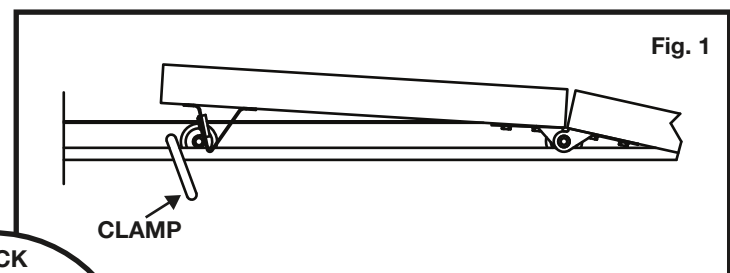

**1-800-2-CLOPAY**

**1-800-225-6729**

[www.clopaydoor.com](http://www.clopaydoor.com)



P/N 4139066