 




ASSEMBLY INSTRUCTIONS

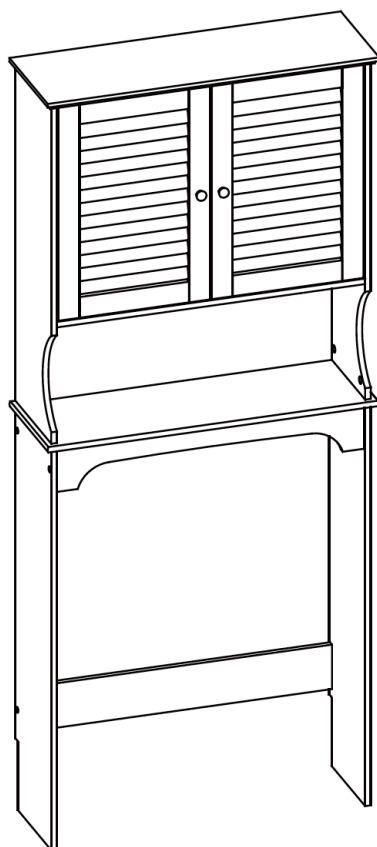

RiverRidge® Ellsworth Two Door Spacesaver

ITEM #: 06-031 White

ITEM #: 06-032 Espresso

ADULT ASSEMBLY REQUIRED

This product requires assembly by an adult because of small parts. Care should be taken in unpacking and assembling this item to keep small parts away from children. During assembly children should be kept away from the product due to possible risk of injury.

WARNING SEE FULL WARNING ON PAGE 2

Young children can be seriously injured or killed if furniture tips over. Don't use this item for a TV stand or place heavy objects on top of item. Always use angle-braces or anchors to secure furniture to the wall.

THIS SHELF UNIT WILL HOLD UP TO 25 POUNDS PER SHELF OR A TOTAL OF 75 POUNDS. DO NOT LOAD EACH SHELF WITH MORE THAN 25 POUNDS. IF LOADED WITH MORE THAN 25 POUNDS PER SHELF AS THIS MAY CAUSE DAMAGE TO THE SHELF AND MAY CAUSE SERIOUS INJURY OR DEATH.

 


WARNING

SERIOUS OR FATAL INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

 


 


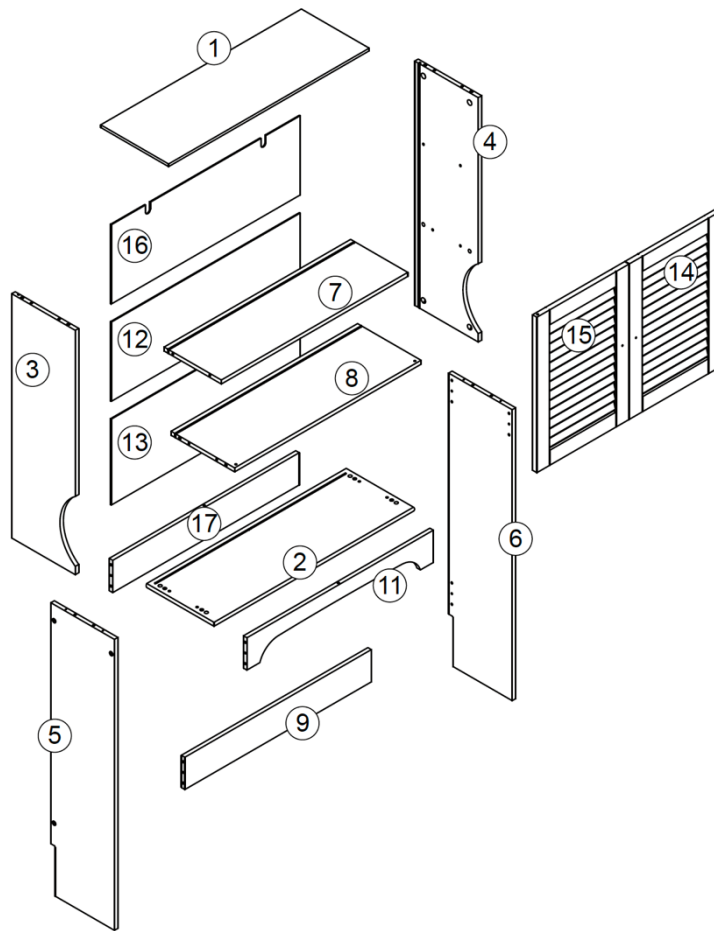










- **Always use tip over restraints and/or wall anchors to secure furniture to the wall**
- **Place heaviest items in the lowest drawers/bins or shelves**
- **Do not set TV's or other heavy objects on the top of this product**
- **Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture**
- **Never open more than one drawer at a time or defeat or remove any drawer interlock system**

PARTS LIST



NO	QTY	DESCRIPTION
1	1PC	Top Board
2	1PC	Middle Connection Board
3	1PC	Top Left Side Panel
4	1PC	Top Right Side Panel
5	1PC	Bottom Left Side Panel
6	1PC	Bottom Right Side Panel
7	1PC	Top Shelf
8	1PC	Bottom Shelf
9	1PC	Rear Bottom Cross Bar
11	1PC	Front Top Cross Bar
12	1PC	Small Back Panel
13	1PC	Large Back Panel
14	1PC	Right Side Door
15	1PC	Left Side Door
16	1PC	Upper Back Panel
17	1PC	Rear Top Cross Bar


PARTS LIST

NO	PARTS	QTY	DESCRIPTION
A		12PCS	Cam Bolt
B		12PCS	Cam Lock
C		34PCS	Wood Dowel
D		1PC	Magnet
E		2PCS	Magnet Plate
F		2PCS	Plastic Anchor
G		2PCS	Screw (4x30mm)
H		2PCS	Knob
J		2PCS	Machine Screw (4x18mm)
K		4PCS	Metal Pin
M		2PCS	Screw (3x10mm)
O		2PCS	Screw (3x14mm)
P		4PCS	Screw (4x35mm)
Q		6PCS	Long Machine Screw
R		1PC	Allen Wrench
S		2PCS	Adjustable Anchor Bracket
T		2PCS	Screw (4x10mm)

TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILLIPS SCREWDRIVER (NOT INCLUDED)
THE USE OF A POWER SCREWDRIVER IS NOT RECOMMENDED FOR ASSEMBLY
DO NOT USE ITEM IF ANY PARTS ARE MISSING OR DAMAGED


To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States.
 If purchased outside of the United States, please contact retailer where purchased.

 STEP 1

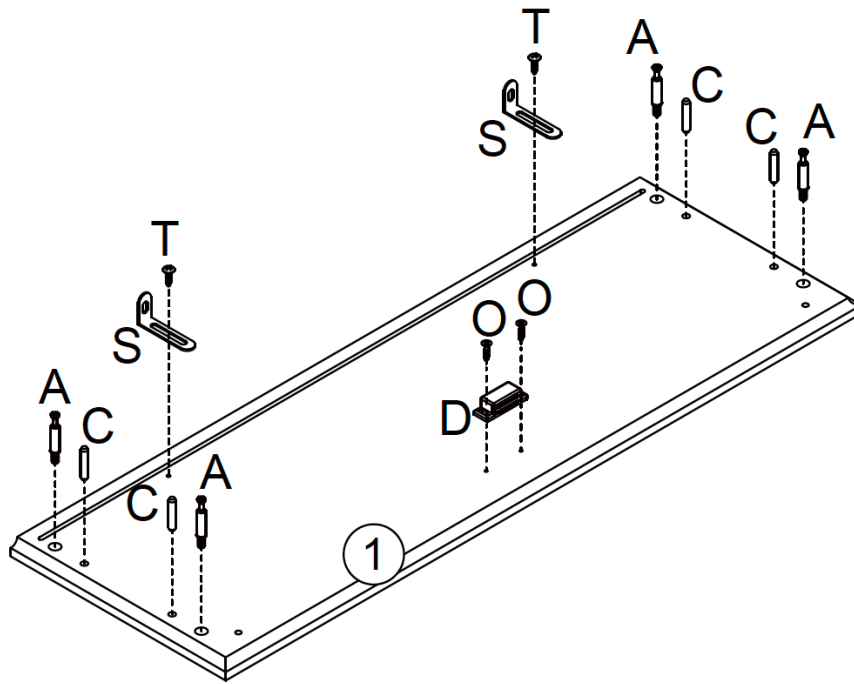


1. Screw 4 cam bolts (A) into cam bolt holes on top board (1).
2. Insert 4 wood dowels (C) into dowel holes on top board (1).
3. Attach magnet (D) to top board (1) by inserting 2 screws (O) through holes on magnet (D) and tighten to top board (1).
4. Insert 2 screws (T) through holes on adjustable anchor brackets (S), then tighten to top board (1).

 STEP 2

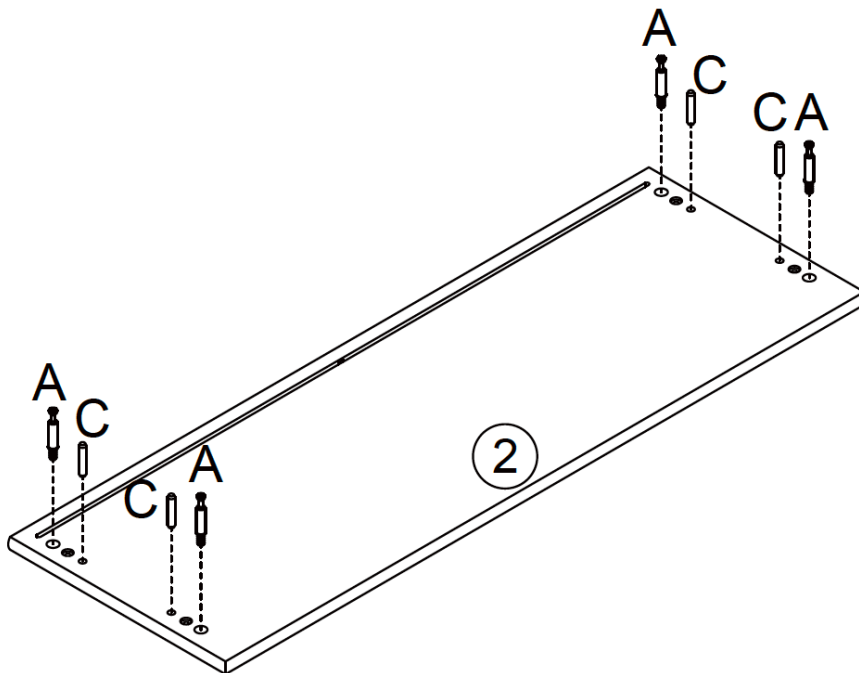


1. Screw 4 cam bolts (A) into cam bolt holes on middle connection board (2).
2. Insert 4 wood dowels (C) into dowel holes on middle connection board (2).

 STEP 3

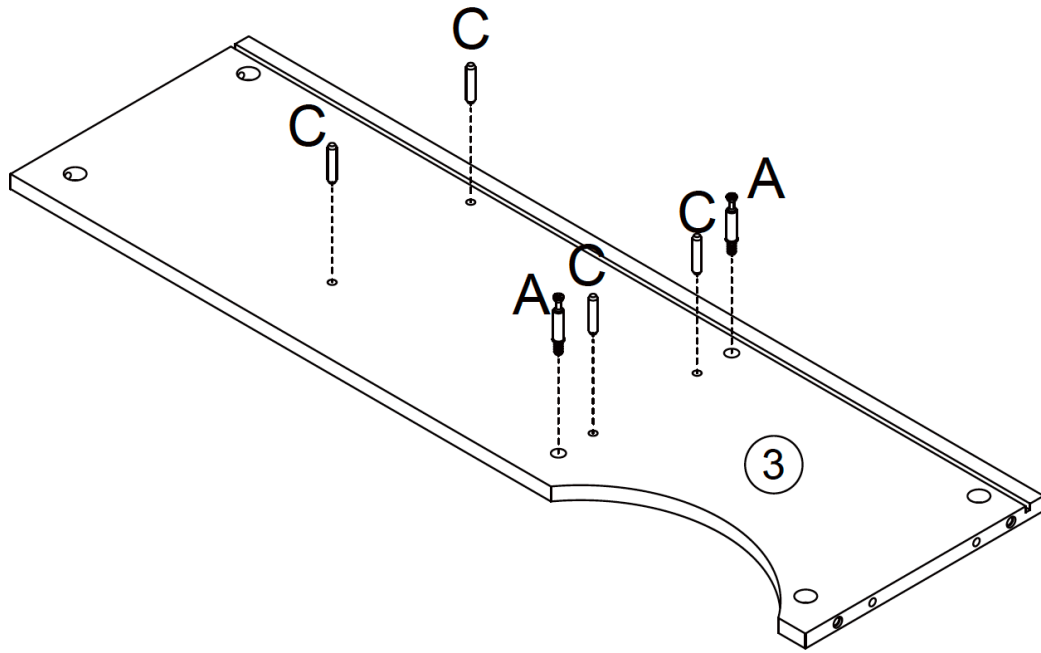


1. Screw 2 cam bolts (A) into cam bolt holes on top left side panel (3).
2. Insert 4 wood dowels (C) into dowel holes on top left side panel (3).

 STEP 4

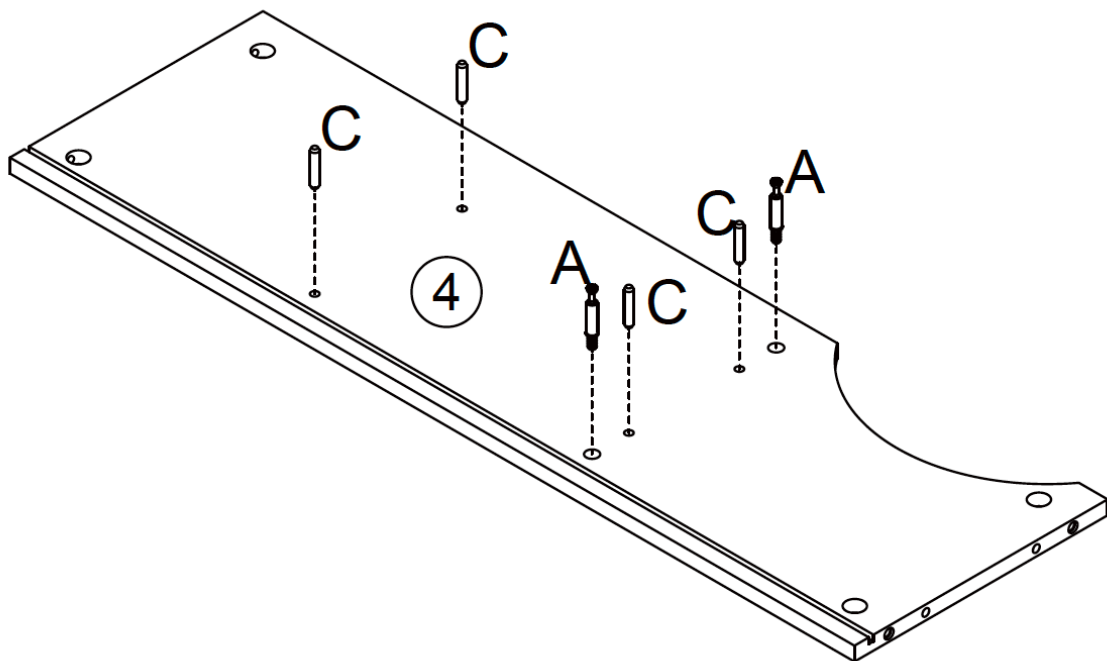


1. Screw 2 cam bolts (A) into cam bolt holes on top right side panel (4).
2. Insert 4 wood dowels (C) into dowel holes on top right side panel (4).

 STEP 5

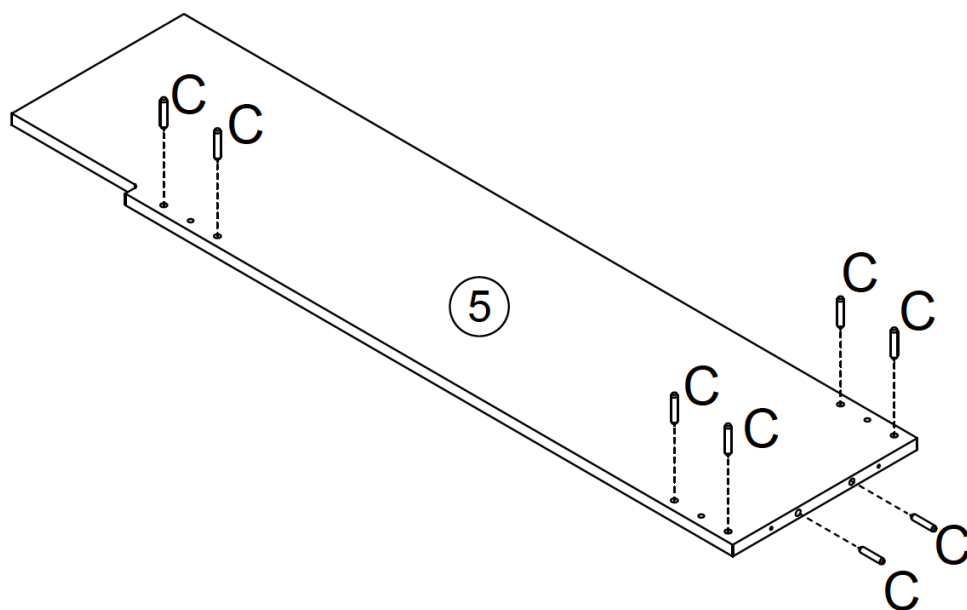


1. Insert 8 wood dowels (C) into dowel holes on bottom left side panel (5).

 STEP 6

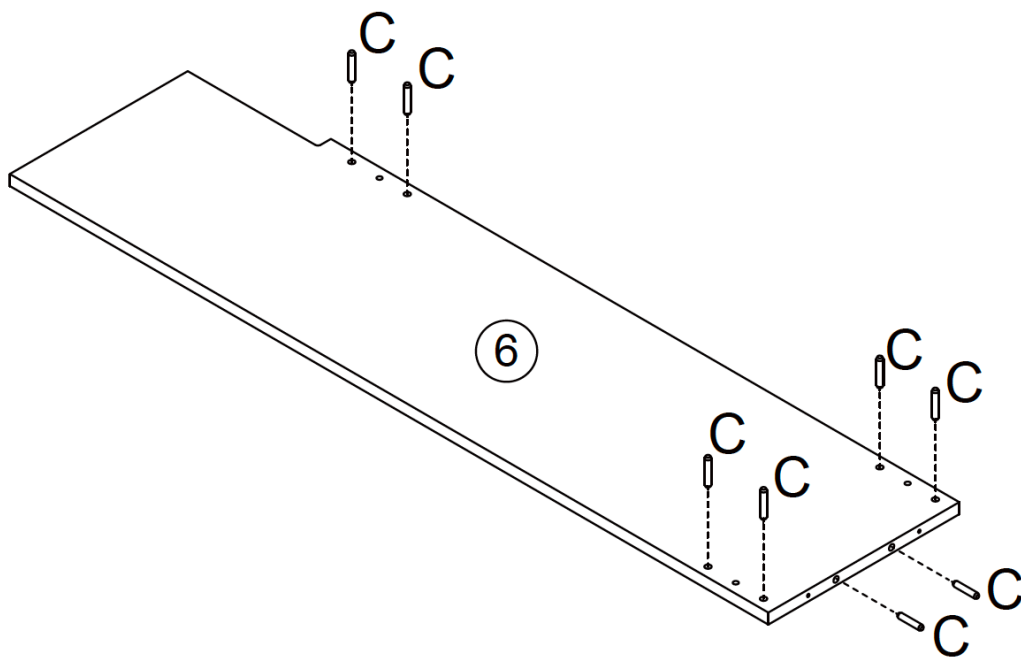


1. Insert 8 wood dowels (C) into dowel holes on bottom right side panel (6).

 STEP 7

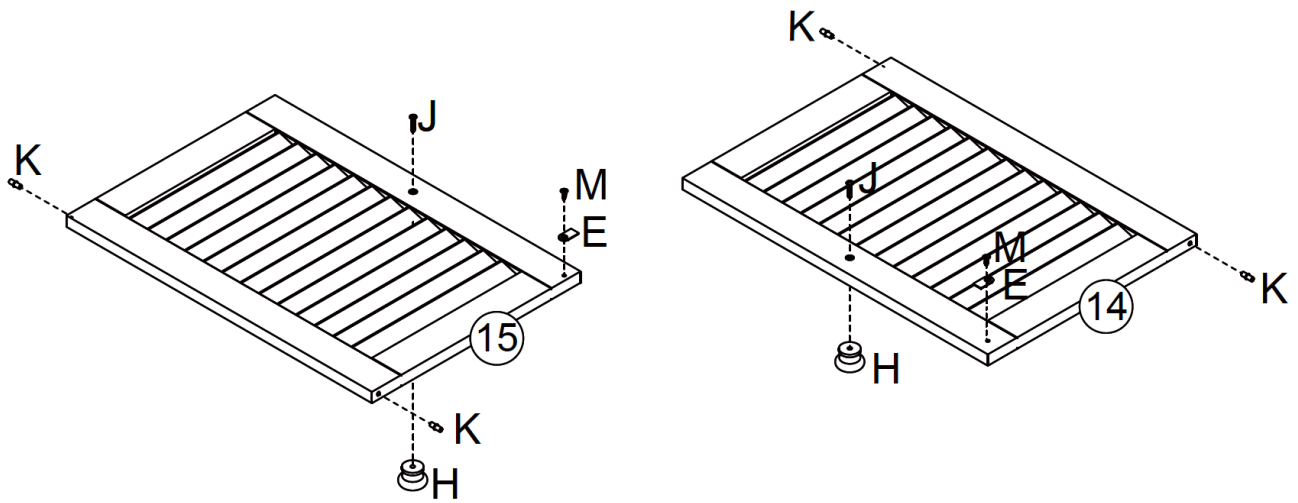


1. Insert 1 screw (M) through hole on magnet plate (E) and tighten to left side door (15).
2. Attach knob (H) to left side door (15) by inserting 1 screw (J) through hole on left side door (15) and tighten to knob (H).
3. Insert 2 pins (K) into holes on each end of left side door (15).
4. Repeat above steps to assemble right side door (14).

 STEP 8

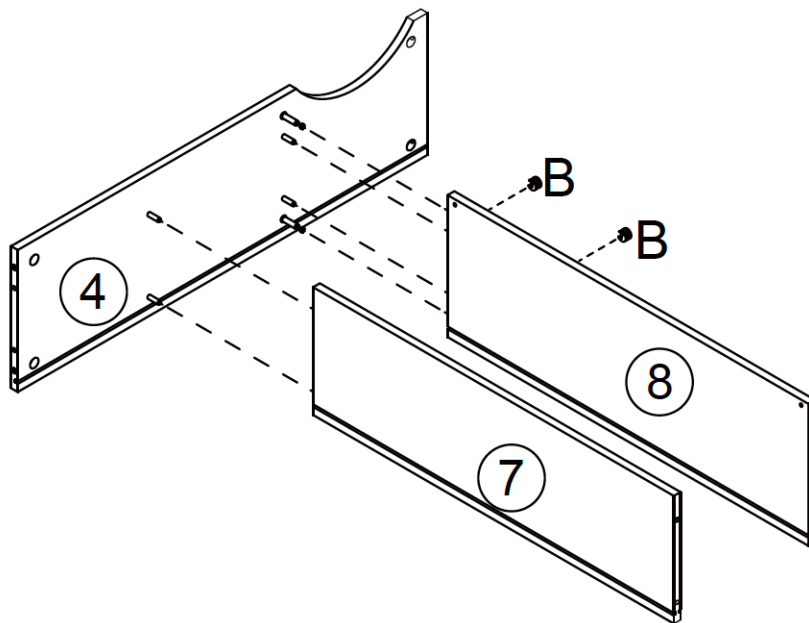


1. Attach top shelf (7) and bottom shelf (8) to top right side panel (4) by inserting cam bolts into cam lock holes and inserting wood dowels into dowel holes on top shelf (7) and bottom shelf (8).
2. Insert 2 cam locks (B) into cam lock holes on bottom shelf (8) and rotate clockwise to secure cam bolts.

 STEP 9

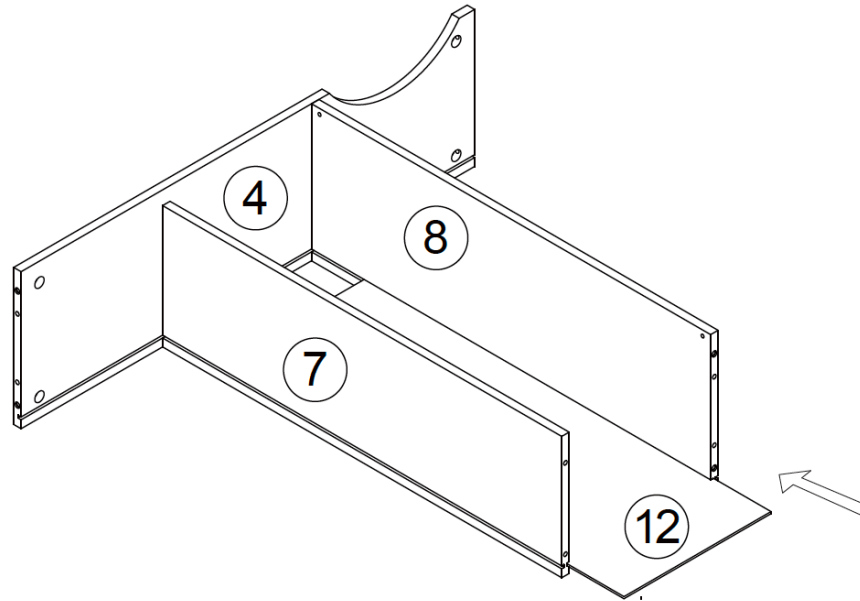


1. Slide small back panel (12) into grooves on top right side panel (4), top shelf (7) and bottom shelf (8).

 STEP 10

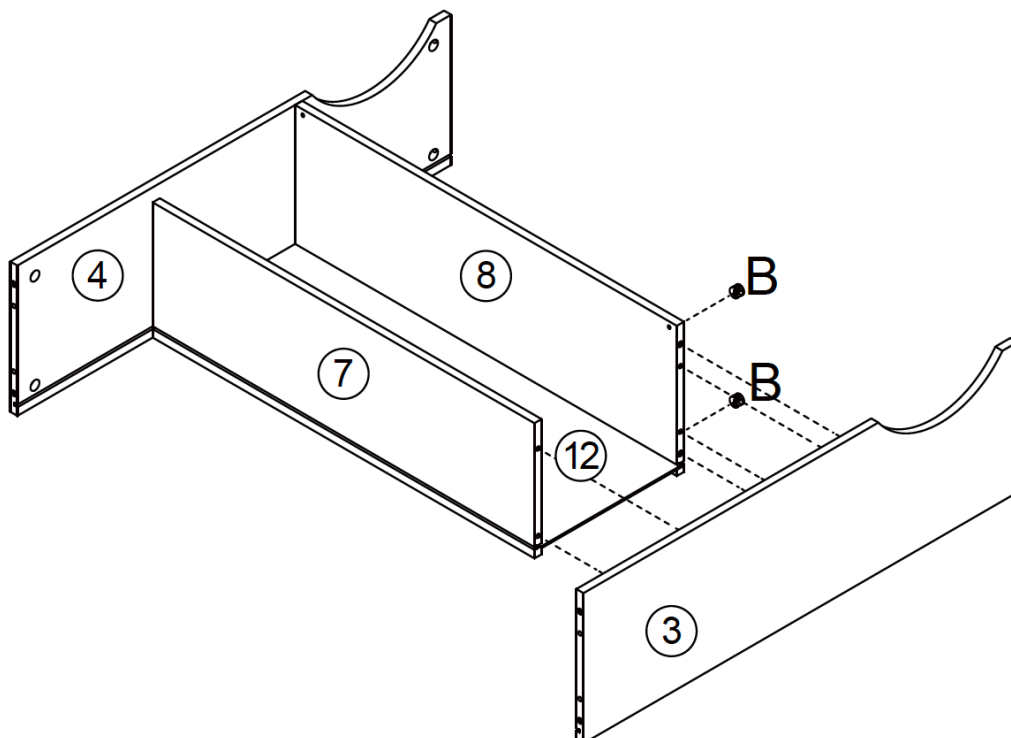


1. Attach top left side panel (3) to pre-assembled top shelf (7) and bottom shelf (8) by inserting cam bolts into cam lock holes and inserting wood dowels into dowel holes on top shelf (7) and bottom shelf (8).
2. Insert 2 cam locks (B) into cam lock holes on the bottom shelf (8) and rotate clockwise to secure cam bolts.

 STEP 11

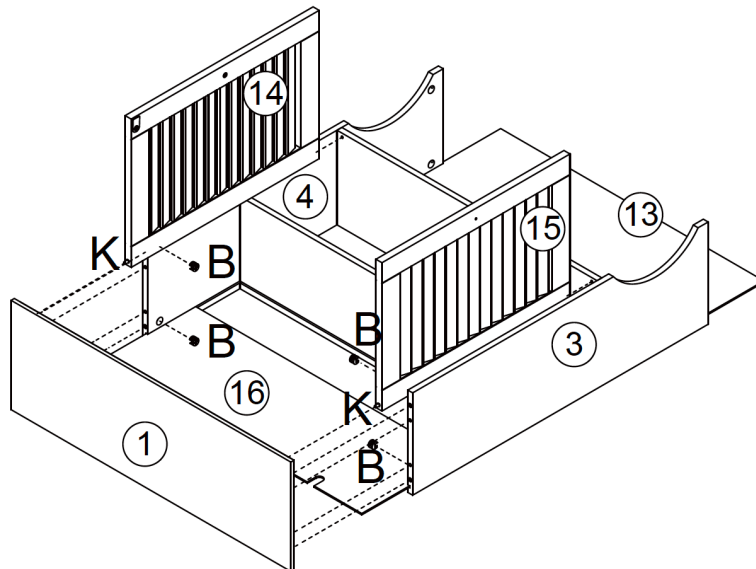


1. Attach both doors (14), (15) to bottom shelf (8) by inserting pins into holes on bottom shelf (8).
2. Slide upper back panel (16) into grooves on top left side panel (3), top right side panel (4) and top board (1).
3. Slide large back panel (13) into grooves on top left side panel (3) and top right side panel (4).
4. Attach top board (1) to top left side panel (3) and top right side panel (4) by inserting cam bolts into cam lock holes, wood dowels into dowel holes on top left side panel (3) and top right side panel (4), and inserting pins into pin holes on top board (1).
5. Insert 4 cam locks (B) into cam lock holes on top left side panel (3) and top right side panel (4) separately and rotate clockwise to secure cam bolts.

 STEP 12

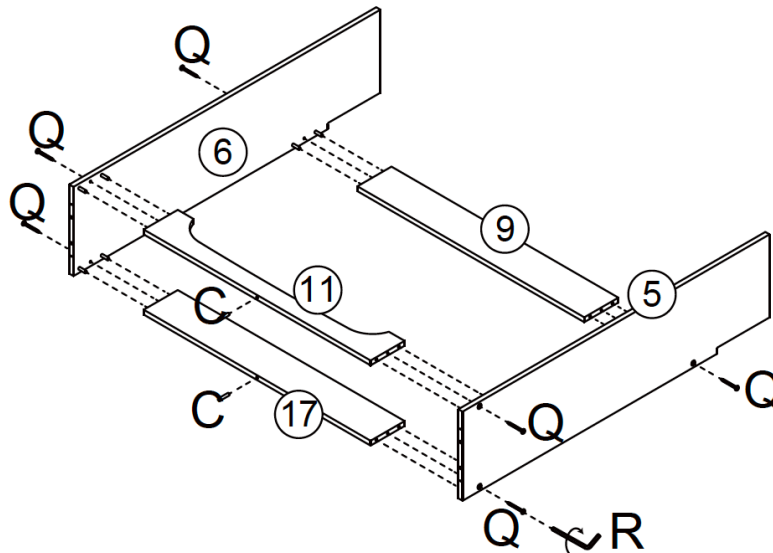


1. Attach bottom left side panel (5) to rear bottom cross bar (9), front top cross bar (11) and rear top cross bar (17) by inserting wood dowels into dowel holes on rear bottom cross bar (9), front top cross bar (11) and rear top cross bar (17).
2. Insert 3 screws (Q) through holes on bottom left side panel (5) and tighten to rear bottom cross bar (9), front top cross bar (11) and rear top cross bar (17) using Allen wrench (R).
3. Repeat above steps to attach bottom right side panel (6) to rear bottom cross bar (9), front top cross bar (11) and rear top cross bar (17).
4. Insert 2 wood dowels (C) into dowel holes on front top cross bar (11) and rear top cross bar (17).

 STEP 13

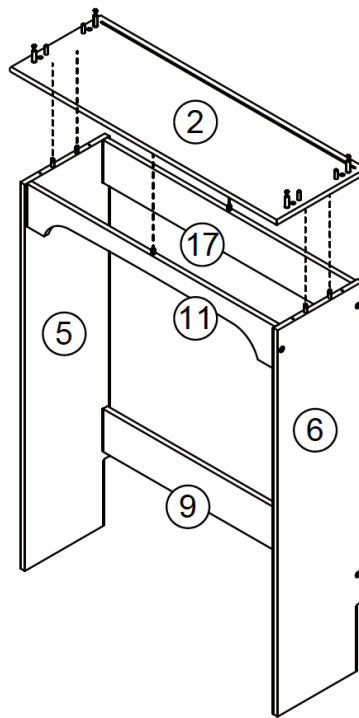


1. Attach middle connection board (2) to bottom left side panel (5) and bottom right side panel (6), front top cross bar (11) and rear top cross bar (17) by inserting wood dowels into dowel holes on middle connection board (2).

 STEP 14

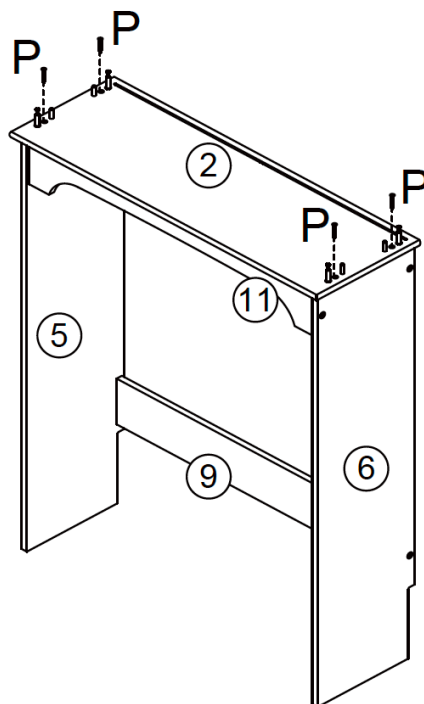





1. Insert 4 screws (P) through holes on middle connection board (2) and tighten to bottom left side panel (5) and bottom right side panel (6).

 STEP 15

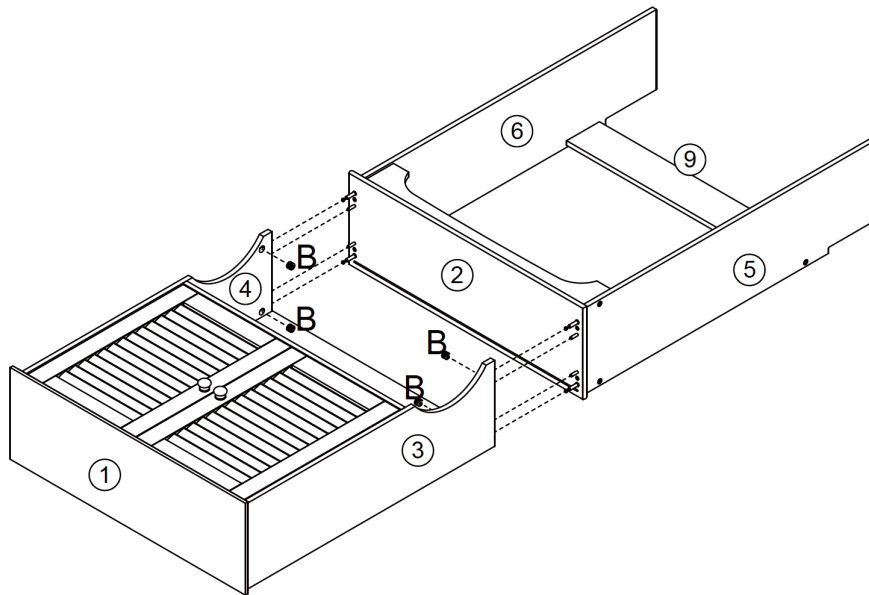

1. Place top portion onto middle connection board (2) by inserting wood dowels into dowel holes and cam bolts into cam lock holes on end of both top side panels (3) and (4).
2. Insert 4 cam locks (B) into cam lock holes on both top side panel (3) and (4) and rotate clockwise to secure cam bolts.

    STEP 16

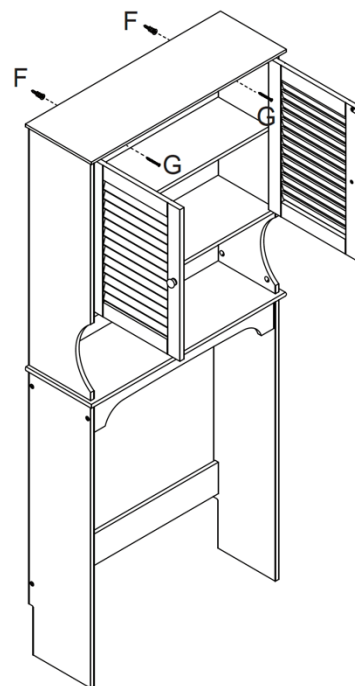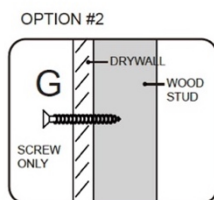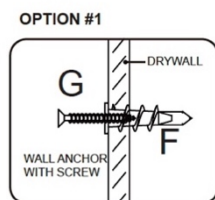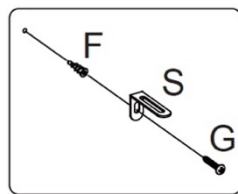

Option #1: Securing to Drywall

1. Position spacesaver against wall in desired location. Using a pencil, make 2 small marks on wall through holes on brackets (S). Move cabinet away from wall and screw 2 plastic anchors (F) into wall on pencil marks.
2. Place cabinet against wall, insert 2 screws (G) through holes on brackets (S), then tighten to plastic anchors (F).

Option #2: Securing to Drywall and Wood Stud

1. Position spacesaver against wall in desired location. Insert 2 screws (G) through holes on brackets (S), then tighten through drywall and into wood stud.

*Tip: Anchor bracket (S) can be adjusted to correct distance from wall to cabinet as needed. Once adjusted, be sure to re-tighten bracket inside cabinet for stability.

ATTENTION ADULTS: Cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct hazards such as tightening of screws and taking any damaged parts away from children.

WARNING  Please make sure your item is secured to the wall, per assembly instructions.

 
CARE INSTRUCTIONS:

Wipe clean with a water dampened cloth. Wipe dry with clean cloth.

IMPORTANT:

Keep assembly instructions for future reference.

Enjoy your new RiverRidge® Cabinet!

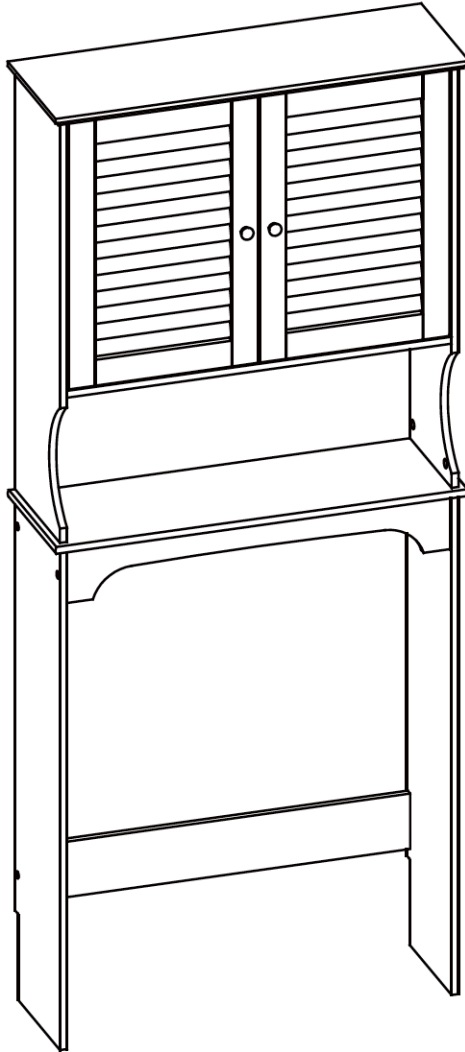

Thank you for purchasing this RiverRidge® Home item. We hope you enjoy it and consider purchasing other RiverRidge® items.

To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.



RiverRidge® is a registered trademark of Sourcing Solutions, Inc., Hudson, WI 54016