



Item # 755397
Model # HPL4124-VT

 
USE AND CARE GUIDE

3 TON JACK STAND

Questions, problems, missing parts?
Before returning to the store, call
Husky Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-888-HD-HUSKY

HUSKYTOOLS.COM

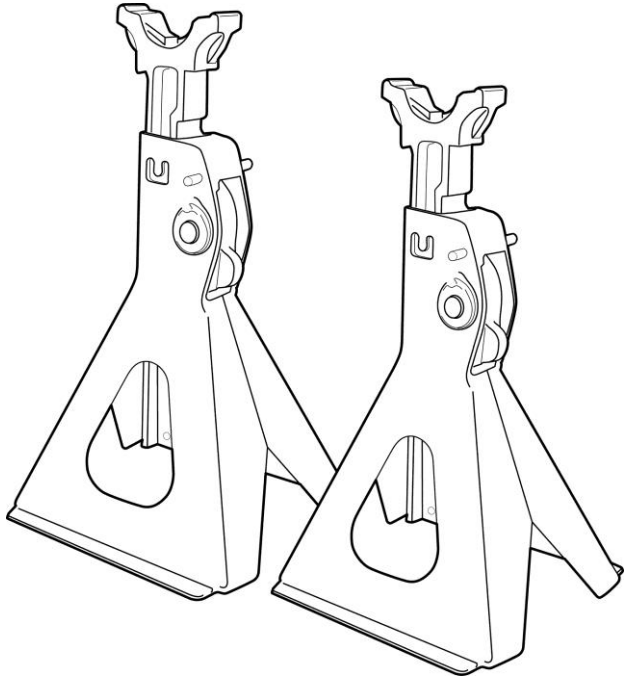

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of this jack stand. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents.....	2	Operation.....	5
Safety Information	2	How it works	5
Warranty	3	To Position Jack Stands	5
Specifications	3	To remove Jack Stands.....	6
Package Contents	4	Care and Cleaning.....	6
		Inspection.....	6
		Maintenance.....	6
		Troubleshooting.....	7

Safety Information

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS

1. Study, understand and follow all instructions before operating this device prior to use.
2. Do not overload this jack beyond the rated capacity.
3. This jack is designed for use only on hard level surfaces capable of sustaining the load. Use on other than hard level surfaces can result in jack instability and possible loss of load.
4. This is a lifting device only. Immediately after lifting, support the vehicle with jack stands.
5. Inspect jack prior to each use. Do not attempt use if the unit is broken, bent, cracked, or has missing and/or damaged parts. Replace broken, bent, cracked, missing and/or damaged parts, and/or missing labels, warnings and/or decals with factory authorized parts prior to use.



DANGER: Because of the potential hazards associated with the misuse of equipment of this type, no alterations shall be made to the product without written authorization of the manufacturer or supplier.



WARNING: Do not get under or allow anyone under the vehicle until it has been supported by jack stands



WARNING: This jack is a lifting device only. It is not a support device. NEVER place yourself under or near a raised vehicle supported by a jack. Immediately after lifting, support vehicle with jack stands or other appropriate means.



WARNING: For your safety and to prevent injury use service jack for lifting purposes only.



CAUTION: Do not move or dolly the vehicle while on the jack



CAUTION: Any jack that appears to be damaged or has worn parts should be removed from service immediately.



IMPORTANT: Lift only on areas of the vehicle as specified by the vehicle manufacturer. Use vehicle manufacturers instructions on proper lifting.



IMPORTANT: Do not use bottle jack in direct contact with food or food ingredients.



NOTE: Center load on saddle prior to lifting.



NOTE: Some vehicles require an adapter to properly engage the frame for lifting.



NOTE: Use of bottle jack on sea vessels is prohibited.



NOTE: Failure to heed these warnings may result in personal injury and/or property damage.

Warranty

The manufacturer warrants the products to be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturers only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturers discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration, neglect or mishandling. This warranty shall not apply to any product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the products such as surface and/or weathering, as this is considered normal wear and tear.


The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service at 1-888-HD-HUSKY or visit www.huskytools.com.

Specifications

Model	3 Ton Jack Stand
Max Load Capacity	6,000 lbs.
Lifting Range	12-17.5 inches
Saddle Dimensions	1 in. x 2.5 in.
Jack Stand Weight	14.3 lbs. (Pair)

 Package Contents

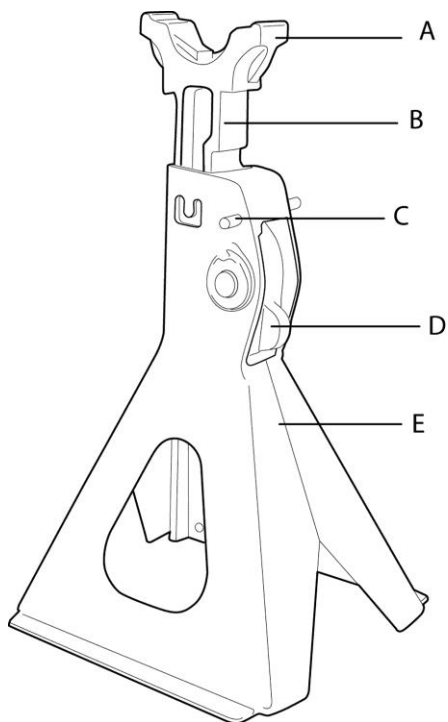

Part	Description
A	Saddle
B	Stem
C	Locking Pin

Part	Description
D	Release Handle
E	Base

Operation

 
HOW IT WORKS

It is the owner and/or operators responsibility to study all warnings, operating and maintenance instructions found on the product sticker and instruction manual before using this unit. The owner/operators shall retain product instructions for future reference.

TO POSITION JACK STANDS

1 Placing the Vehicle in Park

- Place vehicle in **PARK** (in gear on standard transmissions) and apply emergency brake.




2 Blocking the Vehicle

- Block the vehicle wheels not being raised.




3 Raising the Vehicle

 - Raise the vehicle to desired height and check for stability
- Use either a bottle jack or other automotive jack to lift vehicle.

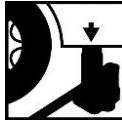


4 Extending Post

 - Extend post to height of axle or flat reinforced framed surface.

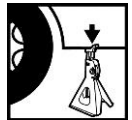

5 Checking Load Locking Pin

 - Check the Load Locking Pin and Release Handle to insure that the tooth has been engaged on the post.

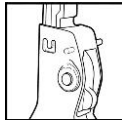

6 Checking for Equal Height

- Make sure both jack stands are at an equal height and will support the load evenly when the lifting device is removed.

7 Placing Jack Stands



IMPORTANT Place jack stands under support points specified by the manufacturer. DO NOT crawl under the vehicle when placing or removing stands

8 Lowering Load onto Jack Stand

- **SLOWLY** lower the load onto the jack stands with lifting device and check to insure the load is located on the center portion of the saddle of jack stand. If load is not located on the center of the saddle or if load is unstable, relift the load and reposition the jack stands to ensure proper positioning before continuing with work or repairs.



Operation (Continued)

TO REMOVE JACK STANDS

1 Raising the Vehicle

- Carefully raise vehicle with lifting device enough to clear the stands, making sure the vehicle remains stable.

2 Removing the Stands

- Remove stands, being sure not to crawl under the vehicle in the process.

3 Lowering the Vehicle

- Following instructions provided with your lifting device, carefully lower the vehicle to the ground.



WARNING To avoid pinching or crushing hands or feet, ALWAYS keep them clear of the jack hinge and ground contact area when lowering the vehicle. The jack is a lifting device only. DO NOT move or dolly the vehicle while it is on the jack.

Care and Cleaning

INSPECTION

The product shall be maintained according to these instructions.

You may not alter this product in any way.

 
1. Before using, a thorough inspection shall be made on the jack. Look for cracks in the welds, bent, damaged, loose, worn or missing parts.
2. Inspect according to this manual ONLY.
3. If the jack has been subjected to abnormal load or shock (abuse), perform an immediate inspection. Take the product to a local customer service representative for an authorized inspection before use.

Maintenance

The jack stand shall be maintained in accordance with the product instructions


1 When not in Use

- When stand is not in use, the ratchet should be in fully lower position.



2 Keep the Locking Mechanism Clean

 - Keep moving parts clean. Make sure locking mechanism is free of debris.



3 Wipe every Two Months

- Always keep jack stand clean and wipe with oilcloth every two months.

Maintenance (Continued)

Visual inspection shall be made before each use of the jack stand by checking for abnormal conditions, such as cracked welds, leaks, and damaged, loose, or missing parts.

Other inspections shall be made per product operating instructions.

Each jack stand shall be inspected immediately if the device is believed to have been subjected to an abnormal load or shock. It is recommended that this inspection be made by a manufacturer's or supplier's authorized repair facility.

Owners and/or operators should be aware that repair of this equipment may require specialized knowledge and facilities. It is recommended that an annual inspection of the jack stand be made by a manufacturer's or supplier's authorized repair facility and that any defective parts, decals, or safety labels or signs be replaced with manufacturer's or supplier's specified parts. A list of authorized repair facilities is available from the manufacturer or supplier.

Any jack stand that appears to be damaged in any way, is found to be worn or operates abnormally **SHALL BE REMOVED FROM SERVICE UNTIL REPAIRED**. It is recommended that necessary repairs be made by a manufacturer's or supplier's authorized repair facility if repairs are permitted by the manufacturer or supplier.

Because of potential hazards associated with this type of equipment, no alterations shall be made to the product.

Only attachments and/or adaptors supplied by the manufacturer shall be used.

Troubleshooting

Problem	Possible Cause	Solution
Jack stand will not lift to full height	Make sure nothing is obstructing the stem.	Clear out debris.
Jack stand will not hold load	Check the locking pin and release handle to make sure they are functioning properly.	Call customer service.
Lift arm stem will not lower	Check the locking pin and release handle to make sure they are functioning properly.	Call customer service.



Questions, problems, missing parts?
Before returning to the store,
call Husky Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-888-HD-HUSKY

HUSKYTOOLS.COM

Retain this manual for future use.

X0000000000-A