 


WS101

Electric Cleaning Brush

Instructions for use

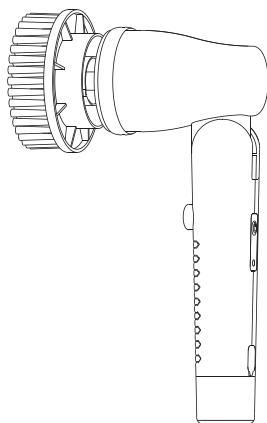

Please keep this product manual in a safe place
Please read this product manual carefully before use

Precautions For Product Use

Please read the manual carefully before use

- Check that all accessories are complete
- Do not use the charger in a humid environment
- When cleaning, please check whether the charging port is covered and sealed after cleaning and drying the electric brush in time to ensure that the product is dry
- Do not allow children or people with mental illness to use the product, unless there is a guardian
- Supervision and guidance of a person
- Use only warm water when cleaning, not hot water, to avoid damage to the product Do not touch the high-speed rotating brush head parts with your hands or apron when using the product

Product Parameters

Product Category	Electric Cleaning Brush
Product Model	WS101
Rated voltage / frequency	3.7V ==
Power of the whole machine	25W

How To Use

- Press the on/off button once, the brush will be in low gear and the power indicator will be on for a long time.
- Press the switch button once more, the brush will be in high gear.
- Continue to press the switch once, the brush will stop working. This cycle operation to control the working state of the brush.



When charging, first insert the USB charger into the 100—240V AC outlet, plug in the USB charging cable, then open the electric brush charging port plug, then plug the charging cable TYPE-C port and the body charging port after charging. See the figure below

Attention:

Please use DC5V1A or DC5V2A charger for charging, and check whether the charger and charging cable are damp, if wet, please dry before use

Indicator Status Description

When working: the green light is on for a long time when the power is 100%-10%, the red light is always on when the power is below 10%, the motor stops when the power is exhausted and the red light goes off.


When charging: the green light flashes when charging, the green light stays on after fully charged.

When blocking rotation: the yellow light flashes rapidly (2 times/second) and goes off after 5 seconds.

Common Faults And handling Methods

Failure Phenomenon	Possible Causes	Treatment
Electric brush does not work	Low battery pack power	Electric brush charging
During charging Indicator light does not light up	USB interface is not plugged in Type-C port not Plugged in place. Charger is not connected to power.	Check that the USB charger and charging cable are connected as required in place.
Short full charge time	Charger mismatch. Battery aging.	Follow the instructions until the power is fully charged. Battery pack life is up to replace the pack Battery pack.
Abnormal during use Stopped (with yellow light flashing)	The electric brush is stuck and does not turn. Stalling due to excessive force during use.	Cleaning electric brush. Clean with less than 40N force.

 Product Component Names And Diagrams

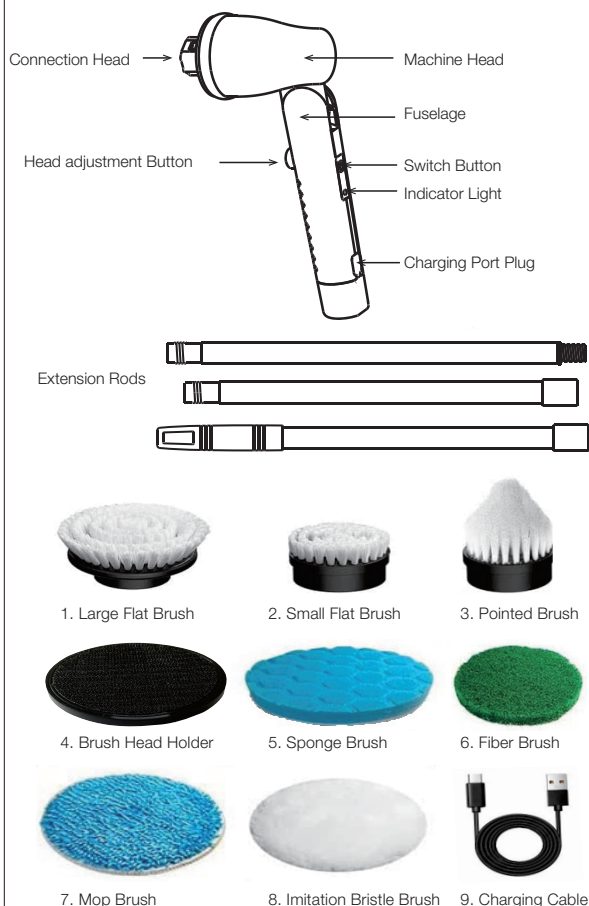

Instructions For Use

The first use of the cleaning brush, please use a full charge, if you do not need to use for a long time, please store a full charge, up to 3 months need to charge and discharge once. According to the different textures of the cleaning surface, you can choose different brush head to use with it, as follows.

1. Large flat brush: suitable for cleaning bathroom, kitchen, living room, toilet, window glass and other oil and dirt



2. Small flat brush: suitable for cleaning small flat areas, such as washbasin, kitchen sink, etc.



3. Pointed brush: suitable for cleaning corners, joints, tire grooves, etc. in the kitchen, bathroom, or hoods and other places that are not easy to clean



4. The following brush heads need to be used in combination with the brush head holder

5. Sponge brush: suitable for cleaning tables, chairs, furniture, etc.



6. Fiber brush: suitable for kitchen, stove top, range hoods and other particularly difficult to clean places




7. cloth brush: for living room floor, glass, coffee table, car surface cleaning and polishing




8. Imitation wool brush: applicable For polishing and waxing of high-grade homes, as well as household appliances and car surfaces to remove dust.



Please pay attention to the direction when combining the cleaning brush head with the connecting head

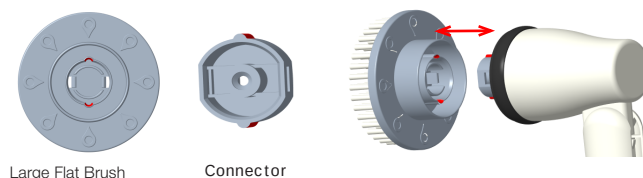

The angle of the cleaning brush head can be adjusted, there are 90° 45° 0° three angles can be Adjustable to adapt to different use environment and space. (The following picture)

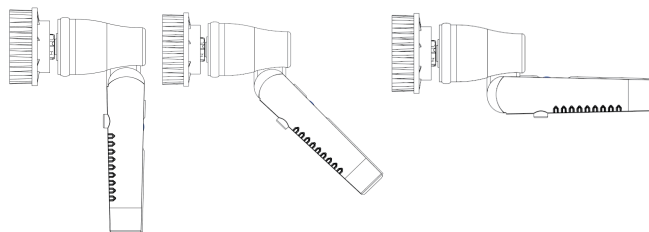

In the handheld in the place can not reach, you can add an extension pole, through and The bottom of the fuselage threads screwed tightly after use (the following figure)



Note: brush head in the rotation, may be due to the brush head surface and cleaning surface between the angle between the brush head uneven force, so that the brush head to the left or to the right side of the slide, it is not easy to control the direction, use as far as possible to keep the brush head surface and cleaning surface parallel to each other, so you can effectively avoid the side slip.