 


USE AND CARE GUIDE

HAZELHURST 5PCS LP FIRE HIGH DINING SET-CHAIR

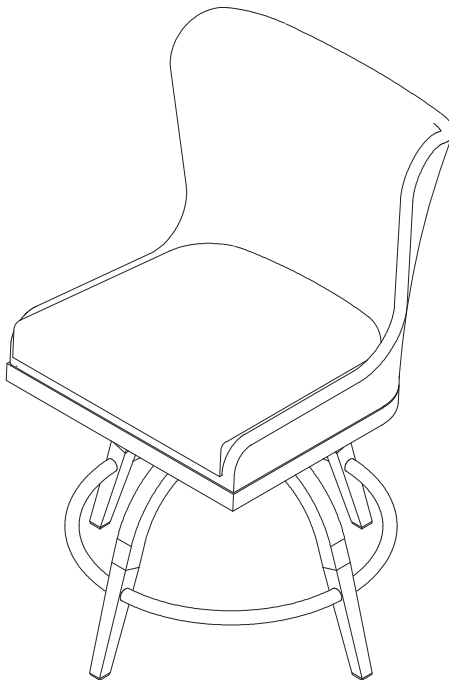

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2	Pre-Assembly.....	3
Important Safety Instructions.....	2	Planning Assembly	3
Warranty	2	Hardware Included	3
What is Covered	2	Package Contents	3
What is not Covered	2	Assembly	4
		Care and Cleaning	5

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

Warranty

THIS IS A RESIDENTIAL WARRANTY ONLY AND THIS WARRANTY DOES NOT APPLY TO COMMERCIAL USE

5 YEAR FRAME AND FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame and the fabric to be free of manufacturing defects to the original purchaser for five years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing, and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team at 1-855-HD-HAMPTON or visit www.hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Verify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.



NOTE: More than one person may be required to complete the assembly of this product.

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	M8 x 45 mm Hex bolt	4
BB	M8 Washer	8
CC	M8 Spring washer	4
DD	M8 Nut	4
EE	Hex wrench	1

 PACKAGE CONTENTS

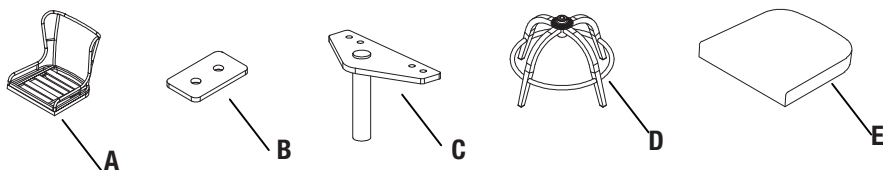


Part	Description	Quantity
A	Chair frame	1
B	Rectangular steel plate	2
C	T-rock	1
D	Chair base	1
E	Seat pad	1

Assembly


1 Attaching the T-rock

 - Attach the T-rock (C) to the chair frame (A) with four M8 x 45mm hex bolts in the order of bolts (AA), M8 washers (BB), rectangular steel plates (B), chair seat (A), T-rock (C), M8 washers (BB), M8 spring washers (CC) and M8 nuts (DD).
- Tighten all M8 x 45mm bolts (AA) with the M6-M8 hex wrench (EE).

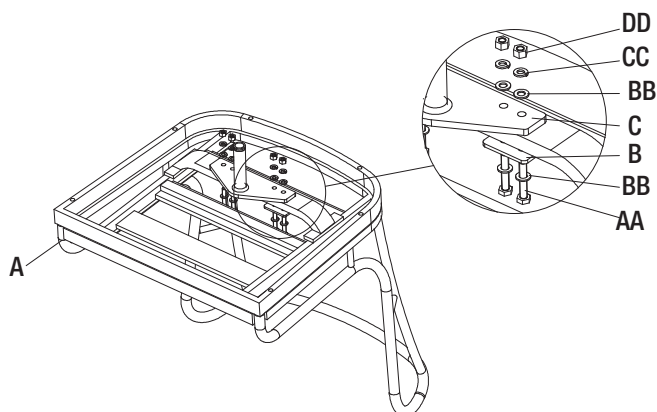


2 Connecting the chair base to the chair bucket

 - Turn the chair right side up. Insert the chair frame (A) into the chair base (D).

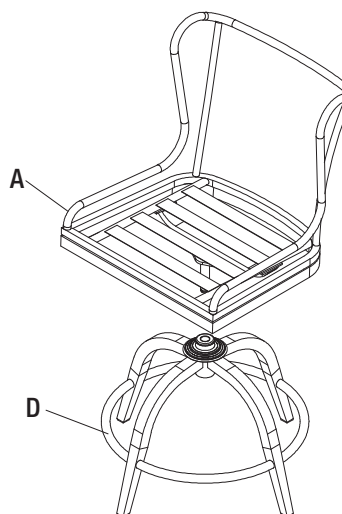

3 Adding the cushions

 - Place the seat pad (E) on the dining chair. The chair now is ready for use.

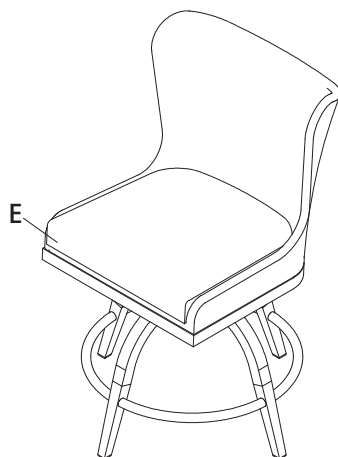

Care and Cleaning

- ❑ Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- ❑ Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- ❑ Rinse with clean water and dry with a soft, absorbent cloth towel.
- ❑ Treat the frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.

HOME DECORATORS COLLECTION®

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.