


Owner's Manual

PARTS and PARTS LIST

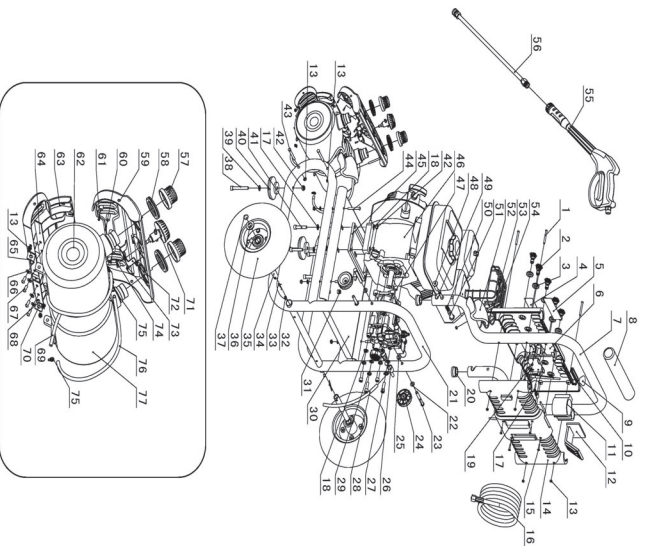

Owner's Manual

NO	APA Parts NO	DESCRIPTION	QTY
1	APW5120-YG-01	Cross Pan Head Screw M5*45	8
2	APW5120-YG-02	Nozzle	1
3	APW5120-YG-03	Nozzle Grommet	5
4	APW5120-YG-04	Lower Alu plate S3200	1
5	APW5120-YG-05	Upper Alu plate S3200	1
6	APW5120-YG-06	Front Panel	1
7	APW5120-YG-07	Handle	1
8	APW5120-YG-08	Foam	1
9	APW5120-YG-09	Throttle Lever Adjust cap	1
10	APW5120-YG-10	Rubber strip	1
11	APW5120-YG-11	Gun Storage	1
12	APW5120-YG-12	Hose Hook	1
13	APW5120-YG-13	Hexagon Nut M5	12
14	APW5120-YG-14	Rear Panel	1
15	APW5120-YG-15	Cross Pan Head Tapping Screw ST4*20	4
16	APW5120-YG-16	High Pressure Hose	1
17	APW5120-YG-17	Cross Pan Head Tapping Screw ST4*10	4
18	APW5120-YG-18	Plain Washer φ8	19
19	APW5120-YG-19	Throttle Lever Positioning Plate	1
20	APW5120-YG-20	Plug φ32	2
21	APW5120-YG-21	Frame	1
22	APW5120-YG-22	Washer	4
23	APW5120-YG-23	Rotation Shaft	2
24	APW5120-YG-24	Knob Component	2
25	APW5120-YG-25	Circlep φ8	2
26	APW5120-YG-26	Over Flow Valve Cap	1
27	APW5120-YG-27	Inner Hexagon Bolt M8*25	4
28	APW5120-YG-28	Drain Pipe	1
29	APW5120-YG-29	Spring Washer φ8	4
30	APW5120-YG-30	Baseboard	1
31	APW5120-YG-31	Protecting Sleeve	2
32	APW5120-YG-32	Clip	2
33	APW5120-YG-33	Spring Wire	2
34	APW5120-YG-34	Wheel Axle	2
35	APW5120-YG-35	10" Air Wheel	2
36	APW5120-YG-36	Plain Washer φ16	2
37	APW5120-YG-37	Circlep φ16	2
38	APW5120-YG-38	Inner Hexagon Bolt M8*45	2
39	APW5120-YG-39	Rubber Foot Gasket	2
40	APW5120-YG-40	Rubber Foot φ70	2