 


USE AND CARE GUIDE

DOWDEN CORNER CABINET

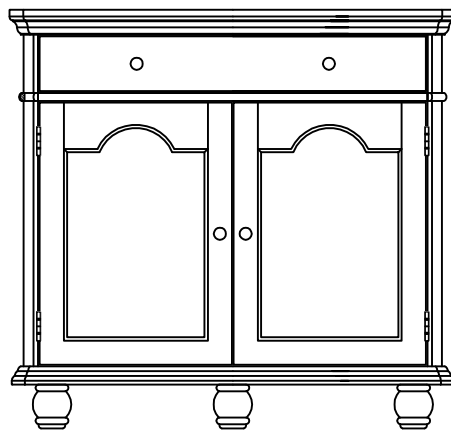

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this Dowden Corner Cabinet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.

Thank you for choosing StyleWell!

Table of Contents

Table of Contents.....	2	Pre-assembly (continued).....	4
Safety Information.....	2	Package Contents.....	4
Warranty.....	2	Notification.....	5
Pre-assembly.....	3	Assembly.....	6-10
Planning Assembly.....	3	Maintenance.....	11
Tools Required.....	3	Care and Cleaning.....	11
Hardware Included	3	Troubleshooting.....	11

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.
- Do not stand, step or climb on unit.



CAUTION

- Do not use power tools to assemble your item. Power tools may strip or damage parts/product.
- Do not over tighten connectors (screws, bolts, etc.) Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Assembly requires 2 people; assembly alone may cause injury.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly

PLANNING ASSEMBLY

Keep children and pets away from build area. Make sure your area is large enough to unpack, sort and assemble the unit.

TOOLS REQUIRED



Small head
Phillips
screwdriver
(Not Included)



Large head
Phillips
screwdriver
(Not Included)

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



AA



BB



CC



DD



EE



FF



GG



HH



II



JJ



(1)x2



 
(2)x1



(3)x1



(4)x1



(5)x1


KK

Part	Description	Quantity
AA	Cam lock	15+2
BB	Cam lock bolt	15+2
CC	Wood dowel	12+2
DD	Long round head bolt	2
EE	Handle	4
FF	Flat head screw (Ø6*30mm)	10+2
GG	Flat head screw (Ø6*16mm)	16+2

Part	Description	Quantity
HH	Metal shelf support	4
II	Magnetic clamp	2
JJ	Short round head bolt	2
KK	Anti-tipping hardware package	1

Pre-assembly (continued)

 PACKAGE CONTENTS


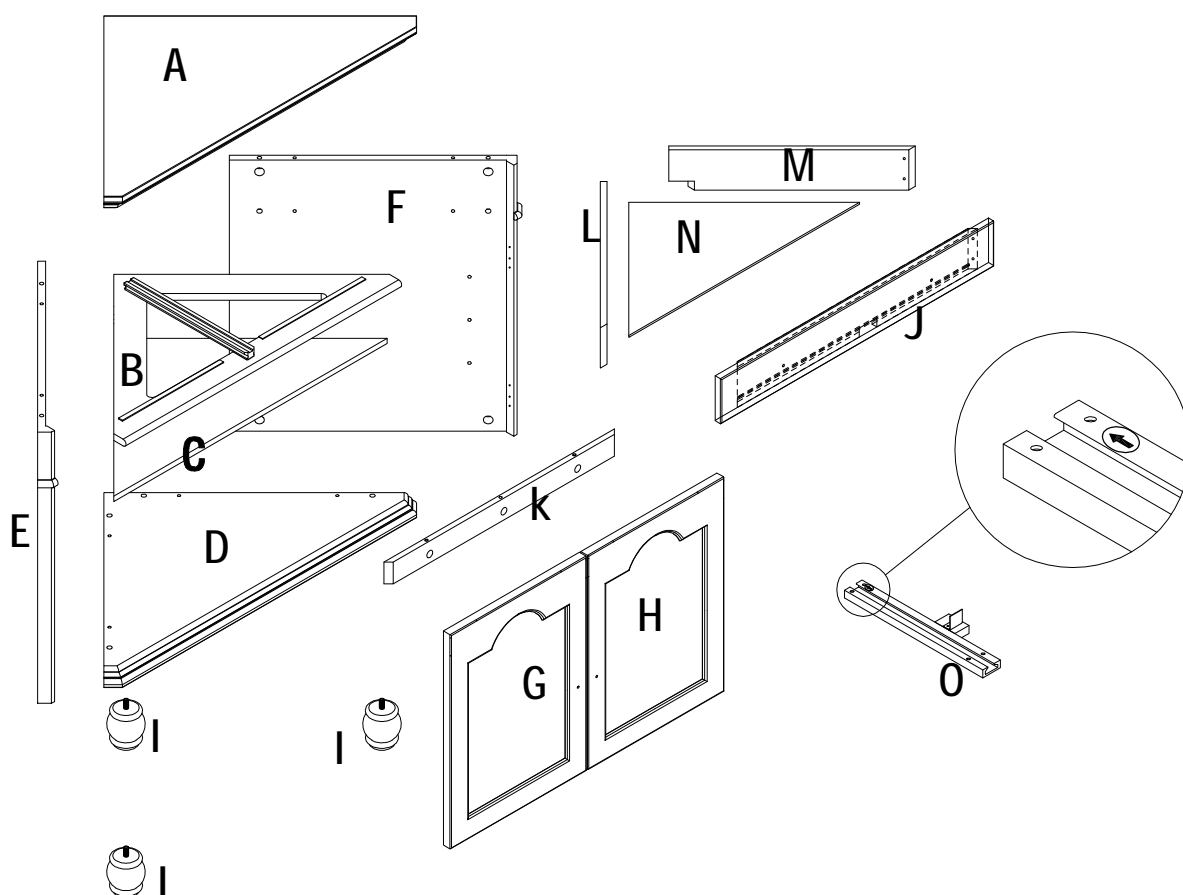


Part	Description	Quantity
A	Top panel	1
B	Fixed panel	1
C	Removable shelf	1
D	Bottom panel	1
E	Left side panel	1
F	Right side panel	1
G	Left Door panel	1
H	Right Door panel	1

Part	Description	Quantity
I	Leg	3
J	Drawer Face panel	1
K	Front support panel	1
L	Drawer left side panel	1
M	Drawer right side panel	1
N	Drawer bottom panel	1
O	Drawer glide	1




Notification

  NOTE: UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

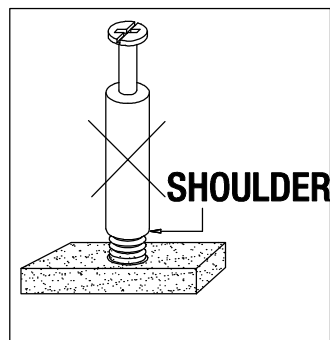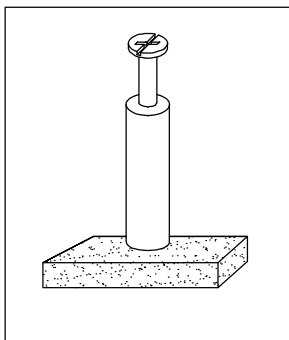

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

   HOW TO USE THE CAM TOOL

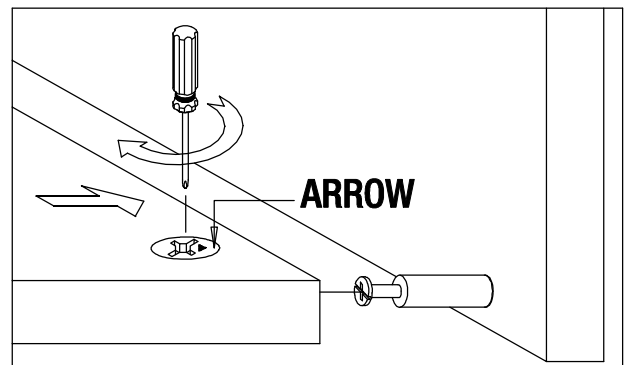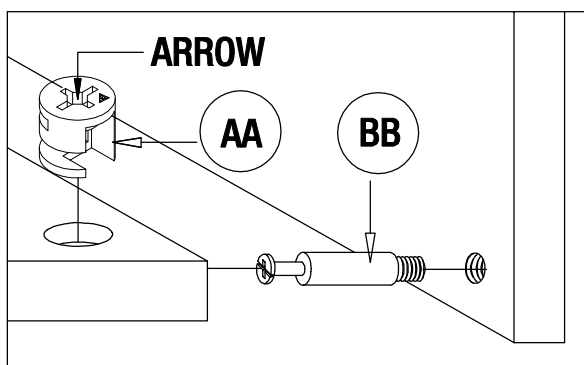


● NOTE: THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.


Assembly

1 Assemble the drawer

 
- a) Assemble panel(L) and panel(M) by rotating the flat head screws(FF).

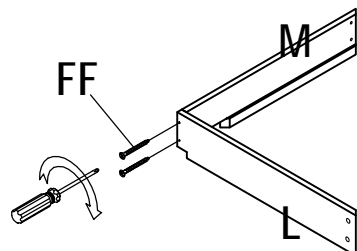

 
- b) Insert the panel(N) into the slot correctly.

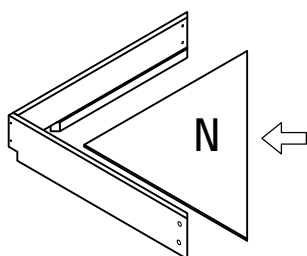

 
- c) Assemble panel(J) and panels(L/M/N) in alignment with bottom.

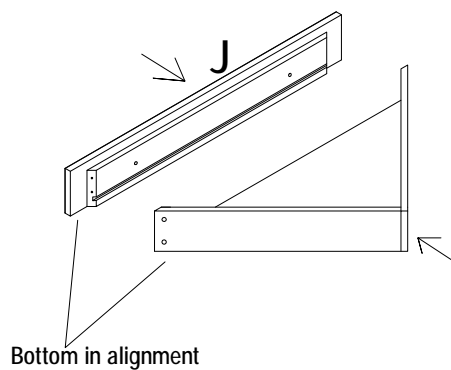

 - d) Fix panel(J) by tightening screws(FF).

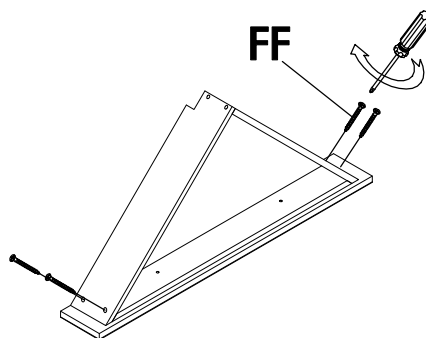

 - e) Assemble drawer glide(O) to drawer bottom with screws(FF).

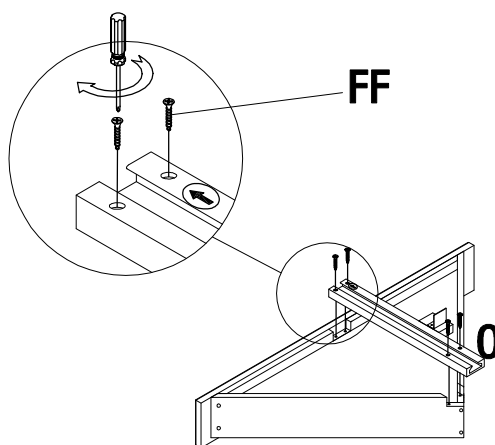

Flat head
screw
(FF) x10

 
Small head




Assembly

2 Assemble side panels


- a) Screw bolts(BB) to panels(B/E/F) as shown.

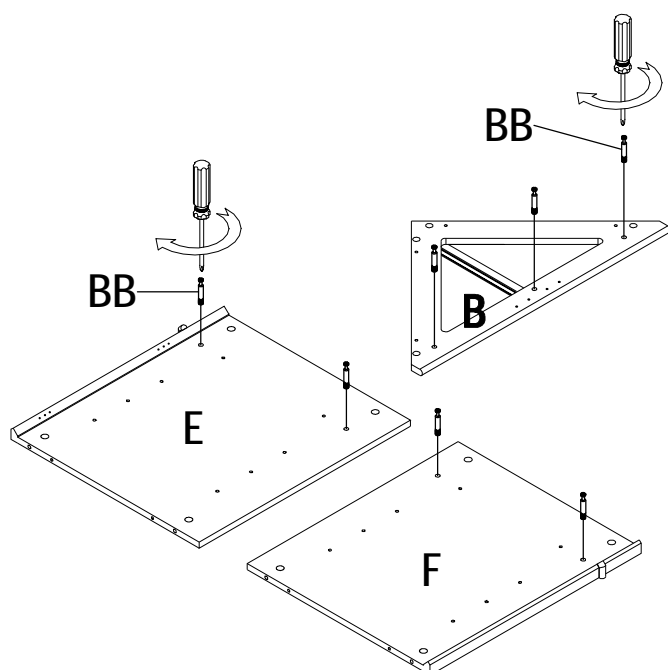

 
- b) Connect panels(B/K) with cam lock(AA).

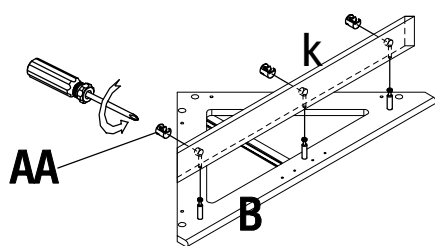

 
- c) Install magnetic clamps(II) with screws(GG) as shown.

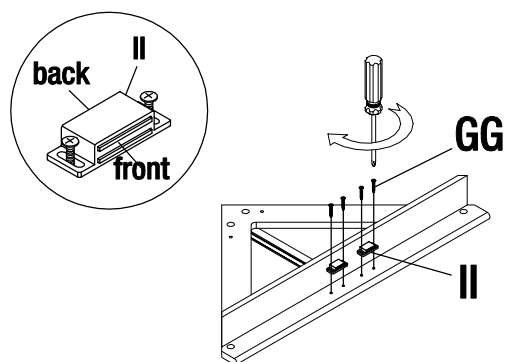

 - d) Insert wood dowels(CC) into panels(B/E/F).

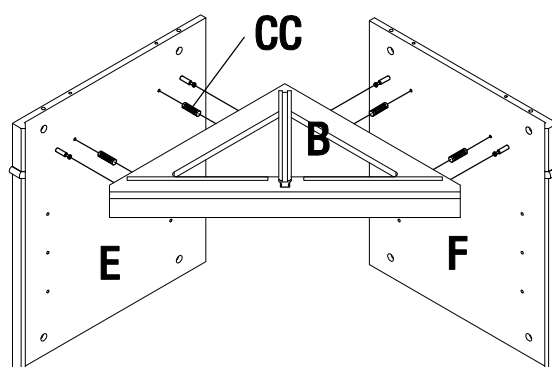

 - e) Connect the fixed panel(B) and panels(E/F) with cam lock(AA).

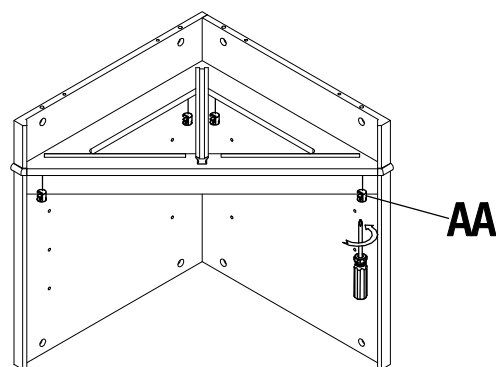

Cam lock

(AA)x7



Cam lock bolt

(BB)x7



Wood dowel

(CC)x4



Magnetic clamp

(II)x2



Flat head screw

 
(GG)x4



Small head




Large head




Assembly

3 Assemble panels (A/D)

 
- a) Insert bolts(BB) into panel(A) and panel(D), then assemble legs(I) as shown.

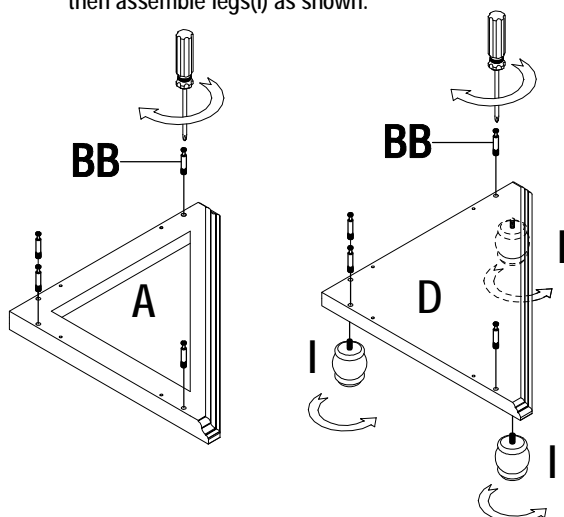

 - b) Insert wood dowels(CC) into panels(A/D/E/F).

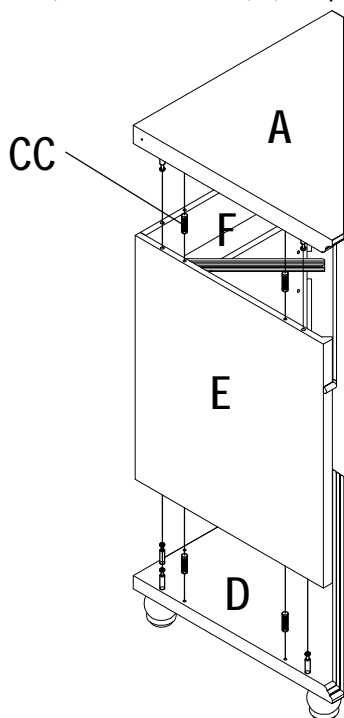

 - c) Fix panels(A/D) by tightening cam locks(AA).

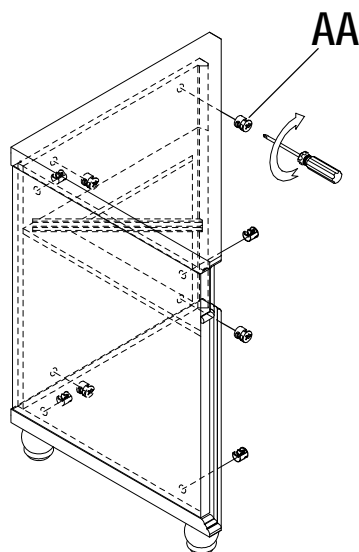

Cam lock

Cam lock bolt

Wood dowel

 
(AA)x8

(BB)x8

(CC)x8

Small head


Large head




Assembly

4 Assemble door panels(G/H) & shelf(C) & drawer handles(EE).

 
- a) Fix hinges on side panels(E/F) with flat head screws(GG), then assemble handles(EE) with bolts(JJ) on each door.

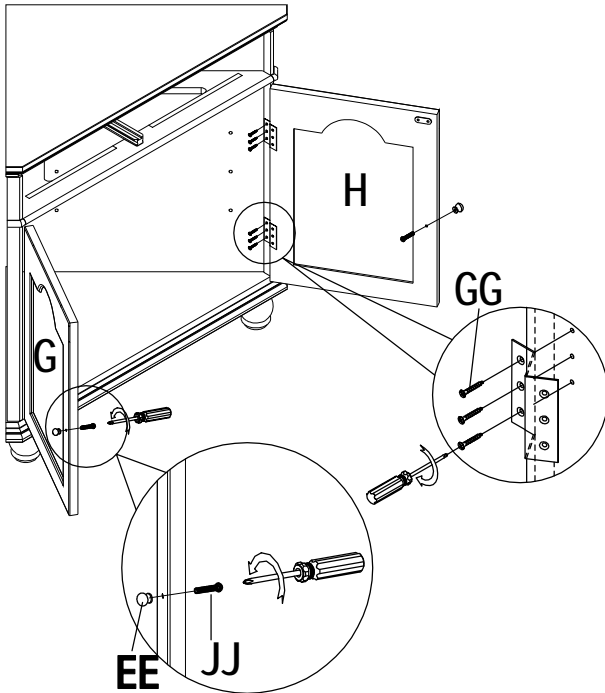

 - b) Insert shelf supports(HH) into panels(E/F), then place panel(C) on supports(HH) as shown.

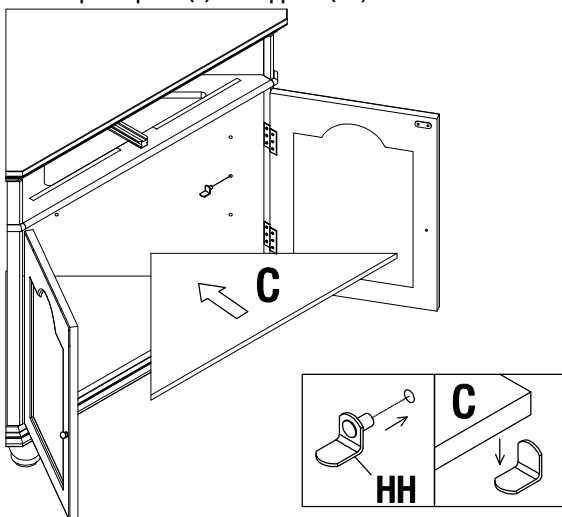

 - c) Assemble handles(EE) with bolts(DD) on the drawer, then insert the drawer into the assembled body as shown.

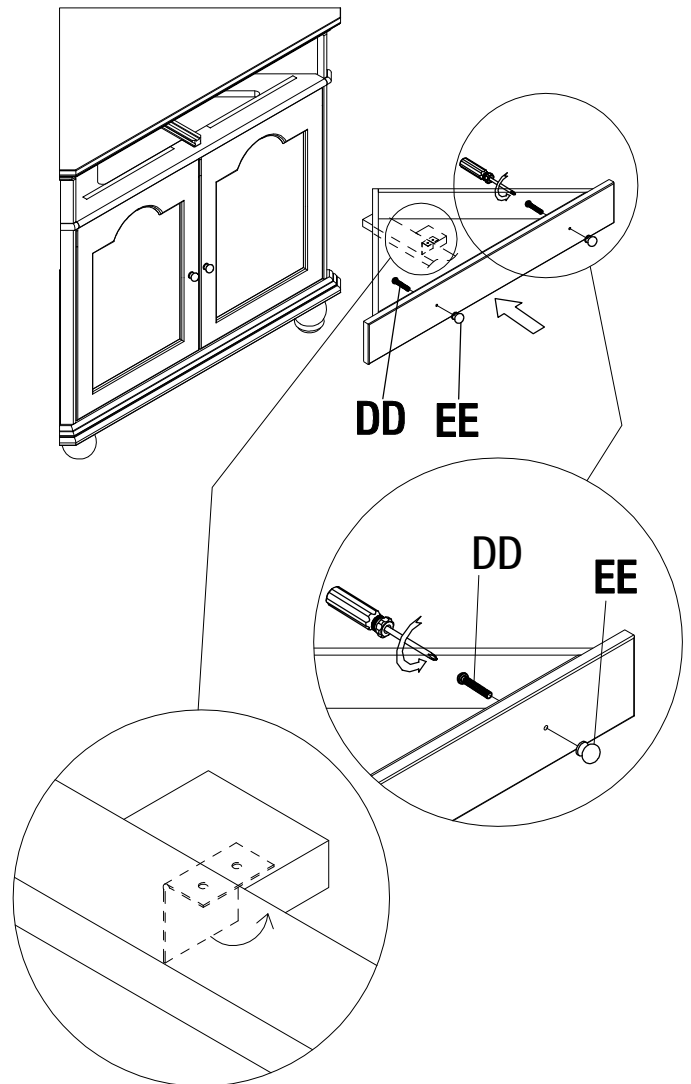

Note: When installing the drawer, please gently fold the drawer bottom stopper as shown to avoid of scratching the paint on panel.

Long round
head bolt

(DD)x2



Short round
head bolt

(JJ)x2



Handle

(EE)x4



Metal shelf
support

(HH)x4



Flat head
screw

 
(GG)x12



Small head




Large head




Assembly

5 Adjust door panels(G/H) and assemble anti-tipping hardware package

 - a) Adjust door panels.

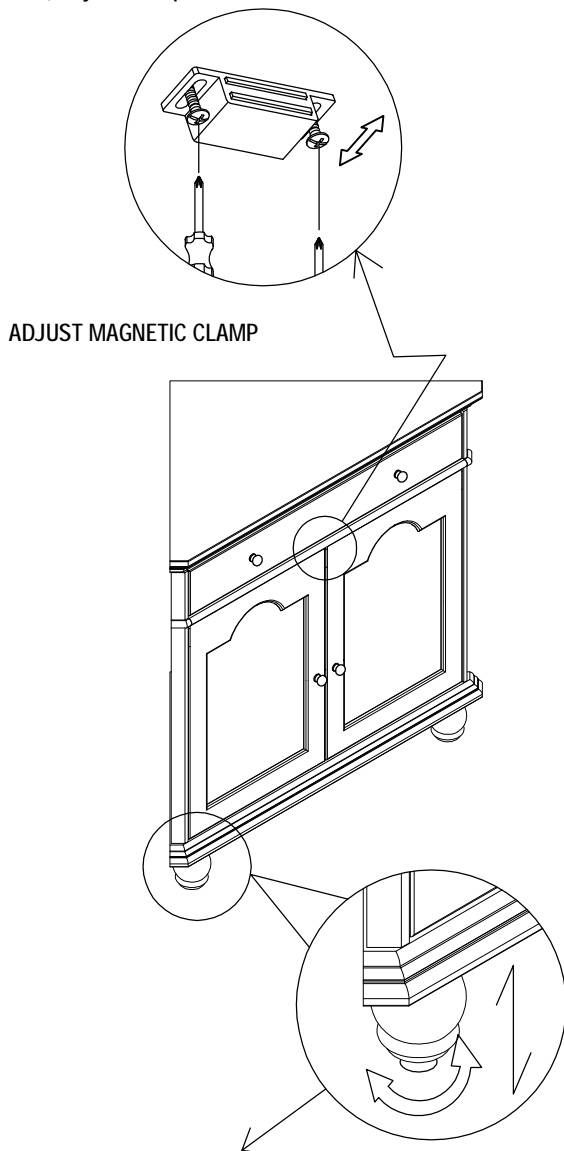

 - b) Lock the hardware on the product and the other hardware lock on the wall, then lock the product with a plastic strip.

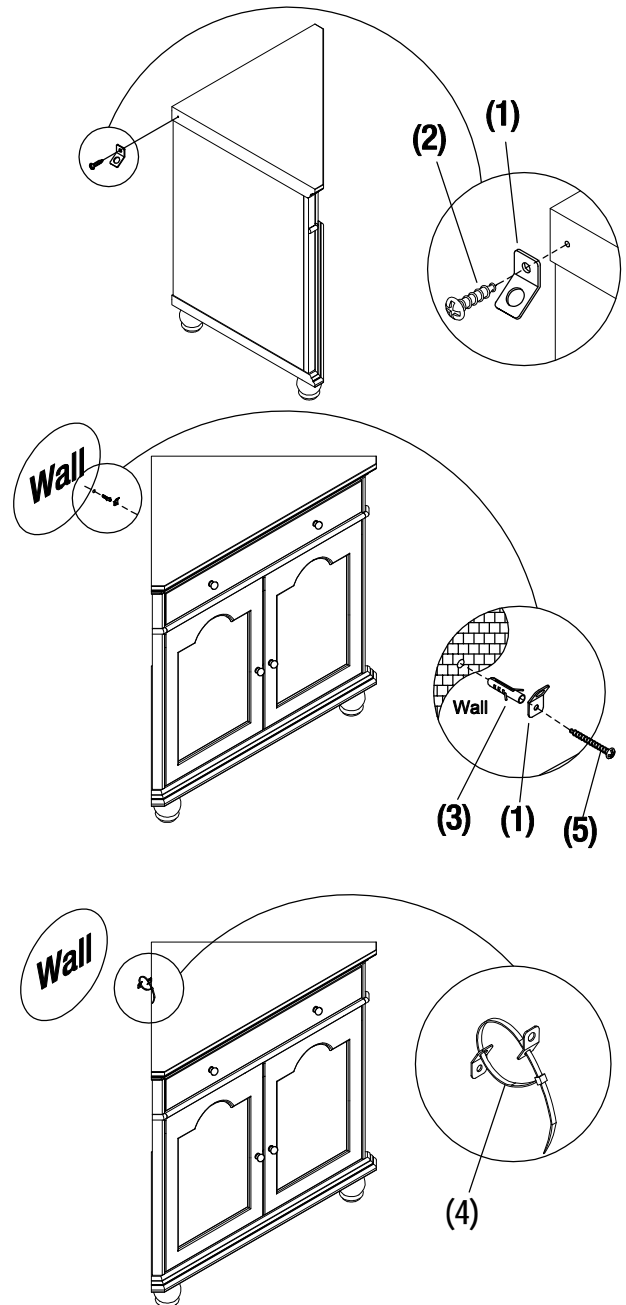

L shaped connector

(1)x2



0.63 in.Round head screw

(2)x1



Plastic anchor

(3)x1



Plastic strip

(4)x1

 


1.97 in.Round head screw

(5)x1



Small head Phillips screwdriver



KK

Maintenance

- If your furniture is stained or otherwise damaged during use, contact a professional for repairs.

Care and Cleaning

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes is not necessary. Should you choose to use polishes, test the polish in an inconspicuous area before using over the entire surface of the product.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Use care as stains or marks from crayons or ink markers will be difficult to remove.
- Be sure to immediately clean red wine or soda stains within 30 minutes or the surface will stain.

Troubleshooting

PROBLEMS	SOLUTIONS
Not all of the product's legs touch the floor	Make sure adjustable center feet levelers are adjusted properly. The levelers are pre-assembled on the bottom of the legs
	The product is KD construction. You may need to loosen the bolts and place the product on a flat surface. Ensure that the legs all touch the flat surface and then re-tighten the bolts.
	Loosen all the bolts and apply some weight to the product to get all the feet to touch the floor. Then re-tighten the bolts in that position.
Panel can not be assembled	Make sure panel is on right direction.
Door can not be closed or without magnetic	Adjust the magnetic clamp, make sure it is assembled on appropriate position.
Doors are not flat	Adjust hinges on the appropriate position.

StyleWell.™

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.