 




Item # 1004670363
Model # STR-BA5

USE AND CARE GUIDE

8 LIGHT STRING LIGHT

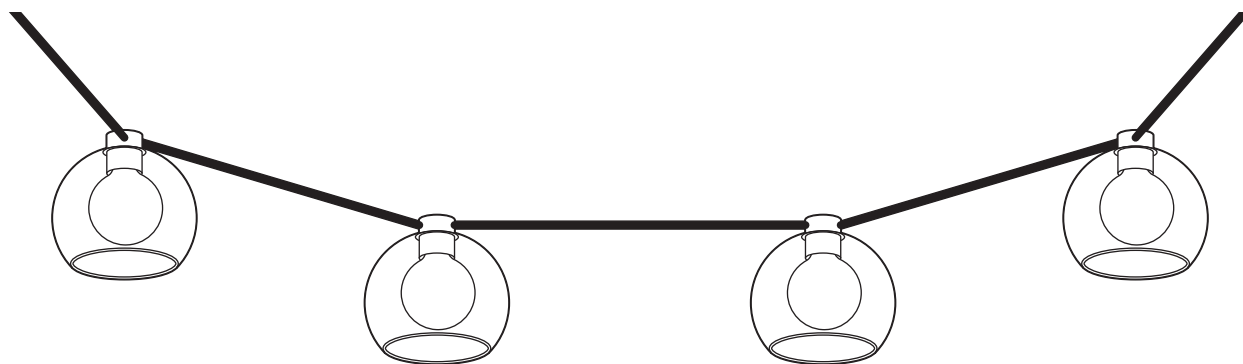

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of these string lights. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....	2
Safety Information.....	2
Warranty.....	3
Pre-Installation	3
Planning Installation.....	3
Tools Required.....	3

Package Contents	3
Operation	4
Care and Cleaning	4
User Servicing Instructions	4
Troubleshooting.....	4

Safety Information

- ☐ Consult a qualified electrician if you have any electrical questions.

When using electrical products, basic precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- ☐ Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- ☐ This seasonal use product is not intended for permanent installation or use.
- ☐ Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- ☐ Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- ☐ Do not let lamps rest on the supply cord or on any wire.
- ☐ Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- ☐ This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- ☐ Do not use this product for other than its intended use.
- ☐ Do not hang ornaments or other objects from cord, wire, or light string.
- ☐ Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- ☐ Do not cover the product with cloth, paper or any material not part of the product when in use.
- ☐ This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- ☐ This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit marking for proper fuse rating) and check the product.
- ☐ Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS



CAUTION: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation. Please call our Customer Service Team at 1-855-HD-HAMPTON.



WARNING: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.



CAUTION: To reduce the risk of fire do not deliberately reposition either lampholder contact.



CAUTION: To reduce the risk of fire and electric shock:
a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and
b) Do not mount or support wires in a manner that can cut or damage wire insulation.

Warranty

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for one year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

 
Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.hamptonbay.com.

Pre-Installation


PLANNING INSTALLATION

- ☐ Read all instructions before installation.
- ☐ To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard.
- ☐ Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED

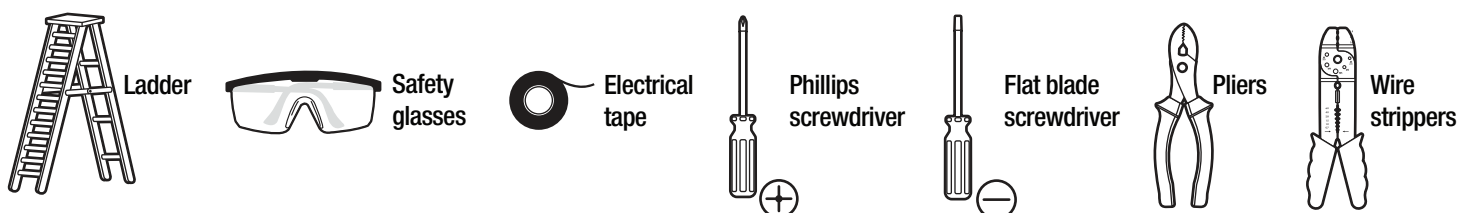

PACKAGE CONTENTS

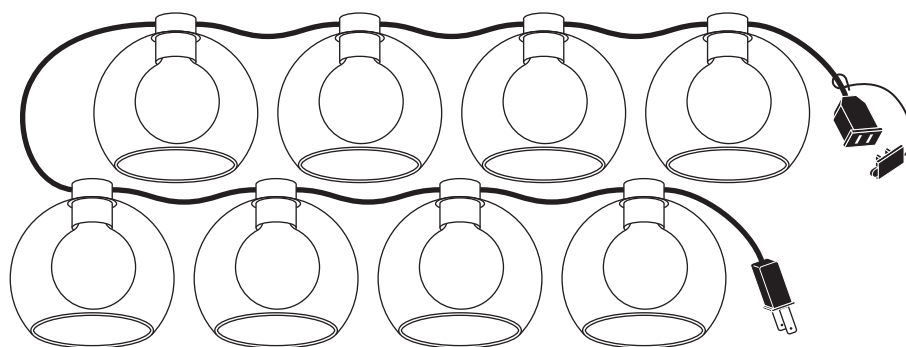 

Part	Description	Quantity
A	Light fixture (light bulbs preinstalled-E12, Type G, 5 Watt)	1



NOTE: Do not connect more than four fixtures together.

Operation

1 Turning the light on

- ☐ Turn the light switch on to activate the fixture.

Care and Cleaning

- ☐ Clean the lamp with a soft, dry cloth.
- ☐ Do not use any cleaners with chemicals, solvents, or harsh abrasives.
- ☐ When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- ☐ If the product is placed on a tree, the tree should be well secured and stable.
- ☐ Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- ☐ When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- ☐ When not in use, store neatly in a cool, dry location protected from sunlight.

User Servicing Instructions

Replace the fuse:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully.
4. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse (provided with product).
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed.

DISCARD PRODUCT IF THE ATTACHMENT PLUG IS DAMAGED.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	Replace the light bulb.
	The power is off.	Ensure the power supply is On.
	There is a faulty wire connection.	Check the wiring.
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.
The fuse blows or circuit breaker trips when the light is turned on.	There are crossed wires or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or call the Customer Service Team at 1-855-HD-HAMPTON



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.