

Product Overview

These planters are constructed from durable metal with a rust-resistant finish. They feature drainage holes, an optional detachable divider (rectangular model), and corrosion-resistant coatings designed for both indoor and outdoor use.

Daily Use Tips

- **Watering:** Ensure holes remain unobstructed. Water plants according to species requirements. Even with drainage, overwatering can cause root problems.
- **Tray / Indoor Use:** If placed indoors, use a catch tray under the planter and empty it after watering to prevent standing water, odors, or surface damage.
- **Placement:** Place the planter on a stable, level surface to prevent tipping..

Cleaning

- **Routine Cleaning:** Wipe the exterior with a soft, damp cloth to remove dust and light dirt.
- **Deep Cleaning:** For stubborn grime, wash with mild soap and water, then rinse and dry thoroughly.
- **What to Avoid:** Do not use abrasive pads, steel wool, or harsh chemical cleaners — these can scratch or remove protective coatings and accelerate corrosion.

Maintenance

- **Drainage Checks:** Periodically inspect drainage holes for blockages. Remove any compacted soil or debris; flush holes with water if necessary.
- **Coating Care:** Although the finish is rust-resistant, chips or scratches can expose bare metal. Promptly dry wet surfaces and touch up exposed areas with appropriate rust-inhibiting primer and finish paint when needed.
- **Coastal / Harsh Environments:** In high-salt or highly humid areas, inspect more frequently and consider applying a protective clear coat or wax to vulnerable spots.

Troubleshooting

- **Poor Drainage:** Ensure drainage holes are clear. Reduce watering frequency and amend soil with coarse material (perlite, sand) to improve drainage.
- **Plant discoloration or wilting:** May indicate overwatering, root restriction, or insufficient drainage — inspect roots and soil condition.
- **Surface Rust or Scratches:** Clean the affected area, sand lightly if needed, apply a rust-inhibitor primer, then touch up with matching paint.
- **Planter tilting / instability:** Ensure surface is level; reposition planter or use shims/leveling pads.