

NOSTALGIC TREE

THIS PRODUCT IS NOT A TOY! Please read this entire instruction booklet before using.

INSTRUCTION MANUAL

A. DESCRIPTION

Thank you for purchasing the **NOSTALGIC TREE**. This product features built-in illumination and a timer. This product is not a toy and is not intended for use by children. Decorative and indoor use only.

B. OPERATION

1. Remove the **NOSTALGIC TREE** from the packaging.
2. Open the battery compartment cover and insert 3 x C size batteries (not included) into the battery compartment. Align "+" and "-" as marked inside the battery compartment.
3. Close the battery compartment cover.
4. Move the switch to the "ON" or "TIMER" position to light the mechanism.
 - a) Move the switch to "TIMER" and the unit will light for 4 hours and then automatically shut off. The unit will restart 20 hours later.
 - b) Move the switch to "ON" for continuous lights.
 - c) Move the switch to "OFF" to turn off the lights.

C. TROUBLESHOOTING

PROBLEM	LIKELY CAUSE	SOLUTION
No light	Batteries not inserted correctly	Make sure to align the "+" and "-" as marked inside the battery compartment
	Timer is on	Unit will restart at the end of the 20-hour cycle. To start immediately, move the timer switch to "OFF" and then to "ON" or "TIMER" position
	Switch is at "OFF" position	Move the switch to "ON" or "TIMER" position
	Batteries exhausted	Change to new batteries

D. CARE INSTRUCTIONS

1. Do not expose this item to moisture or outdoors. This item is for indoor use only.
2. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
3. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
4. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
5. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.

E. BATTERY INSTRUCTIONS

1. Do not dispose batteries in fire. Batteries may explode or leak.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Replace batteries of the same brand.
5. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
6. Remove fully discharged batteries immediately.
7. Batteries should be recycled or disposed of as per state and local guidelines.
8. Remove all the batteries for storage of the unit to avoid battery leakage.

F. SAFETY INSTRUCTIONS AND WARNINGS

WARNING:

THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS, WHICH COULD CAUSE CHOKING IF SWALLOWED.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL.

PLEASE ADHERE TO THE FOLLOWING:

1. **Read Instructions** - All safety and operating instructions should be read before the item is operated. Please adhere to the instructions and warnings for your safety.
2. **Heat** - The item should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
3. **Moisture** - The item should be situated away from water or any other liquids. Do not splash, spill or immerse this item into any liquid.
4. **Damage Requiring Service** - Have a qualified service personnel service this item when:
 - a. Objects have fallen on the item or liquid has spilled into the item.
 - b. The item has been exposed to rain or moisture.
 - c. The item has been dropped or the enclosure damaged.
 - d. All troubleshooting techniques have been tried and the item will not work or has stopped working.

The following is only applicable to customers in the USA:

For more information about this product, please call 1-800-467-9627, or visit our website www.mrchristmas.com. We will be happy to help you!

FEDERAL COMMUNICATIONS COMMISSION, PART 15:

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- (a) reorient or relocate the receiving antenna;
- (b) increase the separation between the equipment and the receiver;
- (c) connect the equipment to an outlet on a circuit different from that to which the receiver is connected;
- (d) consult the dealer or an experienced radio/TV technician for help.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

G. NINETY-DAY LIMITED WARRANTY

Mr. Christmas warrants the original customer / purchaser of the **NOSTALGIC TREE** that they will be free from defects in material and workmanship for a period of ninety (90) days from date-of-purchase. Any liability under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer / purchaser. This warranty does not cover defects caused by damages in transit, abuse, accident, negligence or repairs made by others. This warranty gives the original consumer / purchaser specific legal rights. The original consumer / purchaser may also have other rights which vary from state to state.