



24" Pre-lit Cashmere Wreath
50 ct. Warm White 2-Function LED Lights
Battery Operated with Timer
Item # DCWR2410



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Requires six (6) x AA 1.5V batteries (sold separately) • Alkaline batteries recommended
Includes timer: 6 hours on / 18 hours off cycle • For indoor and covered outdoor use

SETUP INSTRUCTIONS

Step 1: Locate the battery box (see **Fig. 1**) on the back of the wreath. Unstrap it from the wreath and open it by unfastening the clips on the sides. Insert six (6) AA batteries (not included) with the correct polarity (+/-). Close the battery box and fasten the clips securely, ensuring the gasket is in position to keep out water. Restrap the battery box to the back of the wreath.

Step 2: To turn the lights ON and switch functions, press the black button on the front of the battery box. The lights have the following functions:

1. STEADY ON WITH TIMER (6 HOURS ON, 18 HOURS OFF)
2. TWINKLE WITH TIMER (6 HOURS ON, 18 HOURS OFF)
3. OFF

Timer is automatically preset for lights to stay on for 6 hours and turn off for 18 hours. It is recommended to first activate your lights at the time that you want them to come on each day.

NOTE: Product does not have a continuous light feature. It only operates on a timer.

IF YOU HAVE ANY LIGHTS NOT WORKING, THEN VISIT THE SECTION ON TROUBLESHOOTING.



Fig. 1

SHAPING

- Reference the image on the front page. It will help guide you on how the wreath looks properly shaped.
- Turn on the lights as you are shaping the wreath.
- Place the wreath on a flat surface with the frame facing down.
- Straighten and separate all branch tips. Shape each tip in the same direction and lift them to create layers of foliage. To achieve maximum fullness, tips should not touch one another.
- For a smooth, rounded silhouette, slightly curve the outer tips and keep the center open and free of branches.
- After shaping, stand back and check your work. Ensure the lights and pinecones are clearly visible. Adjust any stray tips or branches to create a natural, full look.

CLEANING & CARE

- Dust gently using a dense fiber duster or a soft, dry cloth.
- Do NOT use any chemicals or solvents to clean.
- Handle the light sets gently. Do NOT pull or tug light sets as this may inadvertently loosen the bulbs.
- Remove all batteries from the wreath prior to storage.
- Follow all the Safety Instructions.

SAFETY INSTRUCTIONS

THIS PRODUCT IS SAFE FOR INDOOR AND COVERED OUTDOOR USE.

PLEASE READ AND FOLLOW ALL THE INSTRUCTIONS AND WARNING TAGS PROVIDED WITH THIS PRODUCT.
SAVE THESE INSTRUCTIONS – THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS.

BASIC PRECAUTIONS SHOULD ALWAYS BE PRACTICED INCLUDING THE FOLLOWING:

- **WARNING!** This is not a toy. For decorative use only. KEEP OUT OF REACH OF CHILDREN.
- Do not operate the product if the battery box or light set is damaged. Always inspect for signs of damage or wear.
- Do not immerse the product or any of its components in water or other liquids.
- This seasonal use product is not intended for permanent installation or use.
- Do not alter the construction of the wiring in any way.
- Do not use the product for other than its intended use.
- Always purchase the correct size and grade of battery.
- Replace all the batteries at the same time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and those of the device prior to battery installation.
- Ensure the batteries are installed correctly regarding polarity (+ and -).
- Remove batteries when product is not to be used for an extended period.
- Remove used batteries promptly.
- DO NOT dispose of batteries in fire. Batteries may explode or leak.
- Recycle or dispose of batteries according to local and federal government requirements.

FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

TROUBLESHOOTING

1. Push the button on the battery box.
2. Check to ensure rubber protection over button intended to keep out water is not damaged.
3. Ensure all batteries are fresh and in correct polarity (+ and -) positions.
4. If the lights are dim, then replace the batteries with new ones.

NOTE: Bulbs are not replaceable.

THANK YOU FOR YOUR PURCHASE
Comments or questions?
Call us at 1-877-359-0115 or contact
us at customerservice@haute-decor.com

Haute Decor
PO Box 1594
Allen, TX 75013



Made in China
©2025 Haute Decor