

**CP-075, CP100, CPF-075, CPF-100, CPJTFV-100**

INSTALLATION INSTRUCTIONS INSTRUCCIONES DE INSTALACIÓN DIRECTIVES D'INSTALLATION

IN-LINE SPRINKLER VALVES
VÁLVULAS EN LÍNEA PARA ASPERSORES
VALVES D'ARROSEURS EN LIGNE

SINGLE ZONE, OUTDOOR USE ONLY
PARA UNA SOLA ZONA, SÓLO PARA USO EXTERIOR
ZONE UNIQUE SEULEMENT, USAGE À L'EXTERIEUR UNIQUEMENT

BEFORE INSTALLING VALVE

- *** Flush system until water runs clear.
- *** For best performance, install a pressure regulator if water pressure exceeds 70PSI. Never exceed 150 PSI.
- *** If water source has sediment, install a 100 mesh or finer filter.
- *** Do not use with water exceeding 110° F (43.3° C). Refer to local building codes for other plumbing and electrical requirements.

INSTALLATION STEPS (Outdoor Use Only)

Pipe Connection

TIP: Using pipe unions (B) on both the inlet and outlet side of the valve as shown will greatly simplify installation and allow retightening to correct for leaks. Unions will also permit connections to be preassembled on a benchtop and enable easier valve maintenance/replacement in the future.

1. Apply Teflon tape to all male threads. DO NOT USE pipe sealant paste which will damage your system. Assemble in the order shown and tighten.
2. Tighten the union (B) collars and test fit the entire assembly in the valve box.

CAUTION: Make sure the valve arrows face correctly in direction of flow.

3. When satisfied with fit of all components, clean the ends to be glued with primer and apply solvent glue.

Wiring


TIP: Use watertight connectors (gel caps) and multi-strand direct burial wire only.

4. Connect the common wire from the controller (typically white) to one of the two wires from valve solenoid. It does not matter which wire you use.
5. Attach the valve's remaining wire lead to the strand color for that zone.

First Use

6. To flush the valve, turn on water and open Bleed Screw for 1 full minute (This will flush smaller debris).
7. Tighten bleed screw and test system. If valve does not close fully, check solenoid and bleed screw for leaks.
8. If valve still does not close fully, remove bonnet, flush and reinstall.

Fig. 1

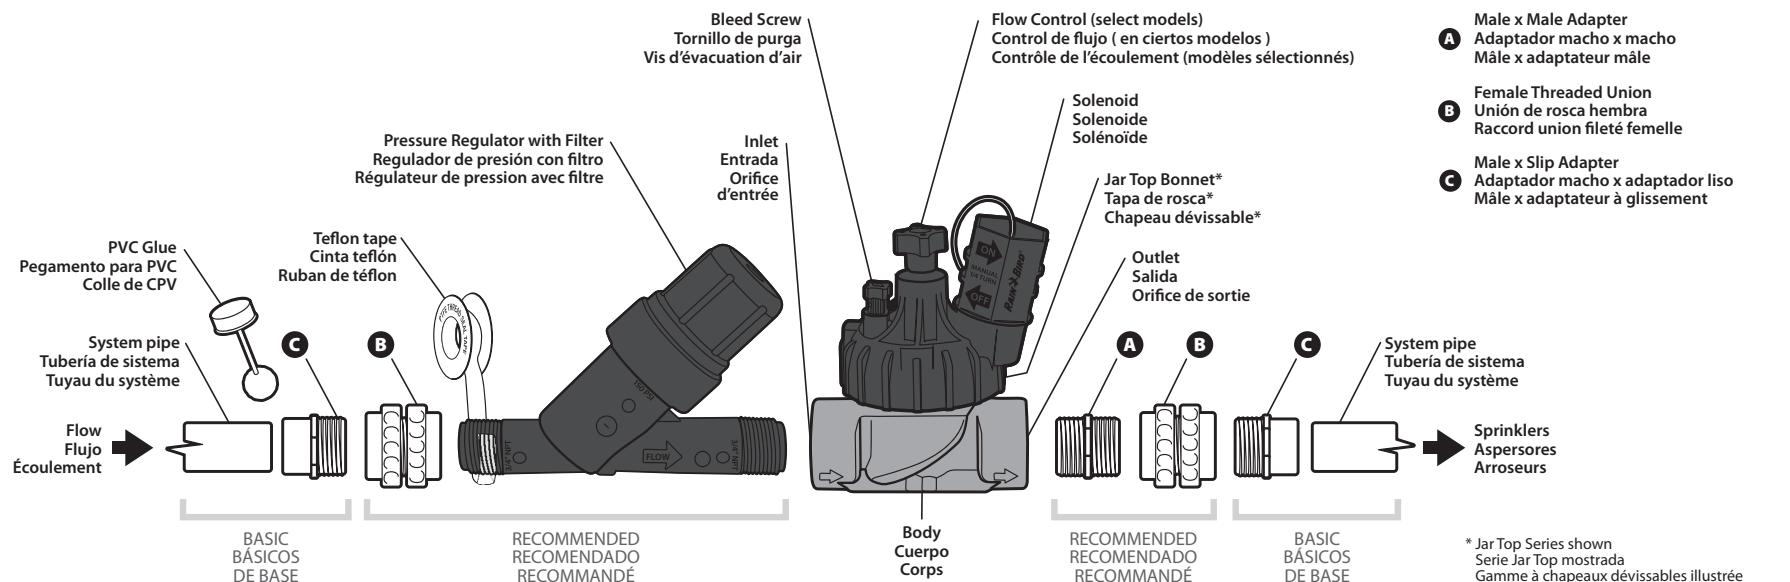

- A** Male x Male Adapter
Adaptador macho x macho
Mâle x adaptateur mâle
- B** Female Threaded Union
Unión de rosca hembra
Raccord union fileté femme
- C** Male x Slip Adapter
Adaptador macho x adaptador liso
Mâle x adaptateur à glissement

* Jar Top Series shown
Serie Jar Top mostrada
Gamme à chapeaux dévissables illustrée

Fig. 2
Wiring
Cableado
Câblage