


USE AND CARE GUIDE

BRADSTONE JEWELRY ARMOIRE

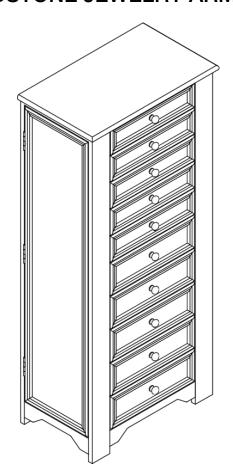

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this Bradstone Jewelry Armoire. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2
Safety Information	
Warranty	
Pre-assembly	
Planning Assembly	
Tools Required	3

Hardware Included	3
Assembly	4
Maintenance	
Care and Cleaning	
Troubleshooting	
	•••••••••••••••••••••••••••••••••••••••

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS. **GUIDELINES AND RECOMMENDATIONS IN THIS** MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.
- Do not stand, step or climb on unit.

Warranty



CAUTION

- Do not use power tools to assemble your item. Power tools may strip or damage parts/product.
- Do not over tighten connectors (screws,bolts,etc.) Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level
- Some assembly may involve attaching glass or
- Be very careful handling the glass or mirrors, as server injury may result if glass or mirrors breaks.
- Never handle large piece of glass or mirrors by
- Assembly requires 2 people; assembly alone may cause injury.

3 YEARS WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for three years.

WHAT IS NOT COVERED

 
This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly

PLANNING ASSEMBLY


Keep children and pets away from build area. Make sure your area is large enough to unpack, sort and assemble the unit.

TOOLS REQUIRED



HARDWARE INCLUDED




 

Part	Description	Quantity
AA	Anti-tipping hardware package	1


Assembly

1 Finalizing the assembly

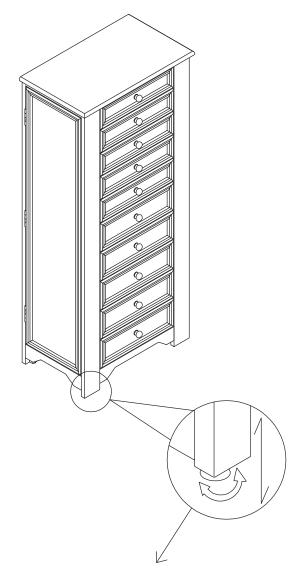


IF THE GROUND IS NOT EVEN THE SIDEBOARD WILL BE UNSTABLE OR THE DOORS UNSYMMETRICAL, YOU CAN ADJUST THE FOOT LEVELER UNDER THE LEG. TURN LEFT TO TIGHTEN, TURN RIGHT TO LOOSEN.

 a) Install anti-tipping hardware Package(AA) as illustration below.

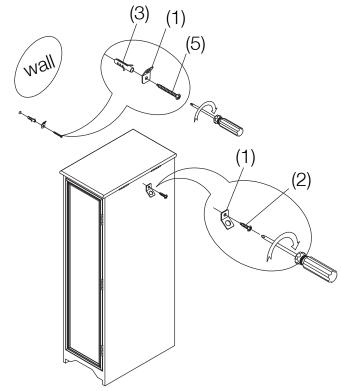

□ b) Connect plastic strip(4) with anti-tipping hardware.

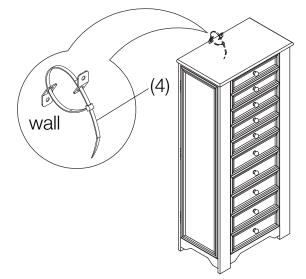

Rectangle metal plate	0.63 in.Round head screw	Plastic anchor	Plastic band	1.97 in.Round head screw		
(1)X2	(2)X1	(3)X1	(4)X1	(5)X1		Small head
	entro)				——AA	

Maintenance

If your furniture is stained or otherwise damaged during use, contact a professional for repairs.

Care and Cleaning

- □ Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes is not necessary. Should you choose to use polishes, test the polish in an inconspicuous area before using over the entire surface of the product.
- □ Using solvents of any kind on your furniture may damage the finish.
- □ Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- □ Liquid spills should be remove immediately. Using a soft, clean cloth, blot the spill gently avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- □ Use care as stains or marks from crayons or ink markers will be difficult to remove.
- Be sure to immediately clean red wine or soda stains within 30 minutes or the surface will stain.
- Lightly dust mirror with soft dry cloth to remove any dust prior to using window cleaner.
- Do not touch salt, grease, acid and other substances on the mirror, it is easy to corrosion.

Troubleshooting

PROBLEMS	SOLUTIONS
Not all of the product's legs touch the floor	Make sure adjustable center feet levelers are adjusted properly. The levelers are preassembled on the bottom of the legs
Doors is not flat	Adjust the hinge, make sure it is assembled on appropriate position.



Questions, problems, missing parts?

Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.