### CARE AND MAINTENANCE

Wipe clean with a soft cloth dampened in water and a mild soapy solution. Wipe dry with a clean and dry cloth.

If there are any questions relating to defects, missing parts, assembly issues or replacements, please send a detailed email to hello@happimess.com

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.


# Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Upper Left Leg		1x
В	Lower Left Leg		1x
С	Upper Right Leg		1x
D	Lower Right Leg		1x
Е	Shelf		5x
F	Metal Bracket		10x
G	Bolt M6x15mm		40x
Н	Screw M6x60mm	Dummum	4x
I	Anchor		4x
К	Allen Key		1x

# happimess

Item #: MSH1001

Product Dimensions: W23.6" x D11.8" x H72"

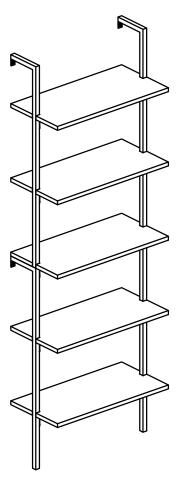

Weight Capacity: 60 Lbs

Warning: Do not stand on Shelf Warning: Do not sit on Shelf









# **PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware content list. If any parts is missing or damaged, do not attempt to assemble the product Estimated Assembly Time is 20 Minutes.

