



**YOW SKU # 721 099**  
**Model # TY156-1624-1**

## USE AND CARE GUIDE

### SET OF 3 TINSEL WITCHES



*THANK YOU*

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this SET OF 3 TINSEL WITCHES. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

#### Guarantee

##### What is Covered

The product is intended for residential seasonal use for approximately 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

##### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

**1-877-527-0313**

 
**HOMEACCENTSHOLIDAY.COM**

## Pre-Assembly

### PLANNING ASSEMBLY

Carefully remove all the parts from the box and read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Many parts are connected together by the lighting string. Please handle with care. Contact our customer service center or return to place of purchase with proof of purchase receipt. Assembly of this product may require more than one person.

### PACKAGE CONTENTS

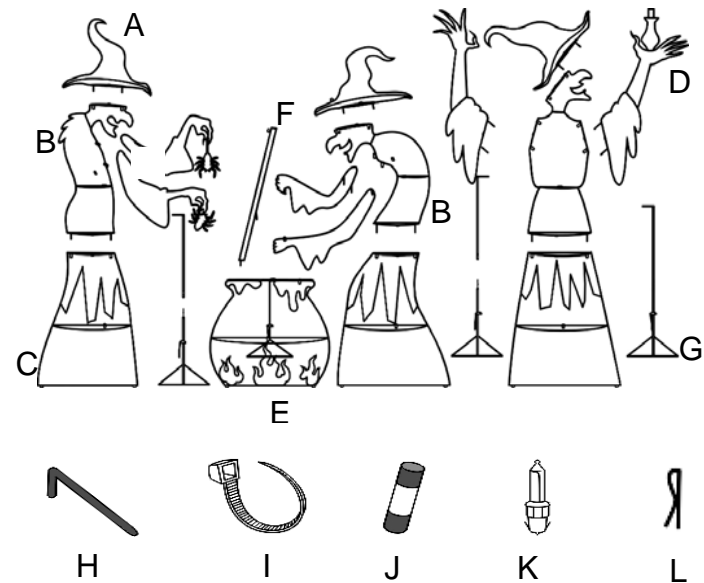

Package Contents/Parts List		
Part	Description	Quantity
A	Hats	3
B	Upper Bodies of Witches	3
C	Lower Bodies of Witches	3
D	Arms / Hands	6
E	Cauldron	1
F	Stirring Stick	1

Package Contents/Parts List		
Part	Description	Quantity
G	Support Pole and Base	3
H	Ground Stakes	16
I	Plastic Tie	30
J	Spare Fuse	3
K	Spare Bulb	12
L	Cotter Pin	3

## Assembly

### Assembling the Tinsel Witches

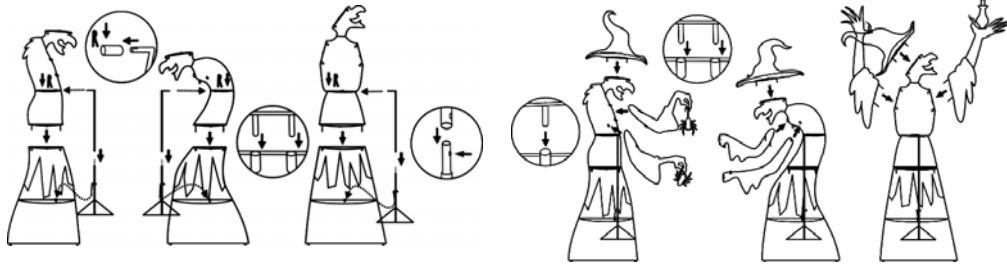 


FIG.1

FIG.2

Step 1. There are 3 Witches Bodies. Lay the Bodies out on the floor to match up the correct Body Halves before you proceed. Insert the rods of the Upper Body of Witch (B) into the matching holes on the Lower Body of Witch (C) for the three different Witch Bodies then fasten together with the Plastic Ties (I). Stack and lock the narrow end of the Support Pole (G) into the " T " shaped Base (G). Stand the assembled Witches then insert the top bent end of the Supporting Pole and Base into the matching hole on the back of Body of Witches. Fasten with the Cotter Pin (L). (FIG.1)

Step 2. Stand the Cauldron up and attached the short Support Pole and Base to the back side of Cauldron. Use the Cotter Pin to secure the Support Pole to the Cauldron. (FIG.3)

Step 3. Place the Hats (A) into matches holes on the head of each Witch (FIG.2) and insert the Arms/Hands (D) into the matching holes on each Witch's body (following the diagram for the correct Witch Body) then fasten them together with the Plastic Ties (I). (FIG.3)

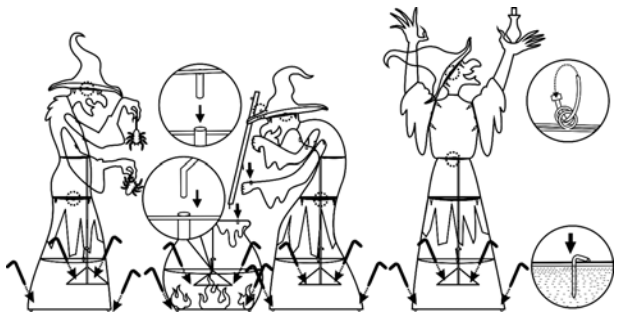 


FIG.3

Step 4. Insert the Stirring Stick (F) into the matching holes on the Hand of the hunched over Witch and the top inside of Cauldron then fasten them together with the Nylon Ties (I). (FIG.3)

Step 5. Insert Ground Stakes (H) into the ground securing the base of each Witch and the Cauldron. (FIG.3)

## Pre-Operation

**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

**CAUTION:** The lighting string on this product is rated at 28.8 Watts (0.24Amps) and 40.8 Watts (0.34Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other product. Before you use or re-use this product inspect it carefully. Return the product to place of purchase with receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

## Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product conductors, connections, and wires. If the product is placed somewhere other than the ground it should be well secured and stable.
- Wipe the product with a damp cloth and allow the product to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

## FOR INDOOR AND OUTDOOR USE