

Care and Maintenance

- ☐ Do not use abrasive cleaning creams or powders, concentrated caustic soda, formic acid, or anything highly corrosive. For more information on removing difficult stains, contact customer service at 1-855-HD-GLACIER or visit your local Home Depot store.
- ☐ Clean with a sponge or soft dish cloth and gentle sink soap. For stains that are difficult to remove, such as calcium deposits, use eraser sponges, vinegar-based cleaners, and lime removers.
- ☐ Rinse the sink with hot water and dry the sink with a soft absorbent cloth.
- ☐ Fruit juices, coffee, and tea can stain the surface of your sink if not removed. Rinse or wipe the sink promptly after these substances make contact with the sink.
- ☐ Never use steam or high-pressure cleaning systems to clean your sink.