

MICROWAVE OVEN INSTRUCTION MANUAL

Model: FMO11AESBKA



Read these instructions carefully before using your microwave oven, and maintain its upkeep. If you follow the instructions, your oven will provide you with many years of good service.

KEEP THESE INSTRUCTIONS IN A SAFE PLACE

FARBERWARE®

Farberware is a registered trademark of Farberware Licensing Company, LLC
Manufactured and sold pursuant to a license from Farberware Licensing Company, LLC
© 2017 Farberware Licensing Company, LLC. All rights reserved.

Tables of Contents

PRECAUTIONS.....	4
SPECIFICATIONS.....	4
SAFETY	5
GROUNDING.....	6
UTENSILS	8
SETTING UP YOUR OVEN	10
CONTROL PANEL.....	12
OPERATION.....	13
MAINTENANCE	18
WARRANTY INFORMATION	19

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.
It is important not to tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow food or cleaner residue to accumulate on the sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - (1) DOOR (bent)
 - (2) HINGES AND LATCHES (broken or loosened)
 - (3) DOOR SEALS AND SEALING SURFACES (Do not use if the door seal or sealing surfaces are damaged.)
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

Model:	FMO11AESBKA
Rated Voltage:	120V~60Hz
Rated Input Power (Microwave):	1550W
Rated Output Power (Microwave):	1100W
Oven Capacity:	1.1 cubic feet
Turntable Diameter:	Ø12.4 inches
External Dimensions:	20.1 x 16.6 x 12.1 inches
Net Weight:	25.6 lbs

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

WARNING - To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific: **"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"** found on page 4.
3. This appliance must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 6.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers - for example, closed glass jars - are able to explode and should not be heated in this oven.
6. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
7. As with any appliance, close supervision is necessary when used by children.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surface.
14. Do not let cord hang over edge of table or counter.
15. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.
16. To reduce the risk of fire in the oven cavity:
 - a. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
 - c. If material inside of the oven ignites, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
17. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.
THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.

To reduce the risk of injury to persons:

1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.
4. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
5. Use extreme care when inserting a spoon or other utensil into the container.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING – Improper use of the grounding can result in a risk of electric shock. **Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.** If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

DANGER – Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING – Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b. The extension cord must be a grounding-type 3-wire cord.
 - c. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
3. Clean door and sealing surface of the oven.
 - a. Reorient the receiving antenna of radio or television.
 - b. Relocate the microwave oven with respect to the receiver.
 - c. Move the microwave oven away from the receiver.
 - d. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

SAFETY

1. The oven must be on a leveled surface.
2. The turntable and turntable roller rest must be in the oven during cooking. Place the cookware gently on the turntable and handle it carefully to avoid possible breakage.
3. Incorrect use of browning dish may cause the turntable to break.
4. Use only the specified bag size when using Direct Access Popcorn.
5. The oven has several built-in safety switches to ensure that the power remains off when the door is open. Do not tamper with these switches.
6. Do not operate the microwave oven empty. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
7. Do not cook bacon directly on the turntable. Excessive local heating of the turntable may cause the turntable to break.
8. Do not heat baby bottles or baby food in the microwave oven. Uneven heating may occur and could cause physical injury.
9. Do not heat narrow-necked containers, such as syrup bottles.
10. Do not attempt to deep-fry in your microwave oven.
11. Do not attempt home canning in this microwave oven, as it is impossible to be sure all contents of the jar have reached boiling temperature.
12. Do not use this microwave oven for commercial purpose. This microwave oven is made for household use only.
13. To prevent delayed eruptive boiling of hot liquids and beverages or scalding yourself, stir liquid before placing the container in the oven and again halfway through cooking time. Let stand in the oven for a short time and stir again before removing the container.
14. Use care when cooking food in the microwave oven to avoid burning due to excessive cooking.
15. When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
16. Failure to maintain the oven in a clean condition could lead to deterioration that could adversely affect the life of the appliance and possibly result in a hazardous situation.

UTENSILS

CAUTION – Personal Injury Hazard

Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

MATERIALS TO AVOID IN MICROWAVE OVEN

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a in the oven.
Paper bags	May cause fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

MATERIALS YOU CAN USE IN MICROWAVE OVEN


Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer* instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer* instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer* instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

SETTING UP OUR OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories.

Glass tray (turntable)
Turntable ring assembly
Instruction manual

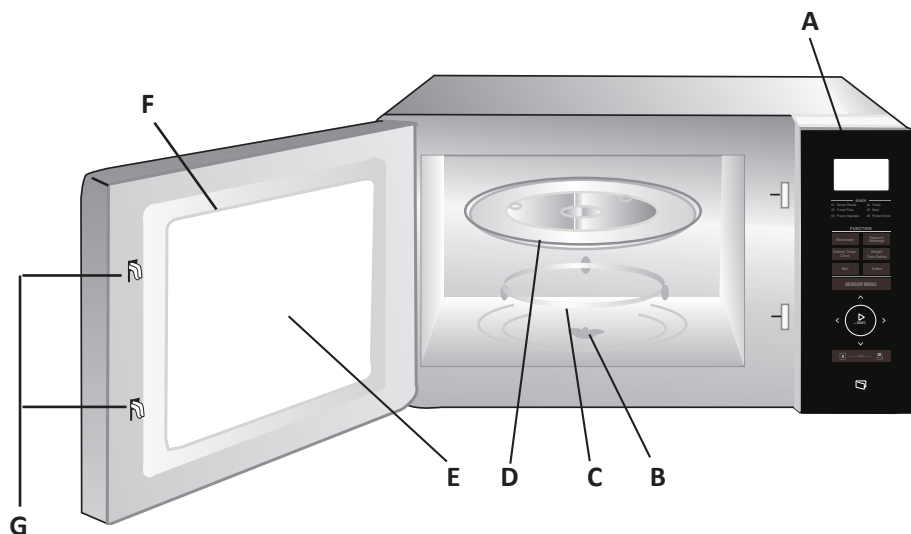

- | | |
|----------------------------|----------------------------|
| A) Control panel | E) Observation window |
| B) Turntable shaft | F) Door assembly |
| C) Turntable ring assembly | G) Safety interlock system |
| D) Glass tray | |

Turntable Installation

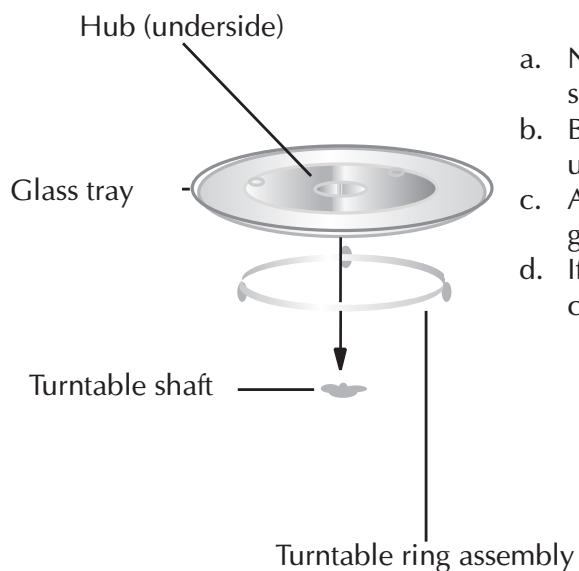


- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface.


Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

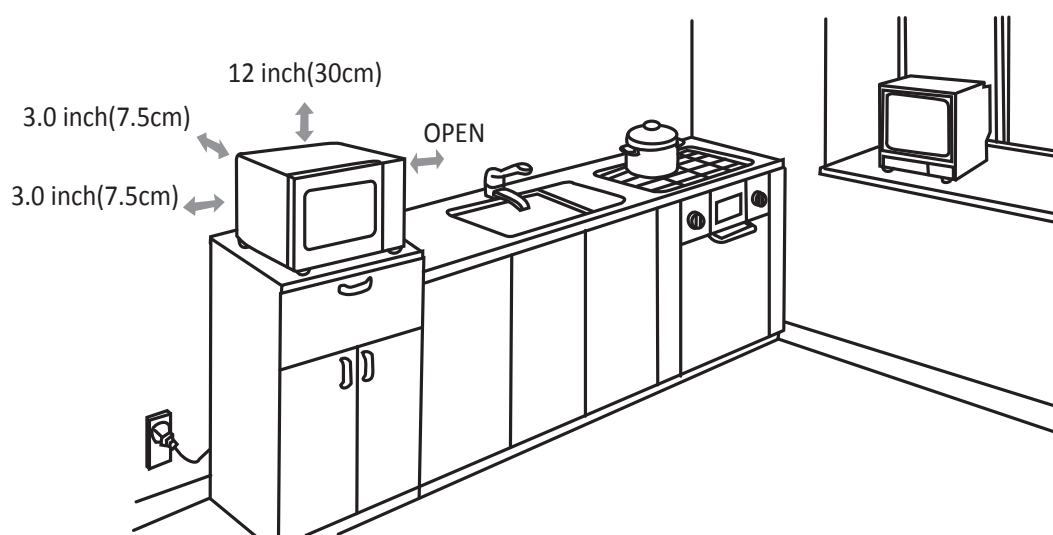

1. Select a level surface that provides enough open space for the intake and/or outlet vents. A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.
 - a. Leave a minimum clearance of 12 inches (30cm) above the oven.
 - b. Do not remove the legs from the bottom of the oven.
 - c. Blocking the intake and/or outlet openings can damage the oven.
 - d. Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

CONTROL PANEL

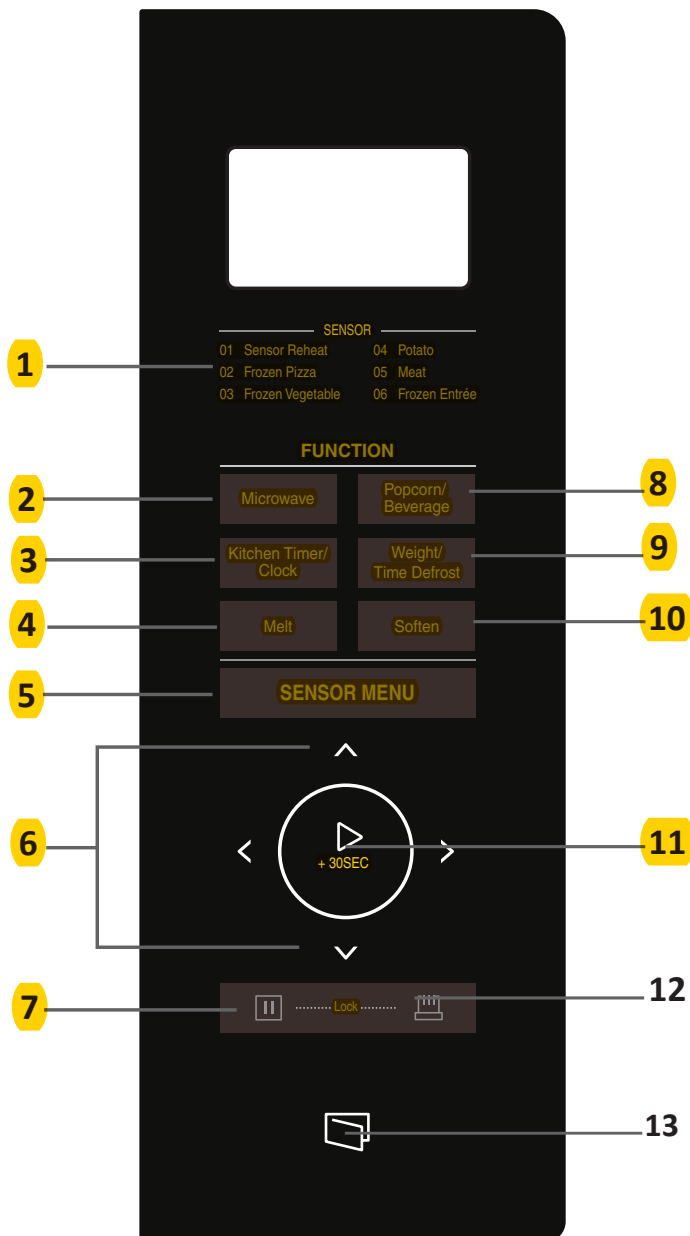

1. SENSOR MENU

2. MICROWAVE COOK

3. KITCHEN TIMER/CLOCK

4. MELT

5. SENSOR MENU BUTTON

- Press repeatedly to select the sensor cooking menu.
- Sensor menu automatically program cooking time and power based on sensor assessment of the steam emitted from food while cooking.

6. ARROW KEYS

- Press to select weight or time.

7. STOP/CANCEL

- Press to stop the oven or clear all previous settings.
- Press and hold for 3 seconds to lock the control panel.

8. POPCORN/BEVERAGE

9. WEIGHT/TIME DEFROST

10. SOFTEN

11. START/+30SEC

- Press to start the oven or to confirm settings.
- Press to cook at 100% power for 30 SEC.

12. MEMORY

13. DOOR OPEN

- Press this button slightly, and the door will open automatically.

OPERATION

1. OPENING THE DOOR

In **standby** or **cooking** mode, press DOOR OPEN icon  to open the door automatically. In an emergency situation, please stick the **suction** cup  on the glass door and pull it slightly to open the door.

2. CLOCK SETTING

When the microwave oven is plugged in, the screen will display "WELCOME", and the oven beeps once. If there is no operation within 1 minute, the oven will enter standby state, and the screen will display "0:00"

- (1) Press "KITCHEN TIMER/CLOCK" twice to set clock. The screen will display "0:00" and the hour figure will flash.
- (2) Press "<" or ">" to adjust the hour figure between 0 and 12.
- (3) Press " " to confirm hour setting and the minute figures will flash.
- (4) Press "<" or ">" to adjust the minute figure between 0 and 59.
- (5) Press " " to complete the clock setting. The screen will display the correct time and "." will flash.

NOTE:

- A. If the clock is not set, the current time will not display when powered.
- B. In the process of clock setting, if the " STOP/Cancel  " button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

3. KITCHEN TIMER

- (1) Press "Kitchen Timer/Clock" once, the screen will display "KT 00:00".
- (2) Press "✓", "∧", "<", ">" to enter the timer time. The time setting should be between 0:10-95:00.
- (3) Press " " to confirm setting.
- (4) When the timer finishes, the oven will beep 5 times, and the screen will display the correct time.

NOTE:

- A. The kitchen timer is different and won't interfere with the 12-hour system on your microwave.
- B. Kitchen Timer cannot be set while running other cooking functions.

4. MICROWAVE COOK

- (1) Press "Microwave" once, the screen will display "M P100".
- (2) Press "Microwave" repeatedly to select power setting from MP100 to MP0. "M P100", "M P90", "M P80", "M P70", "M P60", "M P50", "M P40", "M P30", "M P20", "M P10" and "M P0" will display in order.
- (3) Press " " to set the power level.
- (4) Press "✓", "∧", "<", ">" to adjust the cooking time from 0:10-95:00
- (5) Press " " to start cooking.

10 Power levels are available

Press "Microwave"	Once	Twice	Three times	Four times	Five times	Six times	Seven times	Eight times	Nine times	Ten times
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
Display	MP100	M P90	M P80	M P70	M P60	M P50	M P40	M P30	M P20	M P10

5. EXPRESS COOKING

- (1) In standby mode press " " to cook at 100% power for 30 seconds. Each press will add 30 seconds to cooking time; the maximum cooking time is 95 minutes.
- (2) During microwave cooking, time defrost and multi-stage cooking, each press of " " will increase cooking time by 30 seconds.

NOTE:

This function is not available under weight defrost or auto menu cooking.

6. CANCEL QUICKLY

During setting or running procedure, only pressing "STOP/Cancel  " can stop current  and  back to the standby state.

7. WEIGHT DEFROST FUNCTION

- (1) Press "Weight/Time Defrost" one to three times. The screen will display "WEIGHT MEAT", "WEIGHT POULTRY" or "WEIGHT FISH".
- (2) Press " " to confirm the weight defrost mode.
- (3) Press "<" or ">" to select the weight of the food between 4-100oz.
- (4) Press " " to start defrosting and the cooking time remaining will be displayed.

8. TIME DEFROST FUNCTION

- (1) Press "Weight/Time Defrost" four times, the screen will display "TIME DEFROST".
- (2) Press " " to confirm the function and the screen will display "TD 0:00".
- (3) Press ", ", "<" or ">" to select defrosting time.
- (4) Press " " to start defrosting

NOTE: The default power is set as 30% power and cannot be changed.

9. AUTO MENU

A. Popcorn

- (1) In standby mode, press "Popcorn/Beverage" once to cook popcorn.
- (2) Press " " to confirm selection.
- (3) Press "<" or ">" to choose weight of item.
- (4) Press " " to start cooking.

B. Beverage

- (1) In standby mode, press "Popcorn/Beverage" twice to cook beverage.
- (2) Press " " to confirm selection.
- (3) Press "<" or ">" to choose weight of item.
- (4) Press " " to start cooking.

C. Melt

- (1) In standby mode, press "Melt" repeatedly to select "Butter", "Chocolate", or "Cheese".
- (2) Press " " to confirm selection.
- (3) Press "<" or ">" to choose weight of item.
- (4) Press " " to start cooking.

D. Soften

- (1) In standby mode, press "Softening" repeatedly to select "Butter" or "Ice Cream".
- (2) Press " " to confirm selection.
- (3) Press "<" or ">" to choose weight of item.
- (4) Press " " to start cooking.

AUTO MENU CHART

MENU	FOOD	WEIGHT	DISPLAY	TIME
Popcorn	Popcorn	1.75 oz	1.75 oz	1'00"
		3.0 oz	3.0 oz	1'35"
		3.5 oz	3.5 oz	1'45"
Beverage	Beverage	1 cup (120ml)	1 cup	1'00"
		2 cups (240ml)	2 cups	2'00"
		3 cups (360ml)	3 cups	2'50"
Melt	Butter	1 stick	1	1'30"
		2 sticks	2	2'30"
		3 sticks	3	3'30"
	Chocolate	4.00 oz	4 oz	2'20"
		8.00 oz	8 oz	3'00"
	Cheese	4.00 oz	4 oz	1'30"
		8.00 oz	8 oz	2'30"
Soften	Butter	1 stick	1	1'10"
		2 sticks	2	2'20"
		3 sticks	3	3'20"
	Ice Cream	8.00 oz	8 oz	0'25"
		16.00 oz	16 oz	0'40"

10. SENSOR MENU

- (1) In standby mode, press "SENSOR MENU" repeatedly to select "SENSOR REHEAT", "FROZEN PIZZA", "FROZEN VEGETABLE", "POTATO", "MEAT", "FROZEN ENTREE" in order.
- (2) Press "  " to confirm selection and start cooking.
- (3) The sensor detects the vapor generated while cooking, and calculate automatically the power level and cooking time.
- (4) When the released vapors  detected by the oven, the oven beeps twice and the remaining cooking time will appear in the display.
- (5) The oven beeps 5 times when cooking finished.

NOTE:

- (1) When cooking or reheating food, follow these steps for optimal results:
 - (a) The room temperature cannot be over 95 °F .
 - (b) The weight of food must be more than 110g (4 Oz).
 - (c) The cavity, glass tray and utensils must kept dry before putting in the food.
 - (d) The reheated food can be covered with the lid, but the lid must have vent holes to let out the steam. Do not use sealed container.

- (2) Let food rest for a while after cooking has completed.
- (3) During sensor cooking process, if there is no time showing in the display, please do not open the oven door or press "STOP/Cancel" key. Otherwise, the sensor will make mistakes.
- (4) Shortly before cooking ends, the remaining cooking time will show on the display and begin its counting down. This will be a good time for you to rotate or stir the food for even cooking if it is necessary.

Sensor Menu	Weight	Initial Temperature	Additional Instructions
Sensor Reheat	8-12 oz	41 °F	(1) When using "Sensor Reheat" avoid the following foods: (a) Bread and other dry food, such as biscuit, cake. (b) For raw or uncooked foods. (c) Beverage and frozen food. (2) The sensor reheat has different requirements for different food. Casseroles: Add 3 to 4 tablespoons of water, cover with lid or vented plastic wrap. Stir when time appears in the display window. Canned foods: Empty contents into casserole dish or serving bowl, cover dish with lid or vented plastic wrap. After reheating, let stand for a few minutes. Plate of food: Arrange food on plate; top with butter, gravy, etc. Cover with lid or vented plastic wrap. After reheating, let stand for a few minutes. (3) Reheat food as-is for dinner plate. When sensor time finishes, cooking time counts down. At this time you can stir food then continue reheating.
Frozen Pizza	6-12 oz	-64.4 °F	The menu is set for cooking raw frozen pizza. If the weight is over 12 oz, please set the additional cooking time manually.
Frozen Vegetable	6-16 oz	-64.4 °F	Wash the vegetable thoroughly, add 15ml water per 4 oz of vegetables, then cover with a lid or vented plastic wrap.
Potato	1-4 potatoes 6-8 oz each	Room temp.	Pierce each potato with a fork 6 times around its surface. Place potatoes around the edge of a paper-towel-lined turntable. Do not cover. If additional time is needed, continue to cook manually. Please let it stand for 5 minutes in the oven after cooking to avoid burning.
Meat	8-24 oz	41 °F	Stir the minced meat before cooking. Cover with lid or vented plastic wrap. When the oven beeps sounds twice, cooking time counts down. Press "STOP/CANCEL" to pause and open the oven door to stir.
Frozen Entree	8-32 oz	-64.4 °F	Be careful when removing the film cover after cooking. Face away from you to avoid steam burns. If additional time is needed, continue to cook manually. Cover with film before cooking and leave an opening near the edge of the container to let the steam out. When the buzzer sounds twice cooking time counts down. Press "STOP/CANCEL" to pause and open the oven door to stir.

12. MEMORY FUNCTION

- (1) Press "Memory"  " icon to choose memory 1-3 **procedure**. The screen will display "MEMORY1", "MEMORY2", then "MEMORY3".
- (2) If the **procedure** has been set, press "  " to use it. If not, continue to set the **procedure**. Only one or two microwave stages can be set.
- (3) After finishing the setting, press "Memory"  " to save the **procedure** and turn back to the standby modes. Press "  " to save and operate the setting.

EXAMPLE: To set the following **procedure** as the second memory, that is memory 2, and cook the food with 80% microwave power for 3 minutes and 20 seconds. Follow these steps:

- A. In standby mode, press "Memory"  " icon twice until "MEMORY2" displays.
- B. Press "MICROWAVE" three times, "M P80" displays.
- C. Press "  " to set the power
- D. Press " , " , " , or "  " to adjust the cooking time to **3minutes** and 20 seconds.
- E. Press "Memory"  " icon to save the setting and the oven will beep once.

NOTE:

- (1) Weight defrost or Auto menu cooking cannot be set as memory **procedure**.
- (2) If the power is not cut off, the **procedure** will be saved in memory. If power is lost, the memory setting needs to be reset.

13. MULTI-STAGE COOKING

At most, 2 stages can be set for cooking. In multi-stage cooking, if one stage is defrosting, then defrosting shall be placed at the first stage automatically.

Note: Auto menu cannot work in the multi-stage cooking.

Example: if you want to defrost food for 5 minutes then cook at 80% microwave power for 7 minutes. The steps are as follows:

- (1) Press "WEIGHT/TIME DEFROST" 4 times, The screen will display "TIME DEFROST"
- (2) Press "  " to confirm the function and the screen will display "TD 0:00".
- (3) Press " , " , " , or "  " to set defrosting time to 5 minutes
- (4) Press "MICROWAVE" three times to select 80% microwave power.
- (5) Press "  " to set microwave power
- (6) Press " , " , " , or "  " to set cooking time of 7 minutes
- (7) Press "  " to start cooking.

14. INQUIRING FUNCTION

- (1) In the microwave cooking mode, press "MICROWAVE" to check microwave power level, and the current microwave power will be displayed. After 3 seconds the microwave will return to its previous mode. The same method can be used to check power in the multi-mode cooking mode.
- (2) Press "KITCHEN TIMER/CLOCK" to check the current time. Current time will be displayed for 3 seconds.

15. LOCK FUNCTION FOR CHILDREN

- (1) Lock: In standby mode, press "STOP/CANCEL"  " for 3 seconds, there will be a long "beep" denoting the entering into the children-lock mode; the lock indicator will light and the screen will display current time or "LOCKED".
- (2) Unlock: In locked mode, press "STOP/CANCEL"  " for 3 seconds, there will be a long "beep" denoting that lock is released.

MAINTENANCE

Troubleshooting

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center .

Trouble	Possible Cause	Possible Remedy
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions.
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level.
Improper Defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.
Sensor cooked foods not properly cooked	a. Cover or lid on food not vented. b. Door opened before sensor-detected cooking time appears in display.	a. Cover or lid over food must contain vent hole for escaping steam. b. Do not open door to stir or turn food before sensor-detected cooking time appears in display.

ONE YEAR LIMITED WARRANTY

This warranty applies to products purchased and used in the U.S. and Canada. This is the only expressed warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty is valid for the original retail purchaser or gift recipient from the date of initial retail purchase and is not transferable.

Keep your original sales receipt as proof of purchase is required to make a warranty claim.

IMPORTANT: This warranty does not cover damages resulting from use not in conformity with the printed directions, accident, misuse or abuse, alternation, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.) This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

Englewood Marketing LLC excludes all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim or if service is required, please call our CUSTOMER SERVICE NUMBER.

For faster service, please have the model, type, and series numbers ready for the operator to assist you.

Customer Service Number
Englewood Marketing LLC
In the US 844-918-0509
Email: CustomerService@emllc-USA.com