



SKU#1005 261 753
 OMS THD SKU # 1005 178 615
 Model # TYY0950-2025-XY

ASSEMBLY INSTRUCTIONS

3-Pack Animated LED Clown Pathway Markers

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center.

***Assembly of this product may require more than one person.**

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on the cord.

CAUTION: This product is powered by three AA size batteries (3*1.5 V). Do Not Mix Old And New Batteries. Do Not Mix Alkaline, Standard (Carbon - Zinc), Lithium or Rechargeable (Nickel - Cadmium or other types) Batteries. Remove Batteries when not used for an extended period of time or when spent. Do not use rechargeable Batteries. Dispose of Batteries properly by following the directions on the Batteries. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. Do not pull on the Clown Head when removing from the ground. Pull on the Stake.
- Carefully disassemble the product taking caution not to cut any electrical wires or connections.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

Trouble Shooting

- Ensure that the floor or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

Guarantee

What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday



Thank you!

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 3-Pack Animated LED Clown Pathway Markers. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!


1-877-527-0313

HOMEACCENTSHOLIDAY.COM

Parts List		
A	Clown Head	3
B	Controller	1
C	Try-Me Button	1

Hardware List		
D	Ground Stake	4

 
Diagram of Parts

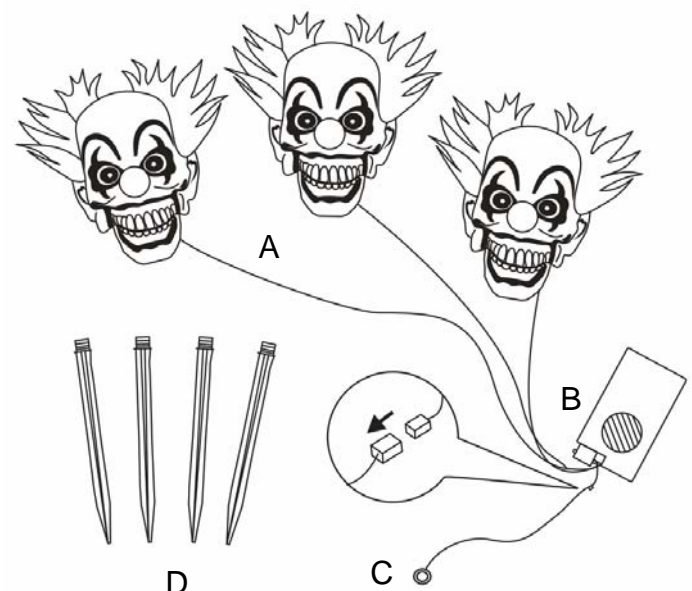

ASSEMBLY


1 Remove the Try-Me Button

 Remove the packing and take out the product carefully. Place all parts flat on the ground. Disconnect the plug on the Try-Me Button (C) from the controller .

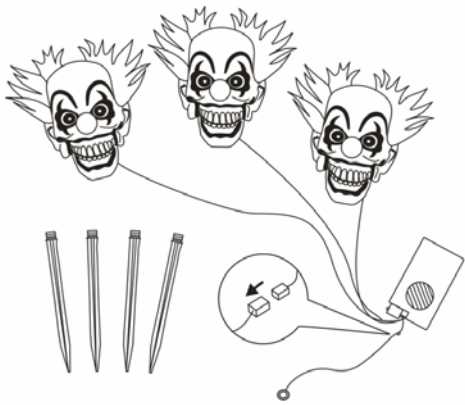


2 Assembling the Clown Head and Controller to the Stake

Insert the non-pointed end of the Stake (D) into the connecting hole at the bottom of each Clown Head (A) and the Controller (B) until firmly tight. Note: Handle the handle Clown Head (A) with care while performing this task.

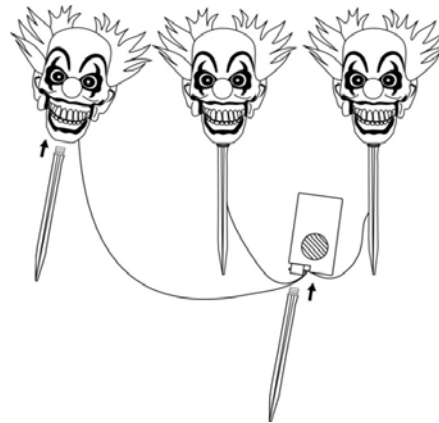


3 Anchoring the Ground Stakes

Insert the Ground Stakes (D) into the ground by grasping the Ground Stake in the middle then firmly pushing into the ground. Note: Do not push down on the top of the Clown Head. This could cause breakage. Hint: If the ground is hard use water to moisten the ground for an easier install.

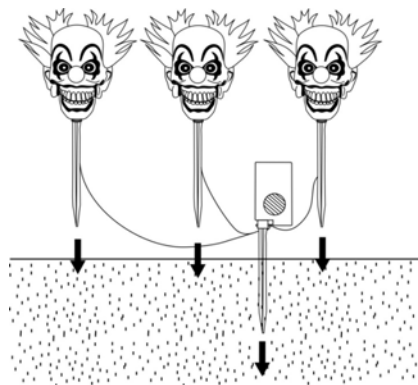


4 Accessing Battery compartment on Controller

Loosen the screws on the cover on the back side of the Controller (B). Remove the back cover of the Controller away from the body of the Controller.

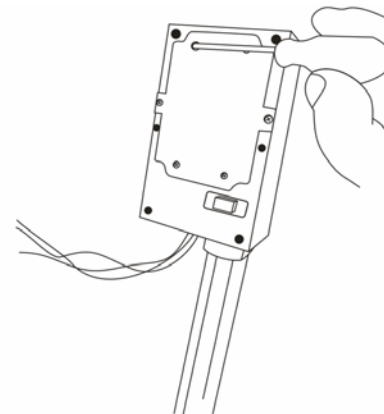


5 Installing and Replacing the Batteries

Fit the batteries, requires 3 AA Batteries (sold separately), one after another, into the Battery Compartment of the (Controller). Make sure the Batteries are placed in the correct direction with the polarity matching what is indicated on the inside of the Battery box.

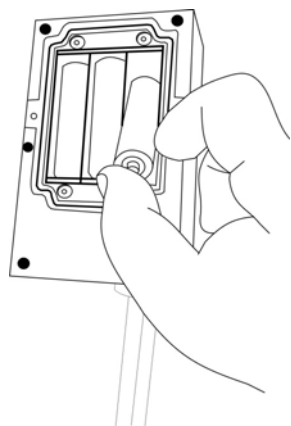

6 Securing the Battery compartment cover on Controller

Place the cover on the back side of the Controller. Place the screws into the screw holes and tighten firmly taking care not to strip the threads.

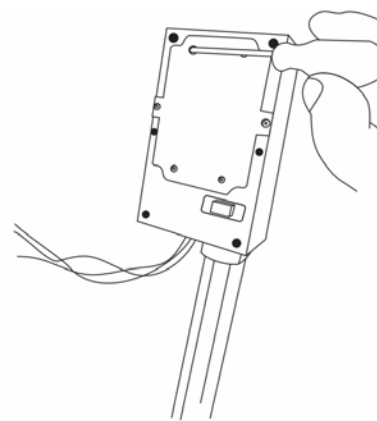

7 Operating the Controller

On the back side of the Speaker is a power switch. Move the switch to ON. This will activate the built in sound sensor. When the sound sensor is activated the speaker will play phrases and the Clowns mouths will move.

