

The
KETTLE
Electric Kettle
MGKTL-1777

by *MegaChef*

FOR WARRANTY INFORMATION PLEASE VISIT
www.MEGACHEF.com



INSTRUCTION MANUAL

PLEASE READE CAREFULLY AND KEEP READILY AVAILABLE
110-120V 50/60Hz 900-1100W

WARNING

Please use and keep the kettle and its supply cord out of the reach of children.

Cleaning and Maintenance:

CLEANING YOUR KETTLE

.Unplug it.

.Let it cool down and clean it with a damp sponge.

·Never immerse the kettle, its base, the cord or the electric plug in water: the electrical connections or the switch must not come into contact with water.

·Do not use scouring pads.

CLEANING THE FILTER

.The removable filter consists of a mesh to retain the particles of scale and prevent them falling into your cup when pouring. This filter neither treats nor removes the hardness of the water. It thus conserves all the qualities of the water. With very hard water, the filter can clog very quickly (10 to 15 uses). It is important to clean it regularly. If it is wet, put it under a running tap, if dry, then brush it gently. Sometimes the scale will not detach itself, it will then need descaling.

·To remove the anti-scale filter, lift the kettle off its base and allow to cool. Never remove the filter when the appliance is full of hot water.

De-scaling

De-scale regularly, preferably at least once a month or more frequently if your water is very hard.

To de-scale your kettle:

Using white vinegar:

.Fill the kettle with 1/2 liter of vinegar.

.Leave to stand for 1 hour without heating.

Using citric acid:

-Boil 1/2 liter of water.

-Add 25g of citric acid and leave to stand for 15 min.

Using a de-scaler specifically for plastic kettles:

Follow the manufacturer's instructions

·Empty your kettle and rinse 5 or 6 times. Repeat if necessary.

To de-scale your filter:

.Soak the filter in white vinegar or diluted citric acid.

·Never use a de-scaling method other than that recommended.



1. Lid
2. Cord wraps under the base for easy storage
3. 360° swivel base – Return the kettle to its power source from any direction
4. Tea Infuser
5. Stay-cool handle
6. Power button

Operating Instructions

FIRST TIME USE

1. Pull out the power cord from the compartment under the base, and place base on a flat surface.
2. Remove the lid then fill water into the kettle.
3. Fill kettle to the maximum level mark (for first time use only) with fresh tap water.
4. Close the lid and place the kettle back on the base unit, and plug into a power outlet.
5. Switch the kettle on by pressing the switch to the "I" position, the blue LED light inside the glass jar will illuminate to indicate the water is heating.
6. The kettle will automatically switch to the "O" position once the water has boiled and the blue LED indicator light has gone off.

NOTE: Wait 30–60 seconds if you need to heat the water immediately after a boiling cycle.

7. Empty the kettle then wash the glass jar with water, repeat the above 2 times.

NOTE: Never allow the water to fill above the maximum level or lower than the minimum level indicated on the glass jar.

MAKING TEA

1. Remove tea infuser from kettle by lifting the lid and sliding off the tea infuser
 2. Add fresh, cold water to the kettle, filling it for the number of cups of tea you wish to make—up to 4 cups, secure the lid with out the infuser attached, turn on the kettle.
 3. The blue LED light will be on while the water is boiling, and turn off when its boiled.
 4. Once water has boiled, remove the lid and carefully add tea leaves or tea bags to the tea infuser. Slide the infuser on the lid, and secure lid with infuser in the kettle
- Warning:** Use extreme caution when adding tea eaves, unit is very hot.
5. **Caution:** Wait until unit has completely cooled before removing tea infuser. Tea infuser will be very hot after use; may cause serious burns if not handled properly.

GENERAL USE

For everyday use follow steps 1-6 listed above to ensure best results.

NOTE: The power source will only work if the kettle is placed directly on the base unit.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed:

1. Close supervision is necessary when any appliance is used by or near children.
Please use and keep the kettle and its supply cord out of the reach of children. Warn other users, especially children, of the possible dangers.(eg. Escaping steam, hot warter, hot lid,etc).
2. Do not touch hot surfaces. Use handles or knobs.
3. **To prevent fire, electric shock and injury, do not immerse cord, plugs, base or kettle in water or other liquids.**
4. Read all instructions. When reading, please refer to the page of illustrations to relate the pictures and test. The appliance should be used strictly in accordance with these instructions.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance which has been damaged in any way or has a defective cord or plug. Return it to the nearest authorized service center for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. To disconnect, turn any control to "**off**", then remove the plug from the wall outlet.
13. Do not place the base of your kettle in a metal tray. If water spills over in to the tray, and a build-up occurs, it could become dangerous to touch.
14. Position the kettle to the rear of work surfaces to prevent over hanging of the power cord. Water can remain hot for a considerable time after boiling and can present a scald hazard.
15. **Before pouring, wait until the kettle has stopped boiling and then pour steadily. If the kettle is tipped too much, the lid may fall off or open.**
16. **WARNING:** a cordless kettle must never be filled on its base.
17. An electrical appliance should not be used if it has been dropped at any time. In such cases, please contact with authorized service center.

Safety Instruction

- This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, will result in manufacture not to accept any responsibility and the guarantee will not apply.
- Only use your kettle for boiling drinking water.
- Only plug the appliance into a earthed mains socket, or into an electrical extension lead into an integrated earth connection. Check that the voltage indicated on the rating plate of the appliance corresponds to that of the mains voltage. You are advised not to use a multiple adapter plug.
- Do not use the kettle when you have wet hands or bare feet.
- Take care not to place the kettle and its base on a hot surface, such as a hot plate, or to use it near an open flame.
- Immediately remove the mains plug if you notice that the kettle is not operating correctly.
- Do not pull on the power cord to remove the mains plug.
- Do not let the power cord hang over the edge of a table or work surface in order to prevent the appliance from failing.
- Always remain vigilant when the appliance is on, and in particular be careful of the steam coming out of the spout, which is very hot.
- Also be careful as the body of kettles becomes very hot during operation. Only touch the handle of the kettle.
- Never touch the filter or the lid when the water is boiling.
- Never move the kettle when it is in operation.
- Our guarantee does not cover kettles that do not work properly or do not work at all because they have not been descaled.
- Protect the appliance from damp and frost.
- If your appliance has been damaged, if it is not working properly or if the power cord or the plug is damaged, we recommend that you have the appliance inspected. Any intervention to the appliance other than cleaning and descaling according to the instructions for us must be performed by an authorised service centre.
- Unplug the appliance as soon as you have finished using it for a long period of time and when you clean it.
- All appliances are subject to strict quality control procedures. These include actual usage tests on randomly selected appliances, which would explain any traces of use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children should be supervised to ensure that they do not play with the appliance.**
- Never place the kettle or its base on a hot surface such as a hotplate or use it close to an open flame.
- Place on a flat, stable, heat-resistant surface.
- If anything appears to be wrong with its operation, remove the main plug from the socket immediately.
- Any supply connection error will nullify the guarantee.
- Unplug the appliance and empty it if you stop using it for an extended period and when you clean it.

Short Cord Instructions

HOUSEHOLD USE ONLY

A. A short power cord or a detachable power cord is provided to reduce the risks of resulting from becoming entangled in or tripping over a longer cord accidentally.

B. Longer detachable power cords or extension cords are available any may be used if care is exercised in their use.

C. If a long detachable power cord or an extension cord is used:

1) the marked electrical rating of the detachable power cord or extension cord should be at least as great as the electrical rating of the appliance.

2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the counter top or table where it can be pulled on by children or tripped over accidentally.

Thank you for purchasing our kettles. Read the instructions that apply to most of our models carefully and keep them to hand.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

This appliance must be grounded while in use.

CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

IMPORTANT

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.