

18. **NEVER** pour liquid or food directly in Rice Cooker Base. **ALWAYS** use Removable Cooking Pot to put in liquid, rice or other food.
19. **DO NOT** use Rice Cooker **WITHOUT** Removable Cooking Pot well in place in Base. **ALWAYS** cook rice/food in Removable Cooking Pot to avoid risk of electrical shock! **DO NOT** use Removable Cooking Pot with any other heating sources. **DO NOT** replace Removable Cooking Pot with any other non-authorized container.
20. **NEVER** plug in the power cord without the Removable Cooking Pot well inserted inside the Rice Cooker Base.

21. Place the Removable Cooking Pot inside the Rice Cooker Base before operating. The Cooker will not turn on unless the Removable Cooking Pot is in place.
22. **ALWAYS UNPLUG AFTER USE:** Rice Cooker power will remain **ON** unless unplugged.
23. **DO NOT** cover Lid or Rice Cooker with any cloth, fabric or other materials not intended for use with this item.

24. **NEVER** leave Rice Paddle or other utensil in Removable Cooking Pot when using "KEEP WARM" feature.
25. **DO NOT** use metal or sharp objects inside pot. **ALWAYS** use wood, plastic or nylon utensils to avoid scratching.
26. Always use Control Button(s) to operate unit.
27. Do not attempt to defeat Thermo Sensor mechanism to turn appliance **ON**.

28. **CAUTION: Keep hands and utensils out of Removable Cooking Pot while appliance is heating or hot. DO NOT** attempt to mix food/rice when Rice Cooker is in operation or plugged in. A spatula may be used but **ONLY** when Rice Cooker is in OFF position and unplugged.
29. Caution: Removable Cooking Pot and Steam Tray becomes very **HOT!** Use **EXTREME CAUTION** when handling or removing **HOT Removable Cooking Pot and Steam Tray. DO NOT** open Lid when in use. **USE CAUTION** when opening Lid after cooking, away from face and hands. **CAUTION: STEAM** will escape from Lid and could cause burns, scalding & injuries.

30. **CAUTION: Steam Vent** located in Lid becomes **VERY HOT** during cooking process. **DO NOT** touch Steam Vent with hands or approach face to Lid. **DANGER: STEAM** escaping from Steam Vent could cause burns, scalding & injuries.
31. Make sure Rice Cooker is in **OFF** position and unplugged before adding/removing Removable Cooking Pot or when cleaning. Allow the appliance to cool completely before inserting or removing Removable Cooking Pot in/from Base.

32. Unplug power cord from outlet when not in use. Clean & cover the unit and store in a cool dry place if not being used for an extended period of time.
33. Use extreme caution when moving or handling appliances containing hot oil or other liquids.
34. This appliance is **NOT** recommended for outdoor use.
35. **DO NOT** over fill Rice Cooker. **ALWAYS** follow Measurement Chart.
36. If Rice Cooker malfunctions during use, shut down unit **IMMEDIATELY** and discontinue use. **DO NOT** attempt to open any part of the base. This product has no user-serviceable parts. Always contact authorized Service Center if unit malfunctions or for service. **DO NOT** use or replace with any unauthorized parts not intended for this unit. All parts for this appliance must be used according to Instruction Manual. **ONLY** use manufacturer approved parts from authorized Service Center. Any other parts or accessories not intended for use with this appliance is strictly prohibited and will void warranty.

KEEP OUT OF REACH OF CHILDREN. DO NOT LEAVE APPLIANCE UNATTENDED WHEN IN USE OR WHEN APPLIANCE CONTAINS HOT FOOD OR LIQUID. ALWAYS SUPERVISE CHILDREN WHEN THEY ARE NEAR APPLIANCE. DO NOT ALLOW CHILDREN TO OPERATE OR BE NEAR THE APPLIANCE WHEN IN USE.

CAUTION: BURNS, INJURY AND/OR FIRE MAY RESULT FROM NON-COMPLIANCE WITH ALL OPERATING PROCEDURES DESCRIBED IN INSTRUCTION MANUAL.


**FOR HOUSEHOLD USE ONLY • NOT FOR COMMERCIAL USE
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

PARTS

CRC-2016ST

120V~ 60Hz / 500 W

16-Cup Rice Cooker w/Steam Tray

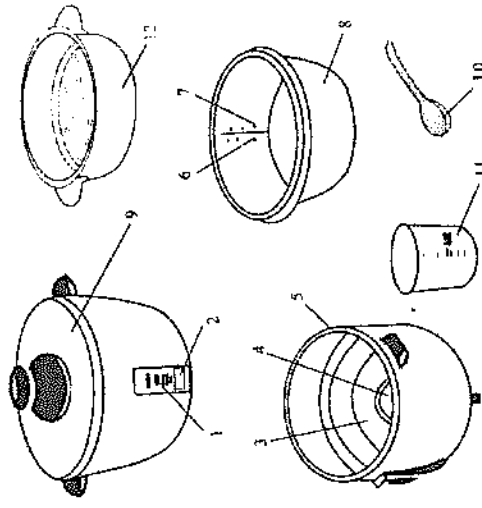

1. Indicator Light
2. COOK/WARM Switch
3. Heating Plate
4. Thermo-Sensor
5. Rice Cooker/Base
6. Water Level
7. Liter / Cup Measurement
8. Removable Cooking Pot
9. Lid
10. Rice Paddle
11. Measuring cup
12. Steaming Tray

OPERATING INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING.

1. Only use this product with the correct AC outlet (120V).
2. Place the Removable Cooking Pot inside the Rice Cooker Base before operating. The Rice Cooker will not turn on unless the inner pot (Removable Cooking Pot) is in place.
3. **DO NOT** use Rice Cooker **WITHOUT** Removable Cooking Pot well in place in Base. **ALWAYS** cook rice/food in Removable Cooking Pot to avoid risk of electrical shock! **DO NOT** use Removable Cooking Pot with any other heating sources. **DO NOT** replace Removable Cooking Pot with any other non-authorized container. **CAUTION: If bottom of Removable Cooking Pot is wet when placed in Rice Cooker Base on Thermo Sensor & Heating Plate it will damage appliance causing it to malfunction. NEVER place WET Removable Cooking Pot in Rice Cooker Base or on Thermo Sensor or Heating Plate.**
4. Fill Removable Cooking Pot with rice and water as per Chart on Page 6.
5. When ready to cook, place lid on rice cooker, plug the cord into wall outlet, then press Switch to **COOK** position. Do not push Cooking Switch down when Removable Cooking Pot is empty or when not in place inside the Rice Cooker.
6. When rice is done, Rice Cooker will automatically switch to **WARM** function. **ALWAYS UNPLUG AFTER USE.** Rice Cooker power will remain **ON** (WARM Setting) unless unplugged. Allow cooling before cleaning.
7. Always place Lid on Removable Cooking Pot while cooking. Keep Lid in place after serving to prevent rice from drying out or discoloring. **DO NOT** open Lid when in use. **USE CAUTION** when opening Lid after cooking, away from face and hands. **CAUTION: STEAM** will escape from Lid and could cause burns, scalding & injuries.
8. **CAUTION: Steam Vent** located in Lid becomes **VERY HOT** during cooking process. **DO NOT** touch Steam Vent with hands or approach face to Lid. **DANGER: STEAM** escaping from Steam Vent could cause burns, scalding & injuries.
9. **DO NOT** use metal or sharp objects inside pot. **ALWAYS** use wood, plastic or nylon utensils to avoid scratching.
10. Keep the bottom of Removable Cooking Pot and surface of the Rice Cooker Heating Plate / Thermo Sensor free from any foreign matter/food to prevent operating malfunctions. **DO NOT** immerse Rice Cooker Base, Electric Heating Plate / Thermo Sensor, electrical cord or plug in water or other liquid.