 


item # CY1403


Assembly Instructions

6 Pieces Outdoor Wicker Dining Set

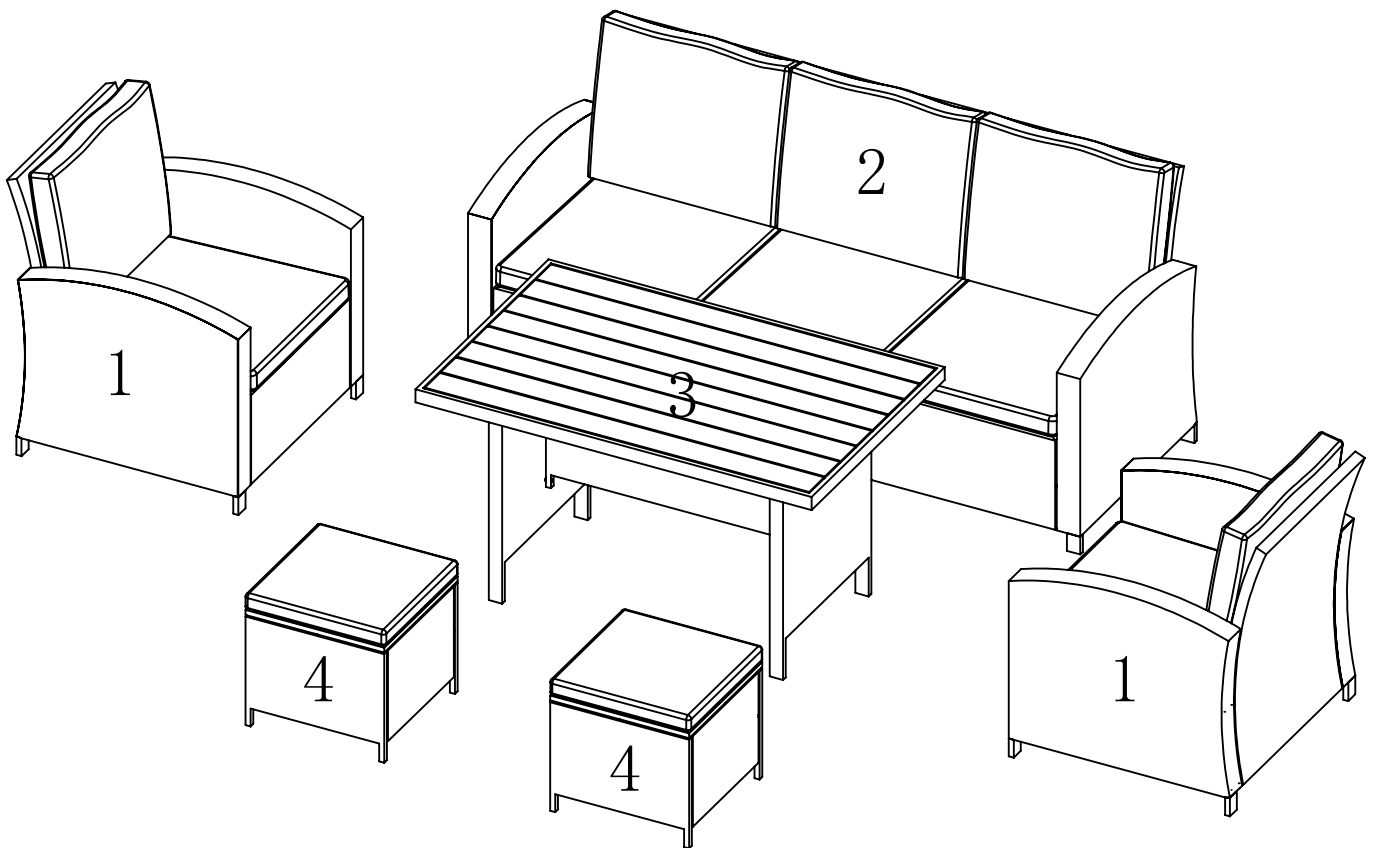


1	Single Sofa	3	Dining Table
2	Three Seater Sofa	4	Ottoman

 
HARDWARE INCLUDED

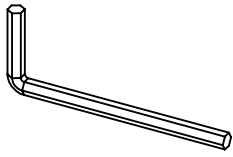


#1

 


#2

 


#3

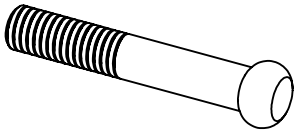 


AA

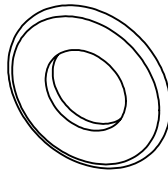 


BB

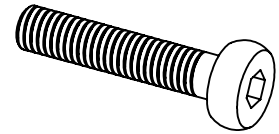 

CC

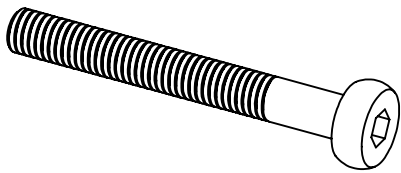 

 
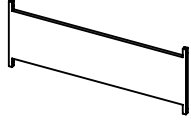 
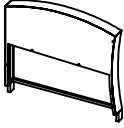 
 
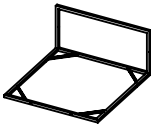 
 
 
 
 
 
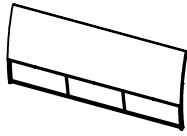 
 
 

 
DD

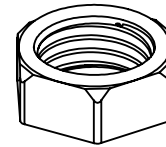

EE

Part	Description	Quantity	Part	Description	Quantity
#1	Allen Wrench	2	BB	Washer	79
#2	Ratchet Wrench	1	CC	M6*30 Bolt	31
#3	Hex Wrench	1	DD	M6*50 Bolt	24
AA	Pin	6	EE	Nut	24

PACKAGE CONTENTS

Part	Description	Image	Quantity	Part	Description	Image	Quantity
A	Left Armrest		3	I	Table Connecting Panel		1
B	Right Armrest		3	J	Ottoman Top		2
C	Single Chair Seat		2	K	Ottoman Side Panel with Legs		4
D	Single Chair Back		2	L	Ottoman Front/Back Panel		4
E	3-Seat Sofa Seat		1	M	Seat Cushion		5
F	3-Seat Sofa Back		1	N	Back Cushion		5
G	Table Top		1	O	Ottoman Cushion		2
H	Table Side Panel with Legs		2				

