

ITEM # FCAGE3520

Assembly Instructions

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT USE THIS PRODUCT!

CALL CUSTOMER SERVICE FOR SERVICE, PARTS & TECHNICAL SUPPORT.

If you experience a problem, have questions or need parts, call Customer Service at 1-636-532-9888, Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE.

WARNING

1. For outdoor use only.
2. DO NOT use in an enclosed area, indoors, or in windy conditions.
3. Follow applicable local, state, and national codes on outdoor burning.
4. DO NOT allow children to operate the unit.
5. DO NOT leave a lit outdoor fire pit unattended.
6. DO NOT use gasoline, kerosene, diesel fuel, lighter fluid or alcohol to light or re-light fires.
7. Use dry hardwood. It will burn hotter, more completely and create less smoke.
8. Be certain fire guard lid is securely in place during burning.
9. DO NOT touch any part of the fire pit during burning.
10. DO NOT remove ashes or coals until they are completely extinguished.
11. DO NOT place this fire pit on a wooden surface or combustible surface that is not resistant to heat. Otherwise, use concrete pavers, stone, or brick as the base.