



THD SKU# 1007 333 525

Model # 22RT0062221

ASSEMBLY INSTRUCTIONS

7ft Halloween Classics LED Stacked Ghosts

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center or return to place of purchase with purchase receipt.

Assembly of this product may require more than one person.

1-855-HDHoliday (1-855-434-6543)

*Assembly of this product may require more than one person.

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on the cord.

CAUTION: The lighting string on this product is rated at 9.6 Watts (0.08 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and flat.
- Carefully disassemble the unit taking caution not to cut any electrical wires.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

Troubleshooting

- Ensure that the floor or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

Guarantee

What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday 1-855-HDHoliday (1-855-434-6543)



Thank you!


We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 7ft Halloween Classics LED Stacked Ghosts. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

1-855-HDHoliday (1-855-434-6543)
HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Front Portion of Upper Ghost Body	1
B	Back Portion of Upper Ghost Body	1
C	Arm of Upper Ghost	2
D	Front Portion of Middle Ghost Body	1
E	Back Portion of Middle Ghost Body	1
F	Arm of Middle Ghost	2
G	Front Portion of Lower Ghost Body	1
H	Back Portion of Lower Ghost Body	1
I	Arm of Lower Ghost	2
J	Support Pole	2
K	Base Stand	1

Hardware List		
Locater	Name	Qty.
L	Ground Stake	8
M	Anchoring String	4
N	Plastic Tie	25
O	Spare Fuse	4
P	Spare Bulb (White)	3
Q	Spare Bulb (Purple)	1


Diagram of Parts

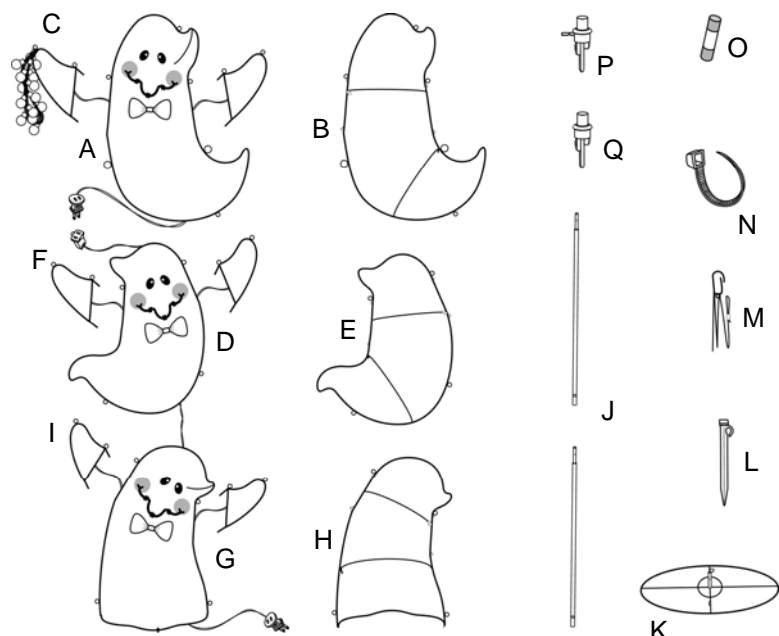

ASSEMBLY


1 Assembling the Support Pole and Lower Ghost Body

Insert the Lower Support Pole (J) through the Back Portion of Lower Ghost's Body (H) and secure to the connecting rod on the base stand (K) with the built in locking pin. Align the Front Portion of Lower Ghost Body (G) and the Back Portion of Lower Ghost Body (H) with each other then insert the connecting rods on the Front Portion into the matching connecting holes on the Back Portion and fasten at the connecting loops with Plastic Ties (N). Stack the Upper Support Pole (J) onto the Lower Support Pole and secure the Support Poles with the built in locking pin.

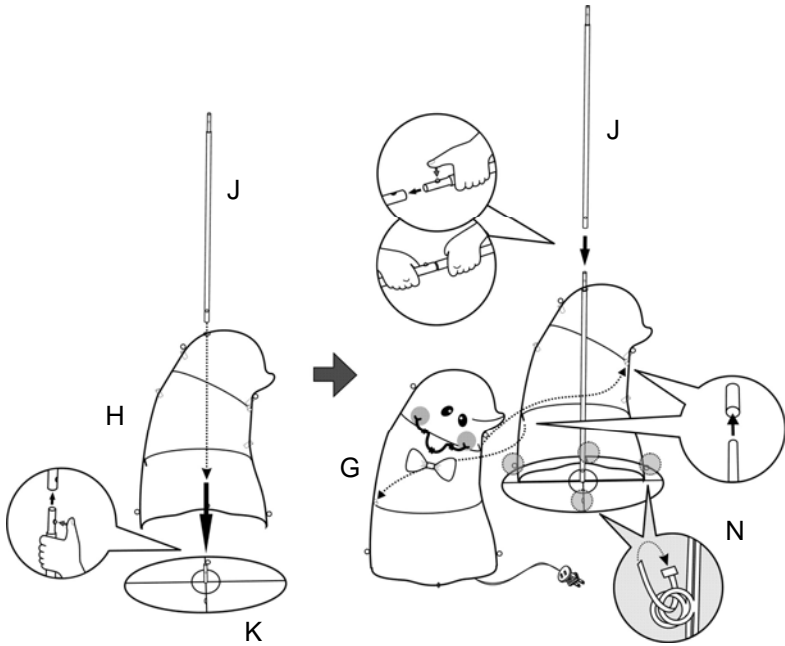


2 Assembling the Arms to Lower Ghost Body and the Back Portion of the Middle Ghost Body

Insert the connecting rods on the Arms (I) into the connecting holes on the sides of the Lower Ghost's Body then secure at the connecting loops with the Plastic Ties (N). Attach the Back Portion of the Middle Ghost Body (E) through the Upper Support Pole.

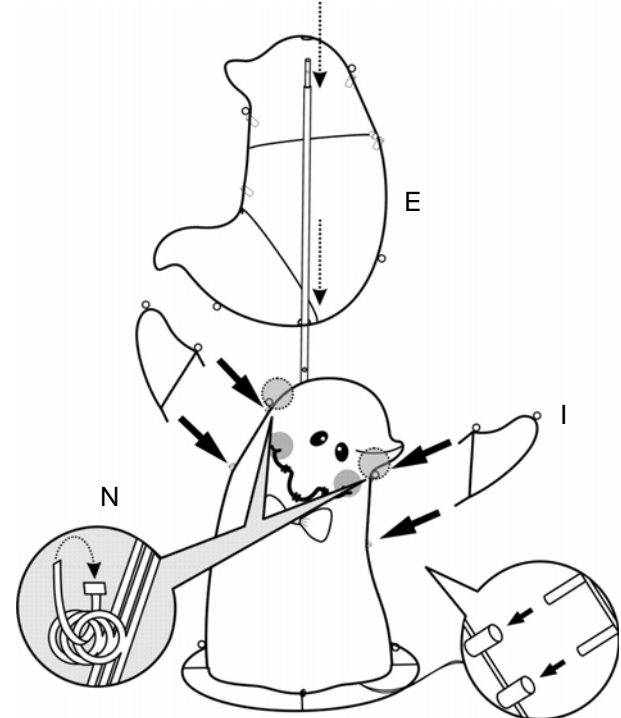


3 Assembling the Middle Ghost Body

Align the Front Portion of Middle Ghost Body (D) and the Back Portion of Middle Ghost Body (E) with each other then insert the connecting rods on the Front Portion into the matching connecting holes on the Back Portion and fasten at the connecting loops with Plastic Ties (N).

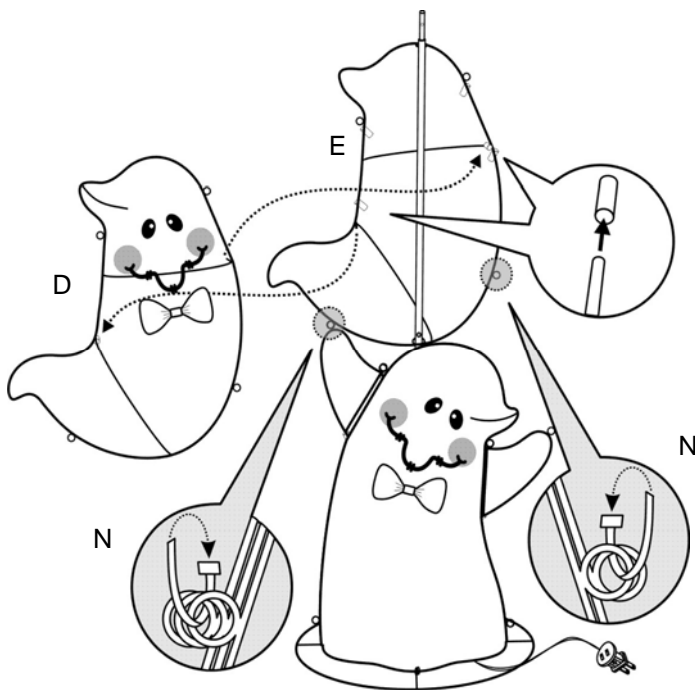

4 Assembling the Arms to Middle Ghost Body and the Back Portion of the Upper Ghost


Insert the connecting rods on the Arms (F) into the connecting holes on the sides of the Middle Ghost Body then secure at the connecting loops with the Plastic Ties (N). Insert the short connecting pole inside the Back Portion of the Upper Ghost (B) to the top of the stacked Support Pole coming out the Head of Middle Ghost and secure with the built in locking pin.

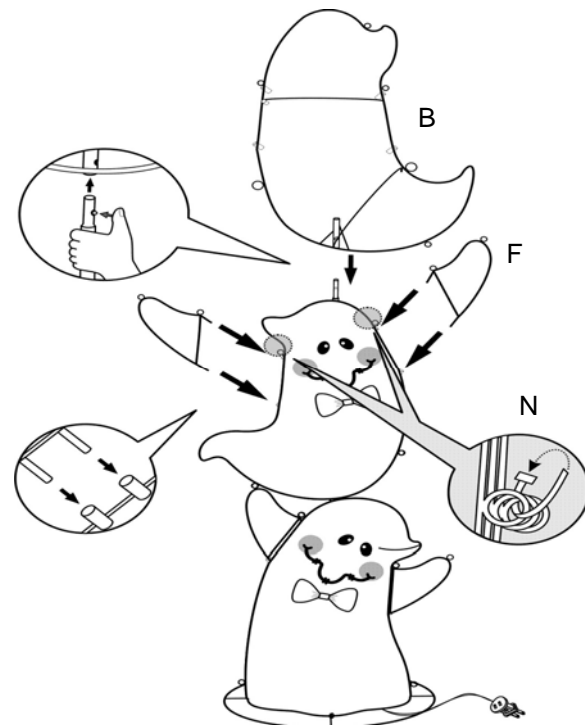

ASSEMBLY


5 Assembling the Upper Ghost Body

Align the Front Portion (A) and the Back Portion of Upper Ghost Body (B) with each other then insert the connecting rods on the Front Portion into the matching connecting holes on the Back Portion and fasten at the connecting loops with Plastic Ties (N).

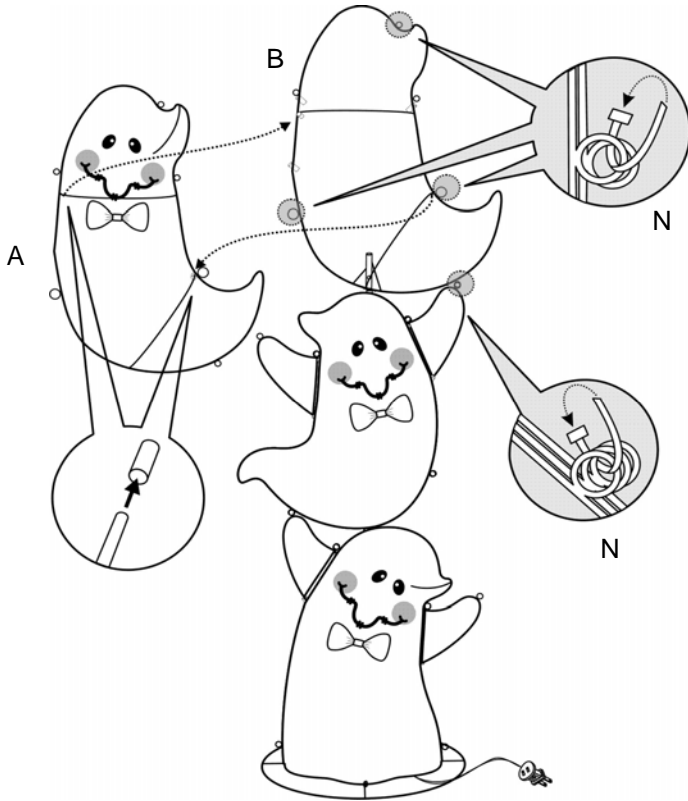


6 Assembling the Arms to Upper Ghost Body

Insert the connecting rods on the Arms (C) into the connecting holes on the sides of the Upper Ghost Body then secure at the connecting loops with the Plastic Ties (N). (Note: The Right Arm has the Light String attached to it).

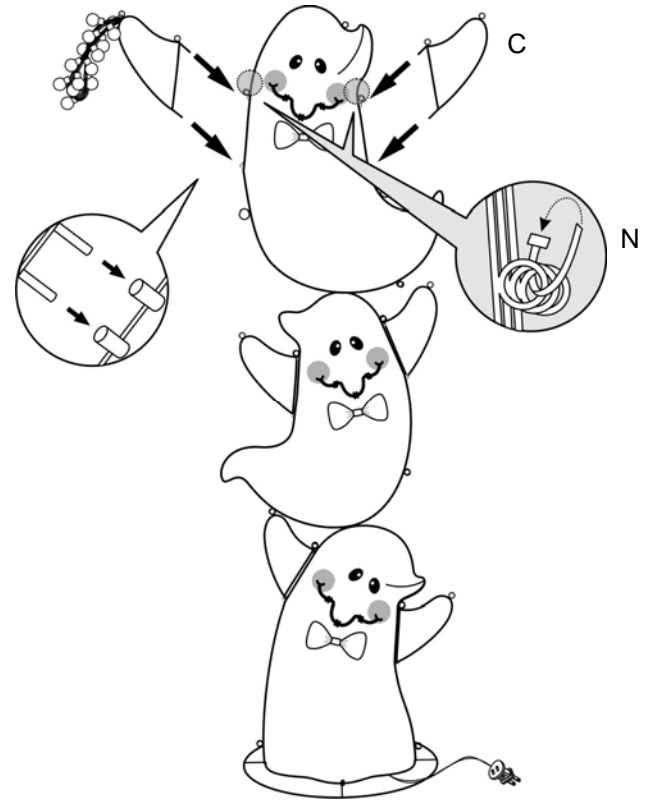

7 Assembling the Light String

Wrap the G40 Light String around the Body of all the Ghost then secure the string at the connecting loops with the Plastic Ties (N) as shown; Connect the electrical plug and end-connector from Upper Ghost to Middle Ghost.

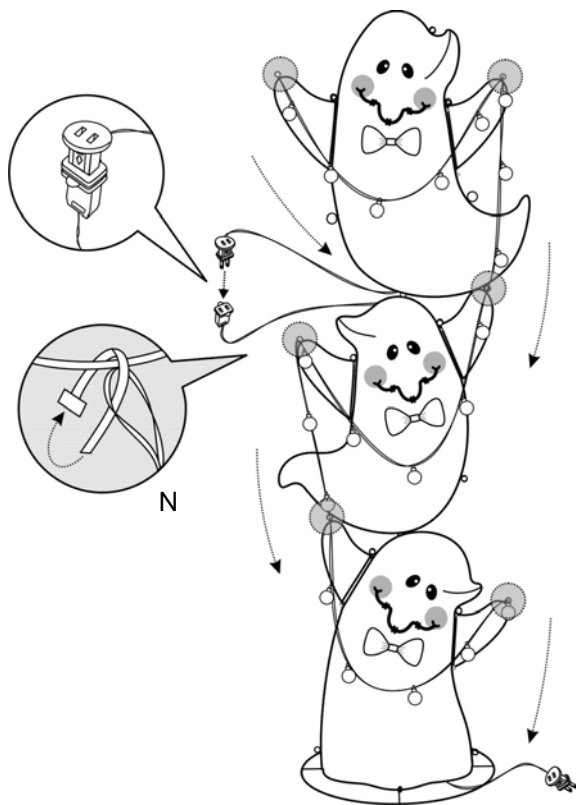

8 Assembling the Anchoring Strings and Ground Stakes

Hook the plastic clipped end of each of Anchoring Strings (M) onto the matching loop on the Body of the Upper Ghost per the diagram below. Attach the hooked end of the Ground Stakes (L) thru the free open looped end of each Anchoring String then tightly secure the pointed end of each Ground Stake into the ground evenly spaced from the Stacked Ghost. Place the remaining 4 Ground Stakes over the 4 corners of the metal frame on the Base Stand then firmly into the ground.

