

General Use and Care Instructions

- All Boraam products are intended for use in a residential, non-commercial setting
- Children should not use these products without adult supervision
- Unless specifically noted, all products are for indoor use only, and are not weatherproof
- Care should be taken that all products are used as intended, while observing all weight limits
- Regular inspection and re-tightening of fasteners should be conducted
- Promptly replace any damaged or worn parts and remove any item from use until repaired

Specific material cleaning instructions

Wood:

- Wood surfaces should be wiped clean with a damp cloth, and thoroughly dried after cleaning
- Textured surfaces can be cleaned using a brush or vacuum
- A household wood specific cleaner can be used for more thorough cleaning
- Water and damp items should not be left on wood surfaces for an extended period due to risk of staining
- Hot items should not be directly placed on wood surfaces without use of a coaster

Metal:

- Metal should be cleaned with a damp, non-abrasive cloth
- Stainless surfaces should be cleaned in the same direction of the existing finish to avoid creating a contrasting pattern on the surface
- Stainless surfaces are cosmetic and are not intended for use in food preparation
- Hot items should not be directly placed on metal surfaces without use of a coaster
- Spills should be wiped up immediately. Leaving liquids on metal surfaces for extended periods of time may result in spotting or staining
- A non-abrasive furniture polish can be used for more thorough cleaning

PU/Vinyl:

- Vinyl surfaces should be cleaned with a damp cloth
- Hot items should not be placed on vinyl

Cloth:

- Spills should be promptly cleaned up using a clean cloth/towel
- A mild fabric cleaner may be used to remove deeper stains. Prior to use, the cleaner should be tested in an inconspicuous location to test for staining and material colorfastness
- Extended exposure to sunlight may promote fading of material