

NOTE: This check valve is to be installed in a vertical position only. This check valve is not intended for ground burial or outdoor use.

- 1. Unplug your pump.
- 2. Close the shut off valve above your check valve if you have one.
- 3. Disconnect the discharge pipe below your existing check valve.
- 4. Drain the discharge pipe above the check valve into and remove the old check valve.
- 5. Loosen all four clamps on your new check valve.
- 6. Ensure the space between the two pipe ends is 5-1/2".
- 7. Install your new check, with the flow arrow pointing upward, away from the pump, by inserting the two pipe ends into the flexible adapters.
- 8. Position the check valve assembly as shown, and tighten clamps. **Do not exceed 15 in-lbs. Do not overtighten**.
- Plug in your pump. Cycle your system a few times and check for leaks. Retighten any clamps if necessary. Do not exceed 15 in-lbs. Do not overtighten.

## **Safety Information**

WARNING: Always disconnect power to your pump and release system pressure before servicing.

## Warranty

This product is warranted to the original consumer purchaser to be free from defects in material and workmanship for a period of one year from the date of purchase. For additional details and questions, please contact Everbilt Customer Service at 1-877-297-6069.



