



USER'S MANUAL 20 LITRE EVAPORATIVE COOLER EP24513US-WH

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com







www.costway.com







Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

| Λ | Please | read | all | instructions | carefully |
|-----------|---------|------|-----|-----------------|-------------|
| /!\ | I ICASC | ıcau | an | 111311 46110113 | care rully. |

riangle Retain instructions for future reference.

⚠ Seperate and count all parts and hardware.

riangle Read through each step carefully and follow the proper order.

We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

Always place the product on a flat, steady and stable surface.

⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE IMPORTANT SAFETY INSTRUCTIONS

WARNING: When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

- 1. Use this cooler only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons. This will also void your warranty.
- 2. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
- 3. This product is intended for indoor, household use ONLY. Do not use outdoors or for commercial or industrial purposes.
- 4. To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
- Do not use this product in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
- 6. To reduce the risk of fire or electric shock, do not use this product with any solid-state speed control device.
- 7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- 8. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
- 9. Turn the unit OFF and unplug it from the outlet when not in use, when moving the unit from one location to another and before disassembling or cleaning. Fully assemble the unit before switching on again.
- 10. To disconnect the unit, first turn it OFF, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.

2




COSTWAYwww.costway.com

9. Water Tank Lock

- 11. Do not operate the cooler in the presence of explosive and/or flammable fumes.
- 12. Do not place the product or any parts near an open flame, cooking or other heating appliance.
- 13. Do not operate product with a damaged cord or plug, or if the product malfunctions, or is dropped or damaged in any manner.
- 14. Avoid contact with moving parts. Do not insert any body parts (e.g. finger) or objects through the grille when the unit is operating.
- 15. The use of attachments not recommended by the manufacturer may be hazardous.
- 16. Place the unit on a dry level surface to avoid overturning.
- 17. Do not operate if the product housing is damaged.
- 18. Do not cover the grille, or operate in close proximity to curtains, etc. Ensure adequate ventilation around the unit.
- 19. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified technician to replace loose or worn outlet.
- 20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- 21. If the product is not working properly, contact a qualified technician for examination and repair. Never attempt to dismantle the unit yourself.
- 22. Never install or store the unit where it could be subject to:
 - a. Heat sources such as radiators, heat registers, stoves or other products that produce heat
 - b. Direct sunlight
 - c. Mechanical vibration or shock
 - d. Excessive dust
 - e. Lack of ventilation, such as a cabinet or bookcase
 - f. Uneven surfaces
- 23. Do not leave the product running unattended.
- 24. The castor wheels must be attached before use.
- 25. Do not remove the water tank while the unit is plugged in.

OVERVIEW

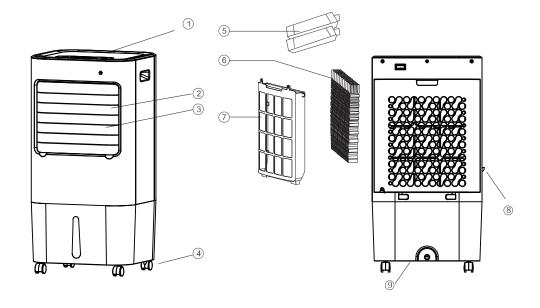

- 1. Control Panel
- 2. Oscillating Louvres
- 3. Horizontal Louvres
- 4. 4×Castor Wheels
- 5. 2×Ice Blocks
- 6. Inner Filter
- 7. Air Inlet Cover
- 8. Water inlet

Note: The Ice Blocks are supplied empty; add water and freeze for a few hours before use.




COSTWAY www.costway.com

ASSEMBLY

Note: The 4 x Castor Wheels must be installed before using this Cooler.

- 1. Spread a soft cloth or mat on a level floor. Carefully place the unit upside down on the soft cloth or mat.
- Insert each Castor Wheel into the hole on the bottom of the machine and thread it in clockwise. Tighten with the provided wrench to secure it in position. Repeat for all four Castor Wheels.

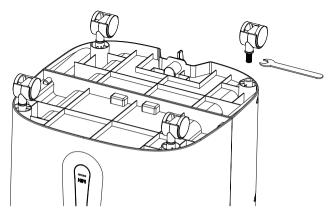

FILLING THE WATER TANK

Before use, follow the procedure explained below to fill the water tank with clean, cold water up to the 'MAX' level indicated.



WARNING: Unplug the unit from the mains supply before removing the water tank

Important:

- Do not use water with any chemical additives added. The water must be cold or lukewarm, do not use hot water above 40°C.
- Do not fill water above the 'MAX' line on the front of the Water Tank.

USING THE ICE BLOCKS (OPTIONAL)

There are two ice blocks included that can be used for extra cooling effect, if desired.

Important:

- Use only clean water for filling the ice blocks. Do not fill water above the maximum marking.
- The ice blocks are not food safe, do not use for storing food or beverages.
- Keep away from children.
- Empty the water and dry out the ice blocks before storage.
- 1. Open the cap, add clean water up to the maximum level marking, close and place in your freezer for a few hours.
- Once frozen, the ice blocks can be added to the water tank.
 Note: Make sure that the water level in the tank does not go above the 'MAX' level indicated.


OPERATION

Warning:

- Make sure that the castor wheels are attached before switching on.
- Once water is filled, take extra care to ensure that you don't lift the unit.
- Push the unit gently if you wish to move it to a new position.
- 1. Keep the unit on a flat, stable ground without any obstacles near it.
- Connect the power plug to a suitable electrical outlet with the same specifications
 as mentioned in the unit's rating label (see Technical specifications for details).
 When the supply is turned on at the outlet, the unit receives power and is in
 standby mode. The Power indicator light turns on.
- 3. You may now use the control panel button or the remote control to operate the cooler.

COSTWAYwww.costway.com

CONTROL PANEL

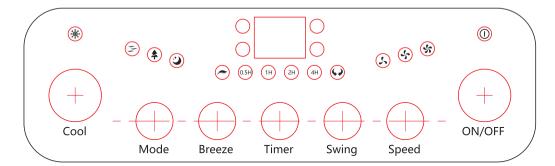

ON/OFF

- Press the ON/OFF button to turn on the unit. The unit starts working in medium speed and switches to low speed after 3 seconds.
- When the unit is working, press the ON/OFF button again to switch it back to standby mode.

SPEED:

Press the SPEED button to adjust the speed. There are three positions – Low,
 Medium or High. The corresponding indicator turns on.

SWING:

 Press this button to start or stop louvre oscillation from left to right. The corresponding indicator turns on.

TIMER:

- Press this button to set the turn-off timer for the unit.
- The turn-off timer can be set in half-hour increments from 0.5 to 7.5 hours. There are 4 indicators –0.5H, 1H, 2H and 4H. For example, if the timer is set for 3 hours, the 1H and 2H indicators turn on.

BRFF7F:

- Press this button for a very low speed breeze.
- Press again to turn off the very low speed breeze.

MODE:

There are three selectable modes, the corresponding indicator turns on.

- Normal mode: The fan operates in the constant speed set using the SPEED button.
- Natural mode: The unit simulates a natural breeze.
- Sleep mode: The unit simulates a gentle breeze suitable for night-time use.

COOL:

- Press this button for a cool breeze when water is added to the water tank. The corresponding indicator turns on.
- Press again to turn off the cool breeze.

REMOTE CONTROL




WARNING! Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns. If swallowed, go straight to a hospital emergency room. Dispose of used batteries immediately.



- The remote control uses 1 x CR2025 button cell battery (included). Please remove the plastic tab before first use. Please see the following section on opening the battery compartment to replace the battery.
- The remote control button have the same functions as that of the control panel.

Opening the Battery Compartment

Note: Images in this section are for illustration only.

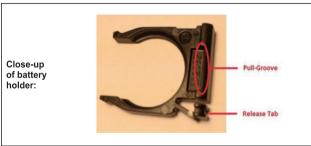



- Lay the remote control face-down on a table and hold it down with your left hand.
- Insert the thumbnail of your right hand into the Release Tab, and your index fingernail into the Pull-Groove.





With your thumbnail, squeeze the Release Tab inwards whilst at the same time sliding the battery holder out with your index fingernail.



CLEANING AND MAINTENANCE

Caution:

- Always switch off and unplug the unit before removing the filters or performing any cleaning.
- Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components.

MAIN BODY

- Use a soft duster or a rag to dust off all the surfaces.
- Clean the Air Inlet and Air Outlet using a vacuum cleaner regularly.
- Wipe all the parts with a soft damp (not wet) cloth dipped in mild soapy water. Caution: Ensure that water doesn't get inside the unit.
- Use a dry cloth to thoroughly dry the unit before turning on.

AIR INLET COVER AND INNER FILTER

- Use a screwdriver to unscrew the two cover screws.
- Remove the Air Inlet Cover and wipe clean, or clean using a vacuum cleaner.
- Use a duster to gently dust off the Inner Filter.
- Replace the Inner Filter and Air Inlet Cover and tighten the screws to fix it in position.

WATER TANK

Warning: Unplug the unit from the mains supply before removing the water tank (see pages 5 and 6 for instructions).

- When the unit or the Cool function will not be used for some time, empty the water from the water tank.
- Use mild soap and water to clean the Water Tank.
- Allow it to air dry or wipe dry using a soft cloth. Make sure the Water Tank is completely dry before replacing. This helps prevent any mould or mildew inside the Water Tank
- Empty the water and dry out the ice blocks before storage.

Make sure the Air Inlet Cover and Water Tank are replaced in position before switching on again.

TECHNICAL SPECIFICATIONS

Rated Voltage: 100-120V~60Hz

Rated Power: 65W

Note: As a result of continual improvements, the design and specifications of the product within may differ slightly from the unit illustrated on the packaging.

STORAGE AND DISPOSAL

If you do not plan to use the product for extended periods of time, it is recommended that it is cleaned and stored (preferably in its original packaging) in a cool, dry place.



Do not dispose of electrical products with household waste. Please check with your local council for advice on disposal or recycling. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain,

damaging your health and well-being.

Do not put your used batteries in with your household rubbish. Take them to an appropriate disposal/collection site.

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be guite encouraging if you could kindly do so like below:

★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE. GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

