

## Cord Installation and Use Instructions



**1.** At eyelet tab, flex open one side wall and insert a cord end through the hole in the divider.

**2.** Flex open the

opposite side wall

and pull the cord

end all the way

through and out



**5.** To use ... plug cord into outlet, lay Cordpro on the ground and pull end of cord to needed appliance or tool. Cordpro will unreel just the right length of cord as it slides with you!

## AVOID OVERHEATING

All cords generate heat when used. Know cord and appliance ratings before use.



New cords are labeled for maximum rated power.

Electrical appliances are labeled for rated power consumption.

 
CAUTION: DO NOT USE CORD ABOVE RATED CAPACITY

CORD	CORD	CORD	CORD
LENGTH	GAUGE	FULLY	ON
125 volts	& TYPE	EXTENDED	REEL
100' / 30 m	16 / 3	9 AMP.	4.5 AMP.
50' / 15 m	12 / 3	17 AMP.	8.5 AMP.

DO NOT EXCEED 1/2 CORD RATING IF USED COILED.

Made in USA







**4.** Grip Cordpro in center opening and wrap cord ends together initially and then separately (if desired) in the exact **SAME** direction. Each half of the cord will slide into its own compartment.

FOR USE WITH CORDS, wind cord halves in the <u>SAME direction</u>. (Both halves will unwind at the same time.)

FOR USE WITH HOSES, wind each half in <u>OPPOSITE directions</u>. (Both halves will then only unreel from one side at a time.) This prevents kinking of the hose.