



# Use and Care Guide


Texas Flag Canopy  
10 ft. x 10 ft.

Model # HD-TX100

## Setting Up the Canopy

### 1 OPENING THE CANOPY FRAME

- With two persons on the diagonal ends, lift and partially pull the canopy frame apart.

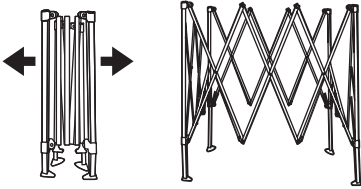


### 2 ATTACHING THE LARGE CANOPY

- Unfold the canopy and place on top of the canopy frame.
- Secure the canopy top to the corners of the canopy frame using the Velcro connections.




### 3 LOCKING THE CANOPY

- Under the canopy, place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole.
- Finish attaching the large canopy inside the canopy frame using the Velcro loops.

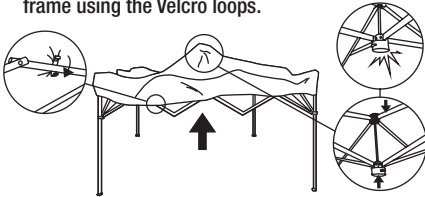


### 4 ADJUSTING THE CANOPY HEIGHT

- Press the red button on each leg and raise or lower to adjust the canopy height.

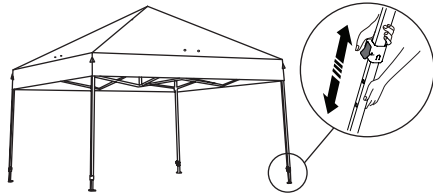

### 5 SECURING THE CANOPY IN PLACE


- Insert a stake into the foot of each canopy leg.
- Measure out each leg to a proper distance and secure four stakes to the ground. Attach the ropes to the canopy top and tie the attached ropes to the stakes in the ground. Ensure the ropes have the proper tension by adjusting the plastic adjusters on the ropes.

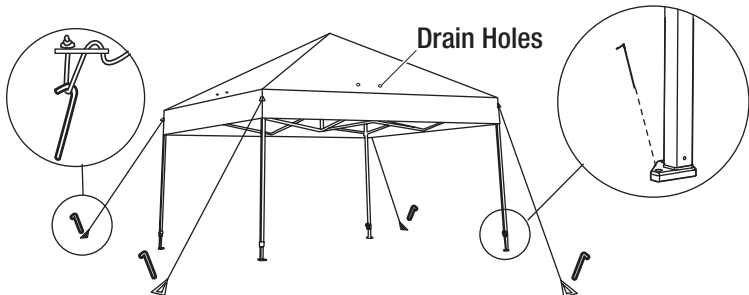

## Taking Down the Canopy


### 1 REMOVING THE STAKES AND RETRACTING THE LEGS

- Pull up all stakes from the ground.
- Press the push button on each leg and retract the legs to their original height.

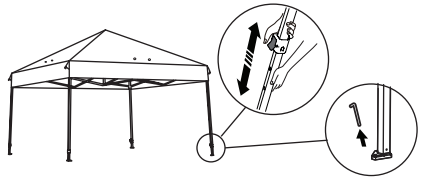


### 2 UNLOCKING THE CANOPY

- Go under the canopy, press the red lock button. Pull down the central hub until it is separated from the central pole.

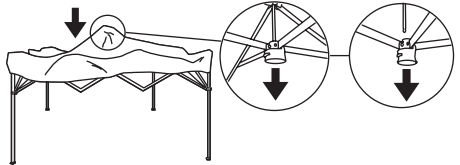


### 3 FOLDING THE FRAME

- Lift one leg of the frame until the two neighbouring legs are raised off the ground. Push inward until the frame is fully closed.

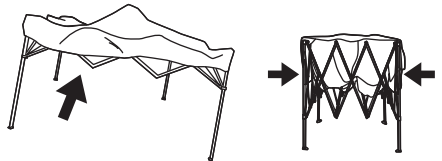

### 4 PACKING THE CANOPY IN THE STORAGE BAG

- With the canopy feet facing the rollers, slide the wheeled storage bag over the closed canopy frame.
- Close the zipper on the wheeled storage bag.

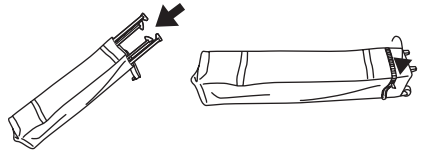

## Safety Information

Please read and save these instructions before attempting to set up this tent.



**WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**  
This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. This canopy is not fire proof. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



**CAUTION:** Take care not to pinch your fingers in the frame during set up and take down.



**CAUTION:** Never leave the tent unattended.



**CAUTION:** Never set up or continue to use in any rain, wind, or storm conditions, especially lightning storms. Damage can occur to the tent and put you and others in potential danger.



**CAUTION:** Avoid setting up the tent on steep inclines.





**CAUTION:** Do not use this tent for permanent shelter. It is designed for temporary use only.

**Scan QR code for more information.  
Visit [www.homedepot.com](http://www.homedepot.com) for more  
information.**



# Spare Parts

To inquire about replacement parts, please call toll free 1-888-502-9589, Monday - Friday, 9:00 AM - 4:00 PM PST; or email to [care@OutdoorDesignz.com](mailto:care@OutdoorDesignz.com)

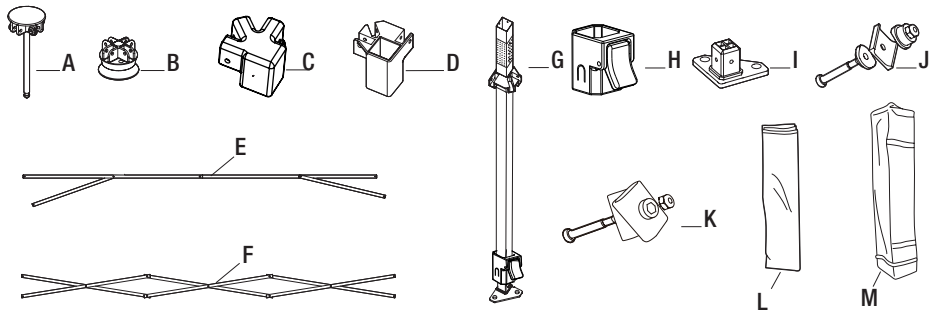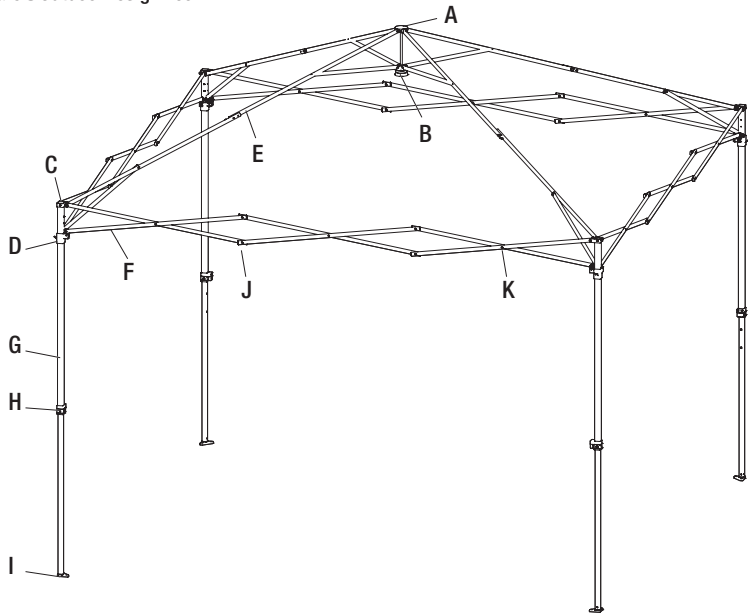

Part	Description	Reference No.	Part	Description	Reference NO.
A	Central Pole	SP221	H	Leg Extend	SP163
B	Central Bottom Hub	SP002	I	Plastic Foot	SP010
C	Top cap	SP289	J	M5 Bolt Kit	SP011
D	Slider	SP281	K	M4 Bolt Kit	SP228
E	Ceiling Assembly	SP006	L	Canopy Top	SP263
F	Eave Assembly	SP007	M	Wheeled Storage Bag	SP264
G	Leg Assembly	SP282	N		